



**HDMI**<sup>®</sup>  
HIGH DEFINITION MULTIMEDIA INTERFACE

## UPUTSTVO ZA UPOTREBU

# LED TELEVIZORI

Model: 43DLE668

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.



Android™ OS

EN

SR

# CONTENTS

---

## SAFETY INSTRUCTIONS

---

----- 2 - 4

## DESCRIPTION OF CONTROL KEYS & CONNECTORS

---

----- 5 - 6

## OPERATION OF REMOTE CONTROL

---

----- 7 - 8

## OPERATION OF FUNCTION MEN

---

----- 9 - 18

## TROUBLE SHOOTING GUIDE

---

----- 19

## SPECIFICATIONS

---

----- 20



# SAFETY INSTRUCTIONS

## IMPORTANT SAFETY INSTRUCTIONS

### WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

### CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

### CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

### IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



#### Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



# SAFETY INSTRUCTIONS

 
---

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.




5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects did not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
  - The power-supply cord or the plug has been damaged.
  - Objects have fallen on or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.  
No naked flame sources, such as lighted candles, should be placed on the apparatus.  
The apparatus shall be connected to mains socket outlet with a protective earthing connection.  
The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.
20. The equipment may be used in tropical and moderate climates.

# SAFETY INSTRUCTIONS



## Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




## Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



## Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

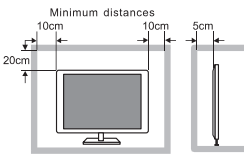

## Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

 
Heat built up can reduce the service life of your television, and can also be dangerous.



## Caution

Never stand on, lean on, push suddenly the product or its stand.


You should pay special attention to children.

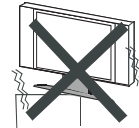

## Caution


Do not place the main unit on an unstable cart stand, shelf or table.

 Serious injury to an individual, and damage to the television, may result should it fall.



## Caution

 When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

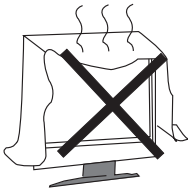

## Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.















 



## Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force. Individuals should execute caution when dealing with broken glass should the panel break.



# DESCRIPTION OF CONTROL KEYS & CONNECTORS

## CONTROL KEYS:

BUTTON NAME	BUTTON ICONTYPE				BUTTON INSTRUCTION
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	To display source menu.
MENU BUTTON	MENU			MENU	To select menu.
VOLUME UP BUTTON	VOL+				To increase the sound volume level
VOLUME DOWN BUTTON	VOL-				To decrease the sound volume level
PROGRAM UP BUTTON	CH+		C/P ▲		To select the next higher programme number.
PROGRAM DOWN BUTTON	CH-		C/P ▼		To select the next lower programme number.
STANDBY BUTTON	POWER			STANDBY	Switch ON/OFF the TV when at standby mode.

### NOTE:

1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.

### NOTE:

If your program on tv will be included by cable televisions, Please check your earning and potential evaluation on the cable of your cable operator. For these information contact your cable operator

# DESCRIPTION OF CONTROL KEYS & CONNECTORS

 
PORT NAME	PORTS ICON TYPE			PORT INSTRUCTION
	1	2	3	
AV IN		VIDEO / Y	AV IN	AV input port
COMPONENT IN		VIDEO / Y	YPbPr	YPbPr signal input port
AV OUT		(mini) AV OUT	/	AV output port
AUDIO OUT	AUDIO OUT	L-EXTERNAL SPX-R	/	AUDIO output port
TERMINAL ANTENNA (75 OHM)	ANT	RF	/	TV signal input port
TERMINAL ANTENNA (75 OHM)		RFS2		Satellite signal input port
VGA		VGA		RGB signal input port
VGA AUDIO IN		VGA AUDIO IN		VGA audio input port
HDMI		HDMI		HDMI signal input port
USB IN		USB		USB input port
EARPHONE OUT				Earphone output port
AUDIO IN		AUDIO IN		AUDIO input port
VIDEO OUT		VIDEO OUT		VIDEO output port
COAXIAL OUT		COAXIAL		Coaxial output port
OPTICAL		OPTICAL		Optical output port
SCART		SCART		SCART signal input port
PCMCIA		PCMCIA		PCMCIA input port
RJ45 IN		RJ45		RJ45 input port
DC IN		DC IN		DC+12V input port
TF IN		TF IN		TF input port

**NOTE:**

1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.

# OPERATION OF REMOTE CONTROL

The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

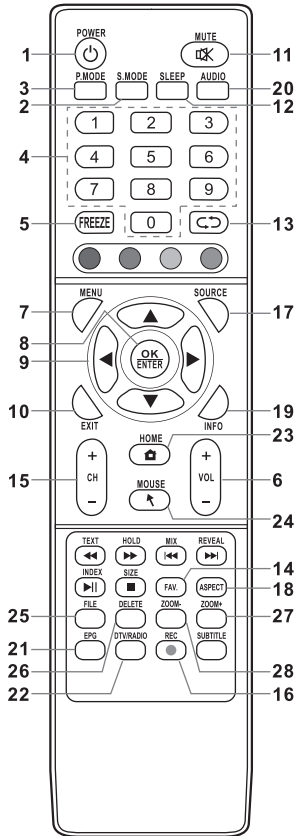

## 1. POWER BUTTON

Switch On/Off the TV when at standby mode.

## 2. S.MODE BUTTON

Sound effect selection.

## 3. P.MODE BUTTON

Picture effect selection.

## 4. NUMBER BUTTONS

Press these buttons to select the TV program you want to enter or input password.

## 5. FREEZE BUTTON

Freeze picture.

## 6. VOL+/VOL- BUTTON

Press two buttons to directly to turn up or turn down the sound volume level.

## 7. MENU BUTTON

Press the button to open the main menu, press again or use Exit to close.

## 8. OK/ENTER BUTTON

Press the button to confirm or enter sub menus.

## 9. UP, DOWN, LEFT, RIGHT ARROW BUTTONS

Press these buttons to select or adjust the desired item on the TV menu.

## 10. EXIT BUTTON

Press the button to exit.

## 11. MUTE BUTTON

Press the button to turn off the volume. Press it again to turn on the volume.

## 12. SLEEP BUTTON

Press the button to set up the TV auto turn off time.

## 13. RETURN BUTTON

Press the button to toggle between the current and the previous program you were viewing.

## 14. FAV. BUTTON

Display favourite of program list.

## 15. CH+/CH- BUTTON

Press two buttons to directly to adjust the TV program.

## 16. REC BUTTON

Hotkey of PVR.

## 17. SOURCE BUTTON

Press the button display Source menu.

## 18. ASPECT BUTTON

Press the button to display and select available aspect modes.

## 19. INFO BUTTON

Display the source and channel information.

## 20. AUDIO BUTTON (Optional)

Selects audio mode.

## 21. EPG BUTTON

Open/Close Electronic program guide.

## 22. DTV/RADIO BUTTON

Switch DTV program and radio program.

## 23. HOME BUTTON

Back to home OSD.

## 24. MOUSE BUTTON

MOUSE On/Off.

## 25. FILE BUTTON

Android OSD operate guide.

## 26. DELETE BUTTON

User for delete the input.

## 27. ZOOM+ BUTTON

Directly to turn up the SMART TV sound volume level.

## 28. ZOOM- BUTTON

Directly to turn down the SMART TV sound volume level

Note: EPG,TV/RADIO, REC are only effective in DTV.



# OPERATION OF REMOTE CONTROL

## TELETEXT FUNCTION (Optional)

### 1) TEXT BUTTON

Press the TEXT button to change the viewing from TV to Teletext if TV stations in your local have teletext broadcasting.

### 2) REVEAL BUTTON

This is a toggle function key to display hidden characters.

### 3) MIX BUTTON

This is a toggle function button to display TV picture and teletext together or teletext only.

### 4) RED/GREEN/YELLOW/BLUE BUTTONS

These 4 Colour keys in teletext mode can quickly enter the pre-captured teletext pages.

### 5) ▲ / ▼ BUTTON

These keys can be used as a page up/down key in teletext mode.

### 6) 0, 1, 2, ..., 9 BUTTON

Using the 0, 1, 2, ..., 9 keys, the required Teletext pages are selected.

### 7) HOLD BUTTON

Some Teletext information is contained on more than one page, the pages automatically changing after a given reading time. Press the HOLD key to stop the page changing. Press the HOLD key again to allow the page to change.

### 8) INDEX BUTTON

Press the INDEX key to view Index page in teletext mode.

### 9) SIZE BUTTON

This key is to expand character size and display half teletext page. Each press will display upper .... tower .... Normal page.

## USB FUNCTION (Optional)

### 1) ◀▶ / ▶▶ BUTTON

Skip a scene or music.

### 2) ◀◀ / ▶▶ BUTTON

Go back to the previous or skip to the next.

### 3) ▶|| BUTTON

Play / Pause.

### 4) ■ BUTTON

Stop playback.

### 5) SUBTITLE BUTTON

In the USB playback movies, open or closed subtitle function (Need streaming support)

### Note:

 
A USB device must already be connected.

## BATTERY INSTALLATION OF REMOTE CONTROL UNIT

1. Open the battery compartment cover.
2. Insert two 'AAA' (pencil size) 1.5V batteries. Make sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Close the battery compartment cover.

### Note:

- Recommend use alkaline type batteries.
- The life time of the batteries may last up to one year, depending on how often the remote control is used. For the best performance, the batteries should be replaced on a yearly basis, or when remote operation becomes erratic.
- Be sure to place the batteries in the correct direction, as shown left.
- Do not mix old and new batteries, or different types.
- Old batteries may leak chemical and damage the remote control. Always remove batteries as soon as they become weak.

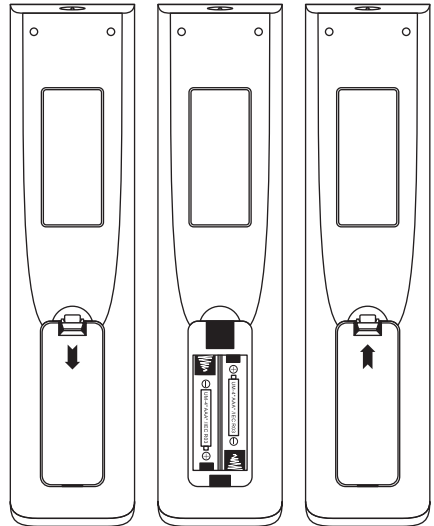

# OPERATION OF FUNCTION MENU

**Note:**The pictures on this manual are only examples and the actual products shall prevail.

## Setup Wizard

Connect an RF cable from the Tv's input called "RF-In" and to your TV Aerial socket. Press OK button to select the Start the setup.

### Welcome to use Internet Smart Cloud TV

For your enjoyment of viewing content, we need to do some simple settings

Start the setup

Press **【▼】 / 【▲】** button to select the language. Press OK button to sure, and press **【▶】** button to select the time zone.

1 / 4 Select the language you are using

English

العربية

Deutsch

Français

**Note:** This picture is for reference only.

Press **【▼】 / 【▲】** button to select the time zone. Press OK button to sure, and press **【▶】** button to connect the WIFI/ network.

2 / 4 Select the time zone you are using

Casablanca (GMT+0:00)

Pago\_Pago (GMT-11:00)

Niue (GMT-11:00)

 
Mirwav (GMT-11:00)

**Note:** This picture is for reference only.

Press OK button to connect the WIFI/ network. Press **【▶】** button to select the input source.

3 / 4 Set your TV network


Wired network is not detected. Please check and insert the network cable or use the wireless network. If you want to set the network later, press the right direction key to skip.



Use a wireless network

# OPERATION OF FUNCTION MENU

 
Press **【▼】 / 【▲】** button to select the input source.

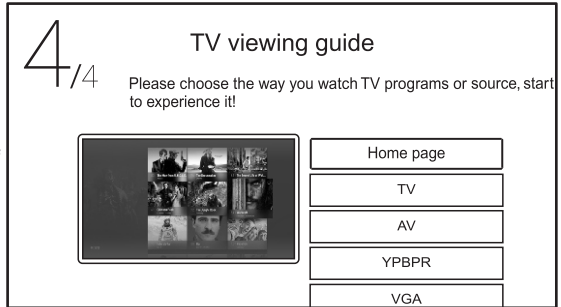

*Note: This picture is for reference only.*


## Home Page

 Press **【▼】 / 【▲】** button to select Home page in Setup Wizard or press **【◀】 / 【▶】** button to select Home in the menu of ATV input.

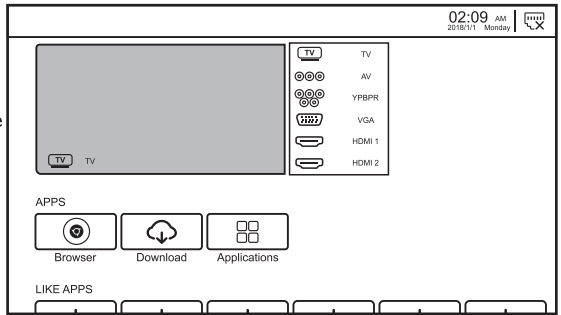


*Note: This picture is for reference only.*

 Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select APPS / LIKE APPS / OTHERS. You can choose the program you want on the home page.

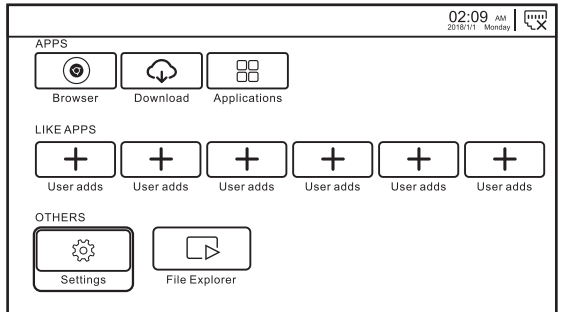

### Applications

 Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select Applications, and press OK button to enter the App List.

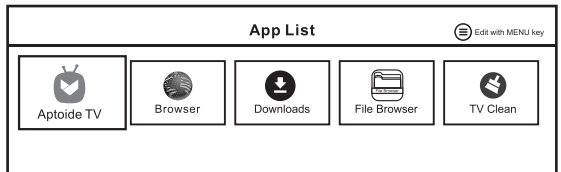


*Note: This picture is for reference only.*

# OPERATION OF FUNCTION MENU
 
## Settings


Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select the Settings, and press OK button to enter the System Setting.

Press **【◀】 / 【▶】** button to select Network Setting / Time Setting / Common / Product Information.

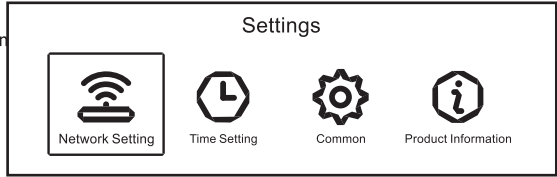


## Network Setting

 Press **【◀】 / 【▶】** button to select Network Setting, press OK button to enter.

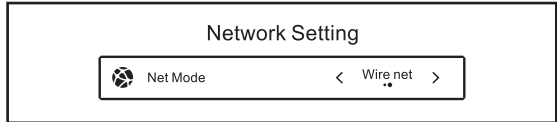

## Time Setting

 
Press **【◀】 / 【▶】** button to select Time Setting, press OK button to enter.

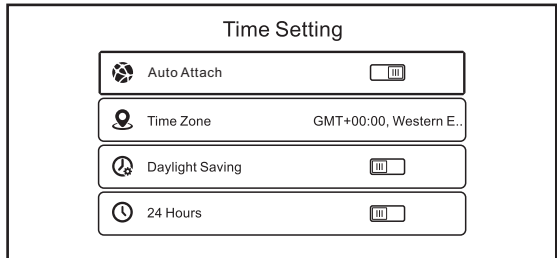

*Note: This picture is for reference only.*

## Common

 Press **【◀】 / 【▶】** button to select Common, press OK button to enter.

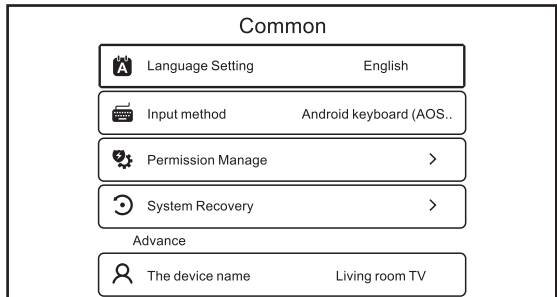


*Note: This picture is for reference only.*

## Product Information

 Press **【◀】 / 【▶】** button to select Product Information, press OK button to enter.

# Media


Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select File Explorer on the Home page, and press OK button to enter the Media Center. Press **【◀】 / 【▶】** button to select Video / Music / Photo / Folder.

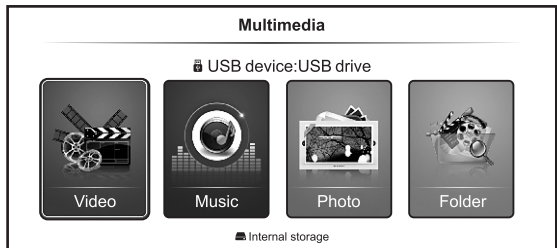

# OPERATION OF FUNCTION MENU

## Video

 Press **【◀】 / 【▶】** button to select Video.

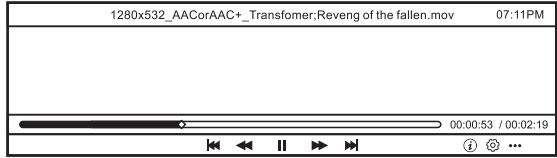

**⏮** Press to play the previous movie.

**⏭** Press to play the next movie.

**⏪** Press to play fast backward.

**⏩** Press to play fast forward.

**⏸** Press to stop/play the movie.


**⋮** Press to select the movie to play.

**ℹ** Press to view the information of the movie. (Resolution / Size / Deration / Bittrate)

**⚙** Press to set the Audio Track / Select Subtitle / Region Language / Play Mode /Aspect Ratio.

## Music

 Press **【◀】 / 【▶】** button to select Music, and press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select Music.

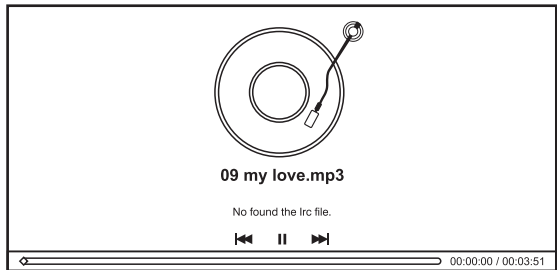

**⏮** Press to play the previous song.

**⏭** Press to play the next song.

**⏸** Press to stop/play the music.


**⋮** Press to select the music to play.

**ℹ** Press to view the information of the music. (Mine Type / Size / Bittrate)

**⚙** Press to set the Play Mode (RepeatAll / Repeat One / Random / None).

## Photo

 Press **【◀】 / 【▶】** button to select Photo.

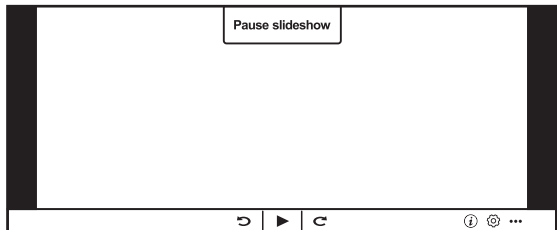

**↺** Press to rotate anticlockwise the picture.

**↻** Press to rotate clockwise the picture.

**▶** Press to stop/play the picture.

**⋮** Press to select the photo to play.

**ℹ** Press to view the information of the picture. (Size / Resolution)

**⚙** Press to set the Play Mode(Aspect Ratio / Playback duration / Play Mode).

# OPERATION OF FUNCTION MENU

## Input Source

Press SOURCE button to to enter Input Source menu.

 
Press **【▼】** / **【▲】** button to select.

Press OK to select source.

## TV Setting


Press MENU button to to enter main menu.

Press **【◀】** / **【▶】** button to highlight the desired menu icon, and press OK button to select. (Optional: Home / Source / Picture / Sound / Channel / Common / Advance).

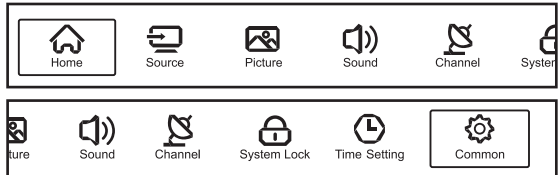

### 1. Picture

 Press MENU button to enter the main menu. Press **【◀】** / **【▶】** button to select the Picture. Press OK button to enter the sub-menu.



Press **【▼】** / **【▲】** button to select Picture Mode / Contrast / Brightness / Color / Sharpness / Backlight / Noise Reduction / Aspect Ratio / Color Temp / More Settings. Press MENU or EXIT button to quit.

### Picture Mode

Press **【▼】** / **【▲】** button to select Picture Mode, then press **【◀】** / **【▶】** button to select. (Optional: Standard, Movie, Vivid, Soft, User).

Standard Produces a standard image.

Movie This mode is more suitable for watching movies.

Vivid Image colors more beautiful, more vivid picture.

Soft Produces a highly defined image in a soft lit room.

User User-defined picture settings.

### Contrast / Brightness / Color / Sharpness / Backlight

Press **【▼】** / **【▲】** button to select, and press **【◀】** / **【▶】** button to adjust.

Contrast Adjust image contrast.

Brightness Adjust image brightness.

Color Adjust image color density.

Sharpness Adjust the image edge sharpness.

Backlight Adjust the screen backlight brightness.

### Noise Reduction

Set up options to eliminate the image noise intensity.

Press **【▼】** / **【▲】** button to select Noise Reduction.

Press **【◀】** / **【▶】** button to select Off / Low / Middle / High / Auto.

### Aspect Ratio

Press **【▼】** / **【▲】** button to select Aspect Ratio. Press **【◀】** / **【▶】** button to adjust.

# OPERATION OF FUNCTION MENU

## ColorTemp

Adjust the overall color of the image.

Press **▼** / **▲** button to select Color Temp.

Press **◀** / **▶** button to select Cool / Normal / Warm.

 
Cool Produces a gentle blue-hued image.

Normal Produces a vivid image.

Warm Produces a red-hued image.

## More Settings

Press **▼** / **▲** button to select More Settings. Press OK button to enter the sub-menu.

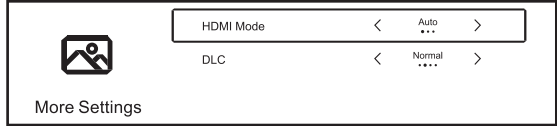

## HDMI Mode (Valid only under HDMI)

Press **▼** / **▲** button to select HDMI Mode.

press **◀** / **▶** button to select Video / Graphic / Auto.

 
## DLC

Press **▼** / **▲** button to select DLC.

Press **◀** / **▶** button to select Dark / Normal / Bright / Off.

## 2.Sound

Press MENU button to enter the main menu. Press **◀** / **▶** button to select the Sound. Press OK button to enter the sub-menu.

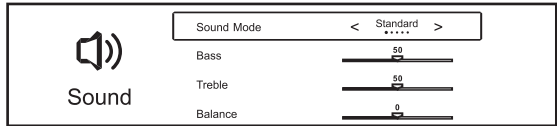

Press **▼** / **▲** button to select Sound Mode / Bass / Treble / Balance / AVC / Audio Description / Hearing Impaired / More Settings. Press MENU or EXIT button to quit.

## Sound Mode

Press **▼** / **▲** button to select Sound Mode.

Press **◀** / **▶** button to select Standard/Music/Theater/News/User.

Standard Emit balanced sound under any circumstances.

Music Enhance the high pitch and reduce the bass.

Theater Enhances treble and bass for a rich sound experience.

News Enhance the voice.

User Select to customize sound settings.

## Bass/Treble/Blance

Press **▼** / **▲** button to select, and press **◀** / **▶** button to adjust.

Bass Adjust the low frequency sounds.

Treble Adjust the high frequency sounds.

Blance Balanced left and right channels.

## AVC

Press **▼** / **▲** button to select AVC. Press **◀** / **▶** button to select On / Off.

**Note:** After open the "AVC", once the volume is set up, it can keep the volume of the speaker steady no matter what kind of difference among the TV sound of each channel.

## Audio Description (Valid only under DTV)

Press **▼** / **▲** button to select Audio Description. Press **◀** / **▶** button to adjust.

 
# OPERATION OF FUNCTION MENU

## Hearing Impaired (Valid only under DTV)

Press **▼** / **▲** button to select Hearing Impaired. Press **◀** / **▶** button to adjust.

## More Settings

Press **▼** / **▲** button to select More Settings. Press OK button to enter the sub-menu.

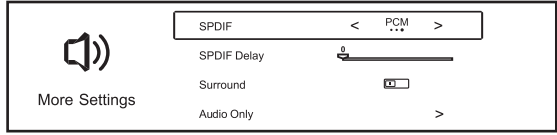

## SPDIF

Press **▼** / **▲** button to select SPDIF.  
Press **◀** / **▶** button to select OFF / PCM / RAW.

## SPDIF Delay

Press **▼** / **▲** button to select SPDIF Delay, then press **◀** / **▶** button to adjust.

## Surround

 
Achieve better surround sound effect.  
Press **▼** / **▲** button to select Surround, then press **◀** / **▶** button to choose ON / OFF.

## Audio Only

Press **▼** / **▲** button to select Audio Only. Press OK button enter the sub-menu.

## 3.Channel

Press MENU button to enter the main menu. Press **◀** / **▶** button to select Channel. Press OK button to enter the sub-menu.

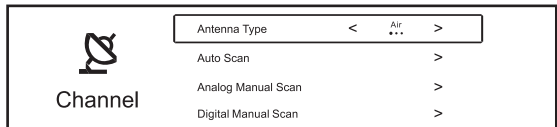

Press **▼** / **▲** button to select Antenna Type / Auto Scan / Analog Manual Scan / Digital Manual Scan / Channel List / EPG. Press MENU or EXIT button to quit.

## Antenna Type

 
Press **▼** / **▲** button to select Antenna Type.  
Press **◀** / **▶** button to select Air / Cable.

## Auto Scan

Automatic search can search for effective program channel automatically.  
Press **▼** / **▲** button to select Auto Scan, then press OK button to start auto search.  
If you want to stop searching, press EXIT or MENU button to stop searching.

## Analog Manual Scan

Press **▼** / **▲** button to select Analog Manual Scan. Press OK button to enter the sub-menu. Press EXIT or MENU button to quit.

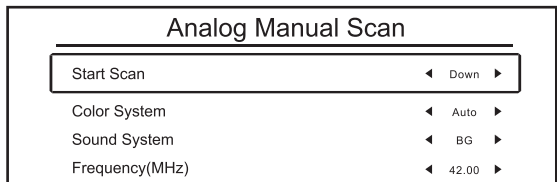

## Digital Manual Scan

Press **▼** / **▲** button to select Digital Manual Scan. Press OK button to enter the sub-menu.  
Press EXIT or MENU button to quit.



# OPERATION OF FUNCTION MENU

## Channel List

Press **【▼】 / 【▲】** button to select Channel List, press OK button to enter the sub-menu.  
Press MENU button edit the channel, press EXIT or MENU button to quit.

## EPG

Press **【▼】 / 【▲】** button to select EPG.  
Press OK button to enter the sub-menu.

 


*Note: This picture is for reference only.*

## Antenna Type - Satellite (Optional)

Press **【▼】 / 【▲】** button to select Antenna Type. Press **【◀】 / 【▶】** button to select Satellite.

**Note:** 'Satellite' is an optional feature, some models do not have this feature, the actual product shall prevail.



## Scan

 
Press **【▼】 / 【▲】** button to select Scan. Press OK button to enter the sub-menu.

## Channel List


Press **【▼】 / 【▲】** button to select Channel List, press OK button to enter the sub-menu.  
Press MENU button edit the channel, press EXIT or MENU button to quit.

## 4.System Lock

Press MENU button to enter the main menu. Press **【◀】 / 【▶】** button to select System Lock. Press OK button to enter the sub-menu.

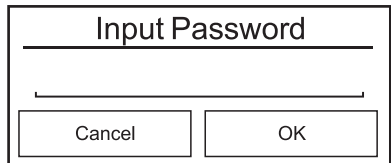


 Press **【▼】 / 【▲】** button to select Change Password / System Lock / Parental Control / Keypad Lock .



## Change Password

 Press **【▼】 / 【▲】** button to select Change Password.  
Press OK button to enter the sub-menu.

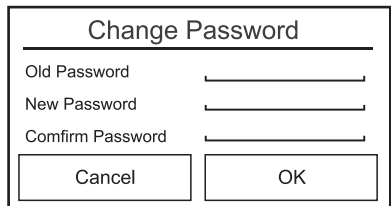

## System Lock

Press **【▼】 / 【▲】** button to select System Lock.  
Press **【◀】 / 【▶】** button to select Off / On.  
When System Lock is set to On, press **【▼】 / 【▲】** button to select Parental Control / Keypad Lock.

# OPERATION OF FUNCTION MENU

## Parental Control

Press **【▼】 / 【▲】** button to select Parental Control. Press **【◀】 / 【▶】** button to adjust.

 
## Keypad Lock

Press **【▼】 / 【▲】** button to select Keypad Lock.

Press **【◀】 / 【▶】** button to select Off / On.

## 5. Time Setting

Press MENU button to enter the main menu. Press **【◀】 / 【▶】** button to select Time Setting. Press OK button to enter the sub-menu.



Press **【▼】 / 【▲】** button to select OSD Timer / Sleep Timer / Autostandby Timer.

### OSD Timer

Press **【▼】 / 【▲】** button to select OSD Timer. Press **【◀】 / 【▶】** button to select. (Optional: Off, 5sec, 15sec, 30sec)

### Sleep Timer

 
Press **【▼】 / 【▲】** button to select Sleep Timer. Press **【◀】 / 【▶】** to select. (Optional: Off, 15min, 30min, 45min, 60min, 90min, 120min, 240min)

### Autostandby Timer

Press **【▼】 / 【▲】** button to select Autostandby Timer. Press **【◀】 / 【▶】** to select. (Optional: Off, 3hour, 4hour, 5hour)

## 6. Common

Press MENU button to enter the main menu. Press **【◀】 / 【▶】** button to select Common. Press OK button to enter the sub-menu.

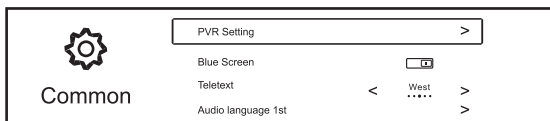

Press **【▼】 / 【▲】** button to select PVR Setting / Blue Screen / Teletext / Audio Language 1st / Audio Language 2nd / Subtitle Language 1st / Subtitle Language 2nd / HDMI CEC / Menu Reset.

### PVR Setting (Valid only under DTV)

Press **【▼】 / 【▲】** button to select PVR Setting. Press OK button to enter the sub-menu.

Note: This function requires a USB flash drive to be inserted.

### Blue Screen

Set the background color to blue when there is no input signal.

Press **【▼】 / 【▲】** button to select Blue Screen.

Press **【◀】 / 【▶】** button to select On / Off.

### Teletext (Valid only under ATV/DTV)

Press **【▼】 / 【▲】** button to select Teletext. Press **【◀】 / 【▶】** to select.

(Optional: Arabic, East, West, Farsi, Russian)

**Note:** The signal that needs to be received supports this feature.

### Audio Language 1st (Valid only under DTV)

Press **【▼】 / 【▲】** button to select Audio Language 1st.

## OPERATION OF FUNCTION MENU

Press OK button to enter the sub-menu.

**Note:** The signal that needs to be received supports this feature.

### Audio Language 2nd (Valid only under DTV)

Press **▼** / **▲** button to select Audio Language 2nd.

Press OK button to enter the sub-menu.

**Note:** The signal that needs to be received supports this feature.

### Subtitle Language 1st (Valid only under DTV)

Press **▼** / **▲** button to select Subtitle Language 1st.

Press OK button to enter the sub-menu.

**Note:** The signal that needs to be received supports this feature.

### Subtitle Language 2nd (Valid only under DTV)

 
Press **▼** / **▲** button to select Subtitle Language 2nd.

Press OK button to enter the sub-menu.

**Note:** The signal that needs to be received supports this feature.

### HDMI CEC

Press **▼** / **▲** button to select HDMI CEC. Press OK button to enter the sub-menu.

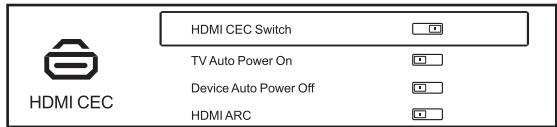

Press **▼** / **▲** button to select HDMI CEC Switch / TV Auto Power On / Device Auto Power Off / HDMI ARC / Device List / Device Menu.

**Note1:** All the Options are available only when the HDMI CEC Switch select On.

**Note2:** The Device List is available only when the the source select HDMI.

### HDMI CEC Switch

Press **▼** / **▲** button to select HDMI CEC Switch, and press **◀** / **▶** button to select On/Off.

The following terms are available only when "On" is selected in CEC.

### TV Auto Power On

Press **▼** / **▲** button to select TV Auto Power On.

Press **◀** / **▶** button to select On / Off.

### Device Auto Power Off

Press **▼** / **▲** button to select Device Power Off.

Press **◀** / **▶** to select On / Off.

### HDMI ARC

Press **▼** / **▲** button to select HDMI ARC. Press **◀** / **▶** to select On / Off.

### Device List

Press **▼** / **▲** button to select Device List. Press OK / **▶** button to enter the sub-menu.

### Device Menu

Press **▼** / **▲** button to select Device Menu.

 
Press OK / **▶** button to enter the sub-menu.

### Menu Reset

Recall the default setting.

Press **▼** / **▲** button to select Menu Reset.

Press OK button to enter the sub-menu.

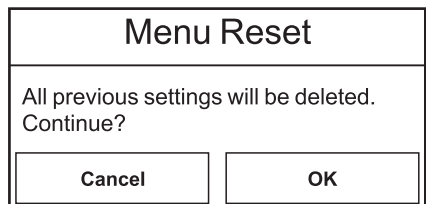

# TROUBLE SHOOTING GUIDE

---

Many apparent malfunctions are caused slight misadjustments of the regular controls of your unit or equally simple causes. If any difficulty arises through normal use of your unit, check the list of common problems in the list below.

**If the problem persists, unplug your unit and contact your dealer.**

<b>SYMPTOM</b>	<b>METHODS OF CHECKING OR ADJUSTING</b>
No picture or sound	Check the AC plug is in the socket. Check house circuit breaker is in the ON position.
Picture normal but no sound	Check that the volume is not at its minimum setting or on MUTE.
Remote control not working	Check that TV set power is ON. Check batteries are operational and inserted correctly. Make sure infrared receiving window on TV is not exposed to strong lighting or blocked in any way.
Cannot receive any TV signal	Ensure SOURCE switch is set to TV. Check aerial location and connection. Re-check your tuning method.
No program signals output from external source	Check SOURCE button to make sure it is in the correct position for reception.
Contrast and brightness problems	Make necessary adjustments to relevant settings.
Intermittent poor contrast and colour fading on all channels	Check aerial positioning
Dotted lines or stripes appear on screen	There may be Interference from another electrical product. Move appliance if it persists.
Snow on screen	Check aerial for broken circuit, loose connection or any visible damage.
Double images or 'ghosting'	Check aerial location and direction - strong winds may cause it to move. Also check whether mountains or tall buildings may be the problem. Minor adjustment of the direction of your antenna should keep the ghosting to a minimum.

**Note:** External rooftop/antenna adjustment should be left to a suitably qualified person.

**Note:**

Do not support all mobile devices the tv function wireless display.  
Please keep your own mobile device support to this function.

## SPECIFICATIONS

Aspect Ratio	16 : 9
System	PAL/SECAM BG/DK/I, DVB-T/C+T2, DVB-S/S2(Optional)
Base impedance	75 $\Omega$ (Unbalance)
Receiving TV Band	All Channels Receiveable
AC Supply Voltage	100-240V~ 50/60Hz

**Note:** Part of the design and the specification may be changed without prior notice.

### INFRA-RED REMOTE CONTROL

**Features:** Full function remote control

**Effective Distance Power:** 8 metres

**Power Supply:** DC 3V (Two batteries, size AAA, recommend use alkaline type batteries)



Manufactured under license from Dolby Laboratories.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.





**HDMI**<sup>®</sup>  
HIGH DEFINITION MULTIMEDIA INTERFACE

# UPUTSTVO ZA UPOTREBU

## LED TELEVIZORI Model: 43DLE668



Android™ OS

EN

SR

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.



**FOX**<sup>®</sup>  
be smart

# FOX LED televizori - stvoreni za uživanje.

Hvala Vam što ste kupili ovaj uređaj.

**FOX LED** televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.



# SADRŽAJ

---

## BEZBEDNOSNE INFORMACIJE

---

----- 2 - 4

## OPIS KONTROLNIH TASTERA I KONEKTORA

---

----- 5 - 6

## DALJINSKI UPRAVLJAČ

---

----- 7 - 8

## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

---

----- 9 - 18

## VODIČ ZA REŠAVANJE PROBLEMA

---

----- 19

## SPECIFIKACIJA

---

----- 20





# BEZBEDNOSNE INFORMACIJE

## VAŽNA BEZBEDONOSNA UPUTSTVA

### UPOZORENJE

KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽNI KABL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIČNICI OSIM ONIH KOJI BI MOGLI DA SPREČE IZAZIVANJE STRUJNOG UDARA. KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEIZLAŽITE OVAJ UREĐAJ VLAZI ILI KIŠI.

 <p>Ovaj simbol munje u jednakostraničnom trouglu upozorava korisnike na prisustvo opasnog i ne izolovanog napona unutar kućišta proizvoda koji može biti dovoljan da stvori rizik STRUJNOG UDARA</p>	<p><b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b></p> <p>Upozorenje: Da biste smanjili rizik od strujnog udara nemojte skidati poklopac (ili zadnju stranu). Unutra nemadelova koje korisnik može sam dazameni. Za obavljanje servisa nzaatražite pomoć kvalifikovanog osoblja</p>	 <p>Znak uzvika unutar jedna-kostraničnog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instruk-cija za rad i održavanje (servisiranje ) uređaja.</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Ovaj aparat ne treba izlagati vodi, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

### OPREZ

Postoji opasnost od eksplozije ako se baterija nepropisno zameni.

Zamenite postojeću sa samo odgovarajućom vrstom baterije.

Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote.

Obezbedite pravilno odlaganje istrošenih baterija.

Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja.

Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koje se pominju u ovom uputstvu

### VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada.

Mnoge povrede, posebno dečije, mogu se izbeći primenom jednostavnih mera opreza kao što su:

Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.

Korišćenje samo onog nameštaja koji može sigurno izdržati uređaj.

Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.

Nemojte postavljati TV-a na visok nameštaj (na primer, ormare ili police) bez predhodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.

Ne pokrivajte televizora krpom i ne stavljajte drugi materijal između televizora i nameštaja na kom stoji.



#### Sigurna instalacija

Koristite pojas za fiksiranje televizora kako bi sprečili uređaj od pada unapred.



## BEZBEDNOSNE INFORMACIJE

 
---

1. **Pročitajte uputstva** – Sve napomene o sigurnosti i načinu rada treba pročitati pre uključivanja aparata.
2. **Sačuvajte uputstva** – Uputstva za sigurnost i uputstvo za upotrebu treba da se sačuvaju za buduće potrebe.
3. **Imajte u vidu Upozorenja** – Treba se pridržavati svih upozorenja na aparatu i svih uputstava za upotrebu.
4. **Pratite uputstva** – Treba pratiti sva uputstva.




5. **Voda i vlažnost** – Aparat ne treba koristiti u blizini vode.
6. **Nosač i postolje** – Aparat treba koristiti samo sa nosačem ili postoljem koje preporučuje proizvođač.
7. **Montaža na zid ili plafon** – Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača.
8. **Ventilacija** – Aparat treba da bude dobro postavljen, tako da lokacija ili pozicija aparata ne ometaju njegovo provetravanje.
9. **Toplota** – Ovaj aparat treba postaviti dalje od izvora toplote kao što su radijatori i peći.
10. **Napajanje** – Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
11. **Uzemljenje ili polarizacija** – Treba preduzeti mere predostrožnosti.
12. **Zaštita kabla za napajanje** – Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, priklještitu stvarima na njemu i njegovom kraju.
13. **Čišćenje** – Aparat bi trebalo čistiti samo po preporuci proizvođača
14. **Napajanje** – spoljne antene treba da se nalazi daleko od dalekovoda.
15. **Uzemljenje** – spoljne antene – Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
16. **Kada ga dugo ne koristite** – napajanje uređaja trebalo bi da bude isključeno uz utičnice kada se ne koristi duži vremenski period.
17. **Upad predmeta i tečnosti** – Treba paziti da predmeti ne upadnu, a tečnost ne prospe u kućište kroz otvore.
18. **Kada je potreban servis** – Aparat treba da servisira kvalifikovano servisno osoblje kada su:
  - Kabl za struju ili utikač oštećeni.
  - Kada predmeti upadnu ili kada se tečnost prolje po uređaju.
  - Kada je aparat izložen kiši
  - Kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
19. Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao što su novine, tkanine, zavese itd.
20. Izvore otvorenog plamena, kao što su upaljene sveće, ne bi trebalo da stoje na aparatu.
21. Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.

# BEZBEDNOSNE INFORMACIJE



## Upozorenje

 Visok napon se koristi u napajanju ovog proizvoda. Ne uklanjajte zadnjipoklopac. Obratite se kvalifikovanoj osobi za obavljanje servisa.




## Upozorenje

Da biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlazi.



## Upozorenje

 Nemojte ispuštati i gurati predmete u kućište TV-a ili u otvore. Nikadanemojte prosipati tečnost na TV prijemnik.

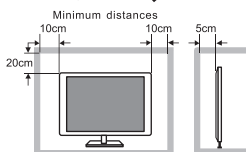


## Oprez

Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati dela uputstva o minimalnim udaljenostima. Toplota može smanjiti životni vek televizora, a takođe može biti povećan rizik od požara.




## Oprez

 Nikada nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak na kom se uređaj nalazi. Treba obratiti posebnu pažnju na decu.

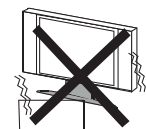


## Oprez

 Ne stavljajte glavnu jedinicu na nestabilno postolje, policu ili sto. Usledpada može doći do ozbiljne povrede lica ili štete na televizoru.



## Oprez

 Kada se proizvod ne koristi duži vremenski period, preporučljivo je dasključite mrežni kabl iz utičnice.

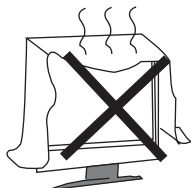

## Oprez

Izbegavajte izlaganje glavne jedinice direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaj, audio pojačala. Ne blokiraj otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova. Ne stavljajte kabl za napajanje ispod glavne jedinice.



## Oprez

Panel (ekran) koji se koristi u ovom proizvodu napravljen je od stakla. Može se slomiti padom uređaja ili nasilnim udarcem. Pojedinci trebaoprezno da rade sa razbijenim staklom ekrana.



# OPIS KONTROLNIH TASTERA I KONEKTORA

## NAZIV TASTERA

NAZIV TASTERA	VRSTA TASTERA				INSTRUKCIJE ZA UPOTREBU
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	PRIKAZIVANJE GLAVNOG MENIJA ZA IZBOR FUNKCIJA TV UREĐAJA (DIGITALNI, ANTENSKI, SMART, OPCIJA, MEDIA - USB, HDMI)
MENU BUTTON	MENU			MENU	PRIKAZIVANJE MENIJA TV UREĐAJA
VOLUME UP BUTTON	VOL+				POJAČAVANJE ZVUKA
VOLUME DOWN BUTTON	VOL-				UTIŠAVANJE ZVUKA
PROGRAM UP BUTTON	CH+		C/P ▲		PREBACIVANJE NA VIŠI KANAL
PROGRAM DOWN BUTTON	CH-		C/P ▼		PREBACIVANJE NA NIŽI KANAL
STANDBY BUTTON	POWER			STANDBY	UKLJUČIVANJE/ISKLJUČIVANJE TV UREĐAJA DOK JE U REŽIMU MIROVANJA

### NAPOMENA

- 1.Kontrolni tasteri su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
- 2.Broj i raspored kontrolnih tastera može biti druga čiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom.

### NAPOMENA

Ukoliko program pratite putem kablovske televizije proverite da li je propisno izvedeno Uzemljenje i izjednačavanje potencijala na kابلu vašeg kablovskog operatera. Za ove Informacije kontaktirajte vašeg kablovskog operatera.

 
# OPIS KONTROLNIH TASTERA I KONEKTORA

NAZIV ULAZA/IZLAZA	VRSTA IKONICE ZA ULAZ/IZLAZ			INSTRUKCIJE ZA UPOTREBU
	1	2	3	
AV IN				AUDIO/VIDEO ULAZ
COMPONENTIN			/	YPBPR ULAZ, ZA POVEZIVANJE EKSTERNIH UREĐAJA ( DVD, PLAYER, KUĆNI BIOSKOP...)
AV OUT			/	AUDIO/VIDEO IZLAZ
AUDIO OUT			/	AUDIO IZLAZ ZA POVEZIVANJE EKSTERNIH ZVUČNIKA
TERMINAL ANTENNA (75OHM), TV SIGNAL INPUT PORT			/	POVEZIVANJE ANTENE ZA ZEMALJSKE KANALE ( KROVNA/SOBNA ANTENA )
TERMINAL ANTENNA (75OHM), SATELIT SIGNAL INPUT PORT				POVEZIVANJE SATELITSKE ANTENE
AUDIO IN				AUDIO ULAZ
VIDEO OUT				VIDEO IZLAZ
COAXIAL OUT				DIGITALNI IZLAZ ZA EKSTERNE ZVUČNIKE
VGA				VGA ULAZ ZA POVEZIVANJE RAČUNARA I TV UREĐAJA
VGA AUDIO IN				VGA ULAZ ZA AUDIO POVEZIVANJE
HDMI				HDMI ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
USB IN				USB ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA I MEMORIJA
EARPHONE OUT				IZLAZ ZA POVEZIVANJE SLUŠALICA
SCART				SCART ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
OPTICAL				OPTIČKI IZLAZ ZA POVEZIVANJE UREĐAJA KOJI KORISTE OPTIČKI KABL
RJ45 IN				ZA POVEZIVANJE TV UREĐAJA NA INTERNET ( LAN MREŽA )
DC IN, OPTIONAL				OPCIONO – ULAZ ZA POVEZIVANJE NA ADAPTER OD 12V
TF IN				ULAZ ZA OČITAVANJE MEMORIJSKE KARTICE
PCMCIA				ULAZ ZA CI ( CI+)

- 1.Svi ulazi / izlazi su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
- 2.Broj ulaza/izlaza može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom

# DALJINSKI UPRAVLJAČ

Prilikom upotrebe daljinskog upravljača, usmerite ga ka prijemniku signala daljinskog upravljača. Predmeti koji se nađu između daljinskog upravljača i prijemnika signala mogu da onemogućće normalno funkcionisanje.

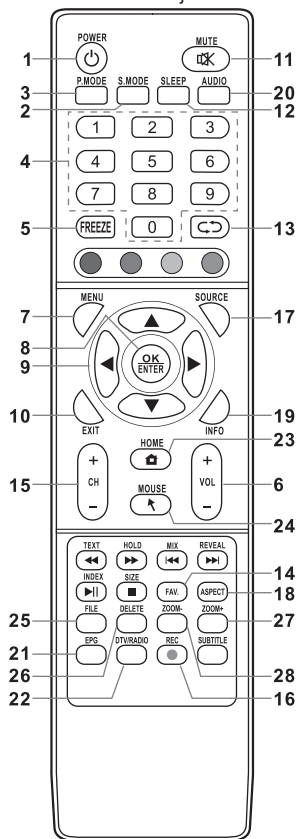

1. **POWER TASTER**  
uključivanje/isključivanje TV uređaja
2. **S.MODE TASTER**  
taster za podešavanje zvučnih efekata
3. **P.MODE TASTER**  
taster za odabir efekata slike
4. **NUMBER (NUMERIČKI) TASTERI**  
direktno biranje kanala ili unošenje lozink
5. **FREEZE (ZAMRZAVANJE) TASTER**  
zamrzavanje trenutnog prikaza na ekranu
6. **VOL+/VOL- TASTER**  
pojačavanje/utišavanje zvuka
7. **MENU (MENI) TASTER**  
ulazak u glavni meni, za izlaz, pritisnite ponovo ili koristite dugme "EXIT"

8. **OK/ENTER TASTER**  
potvrđivanje izbora ili ulazak u podmeni
9. **UP, DOWN, LEFT, RIGHT ARROW (STRELICE GORE, DOLE,LEVO, DESNO)TASTER**  
kretanje kroz meni
10. **EXIT (IZLAZ) TASTER**  
izlaz iz trenutnog menija
11. **MUTE (ISKLJUČIVANJE ZVUKA) TASTER**  
pritisnite za isključenje zvuka. Ponovnim pritiskom vraćate zvuk na predhodnu jačinu
12. **SLEEP (AUTO-ISKLJUČIVANJE) TASTER**  
podešavanje automatskog isključivanja TV uređaja u određeno vreme
13. **RETURN (POVRATAK) TASTER**  
povratak na kanal koji ste predhodno gledali
14. **FAV. (OMILJENO) TASTER**  
prikazivanje omiljene programske liste
15. **CH+/CH- (SLEDEĆI/PREDHODNI PROGRAM) TASTER**  
promena TV kanala
16. **REC (SNIMANJE) TASTER**  
snimanje trenutnog programa (radi samo u DTV režimu rada)
17. **SOURCE (IZVOR SIGNALA) TASTER**  
izbor funkcije TV uređaja (digitalni, antenski, smart opcija, media-USB, HDMI)
18. **ASPECT (FORMAT PRIKAZA) TASTER**  
izbor formata prikaza slike na ekranu
19. **INFO (INFORMACIJA) TASTER**  
prikazivanje informacija o trenutnom statusu signala, kvaliteta slike, programima ...
20. **AUDIO TASTER**  
izbor zvuka sa različitih izvora (ako postoji)
21. **EPG (ELEKTRONSKI PROGRAMSKI VODIČ) TASTER**  
otvaranje/zatvaranje EPG-a (samo u DTV režimu rada)
22. **DTV/RADIO TASTER**  
prelazak sa DTV na radio program i obrnuto
23. **HOME (POČETNI) TASTER**  
povratak na Smart - TV početnu stranu
24. **MOUSE TASTER**  
prebacivanje kontrole na kursor vidljiv na ekranu.
25. **FILE (USB) TASTER**  
direktan ulazak u USB režim rada.
26. **DELETE (BRISANJE) TASTER**  
brisanje u USB režimu rada.
27. **ZOOM + (UVEĆAJ) TASTER**  
uvećanje slike u Smart režimu rada.
28. **ZOOM - (UMANJI) TASTER**  
umanji slike u Smart režimu rada.

## Napomena:

EPG, DTV/RADIO, REC funkcije imaju efekta samo u DTV modu

# DALJINSKI UPRAVLJAČ

## TELETEXT FUNKCIJA (Opciono)

### 1) TEXT TASTER

pritisnite taster za prelazak sa TV slike na Teletext, ukoliko TV stanica podržava isti.

### 2) REVEAL TASTER Za

prikazivanje skrivenih karaktera.

### 3) MIX TASTER

Taster za prikazivanje Teletexta I TV slike zajedno ili samo Teletext slike. Ovaj taster omogućava korisniku da unese 4 digitalne podstrane za trenutnu stranu. Ukoliko sledeće digitalne strane nisu unešene za 5 sekundi, predhodni broj strane će biti ponovo pozvan i prikazan na ekranu.

### 4) RED/GREEN/YELLOW/BLUE TASTER

Ova 4 tastera u Teletext modu služe za brzo prebacivanje (zumiranje, prebacivanje na sledeću stranu...)

### 5) UP/DOWN TASTER

Pomeranje stranice gore/dole u teletext modu

### 6) 0,1,2...9 TASTER

Izbor određene stranice uz pomoć numerisanih tastera.

### 7) HOLD TASTER

Neke teletext informacije se nalaze na više stranica koje se automatski menjaju nakon određenog vremena. Pritisnite taster HOLD da zaustavite promenu strana. Za nastavak promene strane, pritisnite ponovo HOLD

### 8) SIZE TASTER

Taster za povećanje dimenzije karaktera i prikazivanje pola teletext strane. Svaki pritisak će prikazivati više i više do normalne strane

### 9) INDEX TASTER

Pritisnite ovaj taster kako biste videli index stranu u teletext modu. Prikaz teletext vremena.

## USB FUNKCIJA (Opciono)

### 1) ◀▶ TASTER

Premotajte scenu ili muziku

### 2) ◀◀ ▶▶ TASTER

Vraćanje na predhodni ili prelazak na naredni fajl

### 3) ▶|| TASTER

početak / pauza

### 4) ■ TASTER

Zaustavljanje. Pritisnite da potvrdite akciju (Na primer: kopiraj, nalepi itd.) Ponavljanje scene ili muzike u reprodukciji filmova na USB-u.

### 5) SUBTITLE TASTER

Otvora ili zatvara funkciju titla ( titl mora biti preuzet sa interneta i mora biti identičan kao fajl, kao i kompatibilan sa fajlom koji podržava)

 
**Napomena:** USB uređaj već mora biti povezan.

## INSTALACIJA BATERIJA U DALJINSKI UPRAVLJAČ

1. Otvorite poklopac odeljka za baterije
2. Stavite dve AAA baterije ( uske ) od 1.5V. Budite sigurni da se polaritet baterija ( + i - ) podudara sa polaritetom unutar odeljka.

### Napomena:

- Preporučujemo upotrebu alkalnih baterija
- Rok trajanja baterija može biti i duže od jedne godine, u zavisnosti od toga koliko često se daljinski upravljač koristi. Za najbolje performanse, baterij treba menjati bar jednom godišnje ili onda kada počnu da ometaju rad daljinskog upravljača.
- Budite sigurni da su baterije okrenute u dobrom pravcu, kao na slici.
- Nemojte mešati stare i nove baterije ili različite vrste baterija.
- Stare baterije mogu iscuriti i oštetiti daljinski upravljač. Uvek uklonite oslabljene baterije.
- Ne bacajte baterije u vatru, ne punite i ne rasklapajte ih. Naročito nemojte puniti, sklapati i rasklapati, zagrevati ili sagorevati upotrebljene baterije. poštujuće odgovarajuće propise o zaštiti okoline u vezi sa upotrebljenim baterijama.

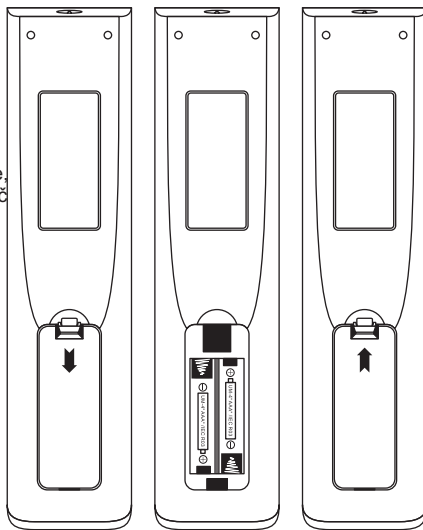



# RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

NAPOMENA: SLIKE NA UPUTSTVU SU SAMO PRIMERI, I MOGU SE RAZLIKOVATI OD PROIZVODA UŽIVO.

## Podešavanje Wizard

Povezati RF kabl od Tv ulaza zvanog "RF-In" do RF utičnice.  
Pritisnite OK dugme kako biste izabrali Start za početak podešavanja.

### Welcome to use Internet Smart Cloud TV

For your enjoyment of viewing content, we need to do some simple settings

Start the setup

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali taster koji želite.  
Pritisnite **OK** taster, a potom pritisnite **【▶】** taster kako biste izabrali vremensku zonu.

1 / 4 Select the language you are using

English

العربية

Deutsch

Français

Slika služi samo za upoređivanje.

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali vremensku zonu.  
Pritisnite **OK** taster,  
zatim odaberite **【▶】** taster kako biste se povezali na WIFI/network

2 / 4 Select the time zone you are using

Casablanca (GMT+0:00)

Pago\_Pago (GMT-11:00)

Niue (GMT-11:00)

 
Mirwav (GMT-11:00)

Slika služi samo za upoređivanje.

Pritisnite **OK** taster kako biste izabrali WIFI/network.  
Pritisnite **【▶】** taster kako biste izvor signala za ulaz.

3 / 4 Set your TV network


Wired network is not detected. Please check and insert the network cable or use the wireless network. If you want to set the network later, press the right direction key to skip.



Use a wireless network

# RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

 
Pritisnite **【▼】 / 【▲】** taster kako biste izabrali izvor signala za ulaz.

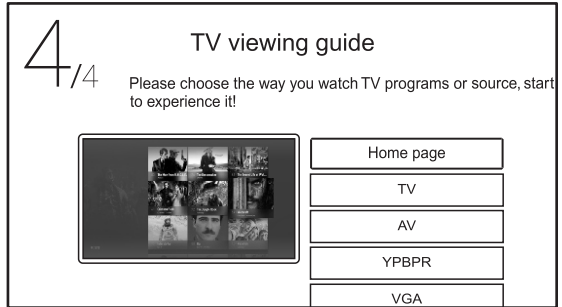

Slika služi samo za upoređivanje.


## Home page

 Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Home page u Setup Wizard ili pritisnite **【◀】 / 【▶】** taster kako biste izabrali Home u meniju za TV ulaz.

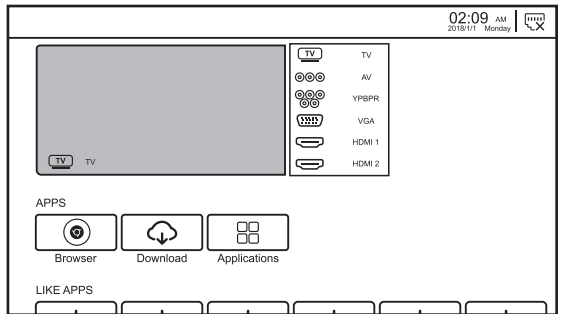


Slika služi samo za upoređivanje.

 Pritisnite **【▼】 / 【▲】 / 【◀】 / 【▶】** taster kako biste izabrali APPS/ FAV APPS/OTHERS. Možete izabrati program koji hoćete na početnoj strani.

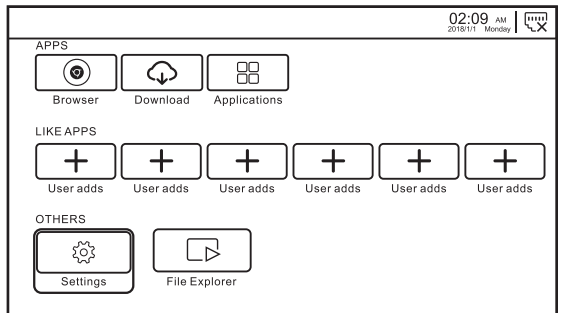

 My Apps  
Pritisnite **【▼】 / 【▲】 / 【◀】 / 【▶】** taster kako biste izabrali My Apps, potom pritisnite **OK** taster kako biste izabrali App List.

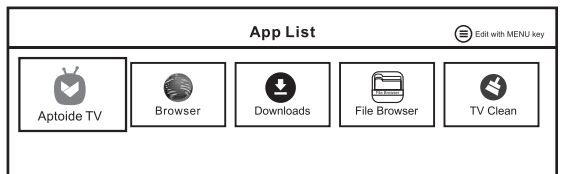


Slika služi samo za upoređivanje.


## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA
 
### Podešavanja

Pritisnite **【▼】 / 【▲】 / 【◀】 / 【▶】** taster kako biste izabrali Settings, zatim pritisnite **OK** taster kako biste ušli u System Setting.

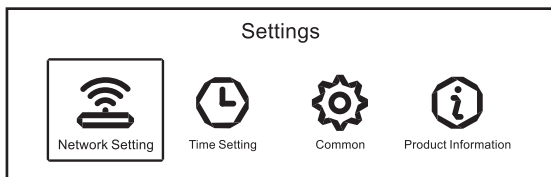


 Pritisnite **【◀】 / 【▶】** taster kako biste izabrali Network Setting/Time Setting/Common/Product Information.

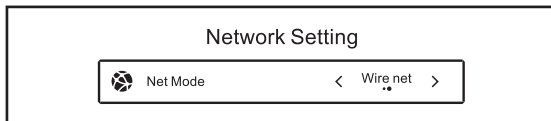

### Mrežna podešavanja

 Pritisnite **【◀】 / 【▶】** taster kako biste izabrali Network Setting, pritisnite **OK** kako biste ušli u meni.

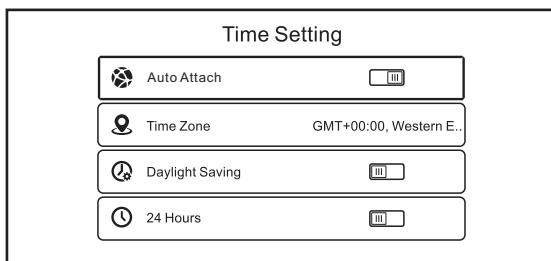


### Podešavanje vremena

Pritisnite **【◀】 / 【▶】** kako biste izabrali Time Setting, pritisnite **OK** kako biste ušli u meni.

Slika služi samo za upoređivanje.

### Common

 Pritisnite **【◀】 / 【▶】** kako biste izabrali Common, zatim **OK** kako biste ušli u meni.

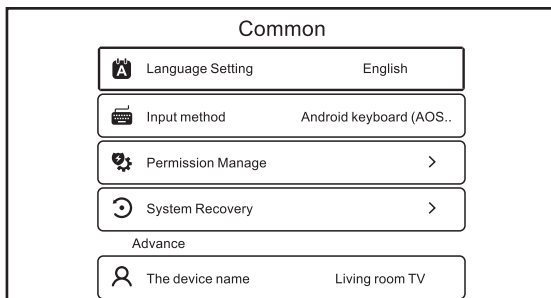

Slika služi samo za upoređivanje.


### Informacije o proizvodu

 Pritisnite **【◀】 / 【▶】** kako biste izabrali Product Information, pritisnite **OK** kako biste ušli u meni.

## Media

Pritisnite **【▼】 / 【▲】 / 【◀】 / 【▶】** kako biste izabrali File Explorer na Home strani, i pritisnite **OK** kako biste ušli u Media Center.


Pritisnite **【◀】 / 【▶】** kako biste ušli Video / Music / Photo / Folder.

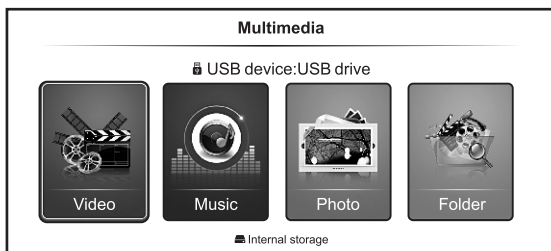


## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

### Video

 Pritisnite [◀] / [▶] kako biste izabrali Video.

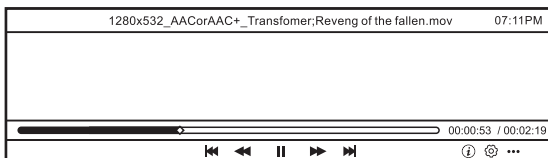

 Pritisnite taster kako bi pustili prethodni film.

 Pritisnite taster kako bi pustili sledeći film.

 Brzo premotavanje unazad.

 Brzo premotavanje unapred

 Pritisnite kako bi pauzirali film.


 Izaberite film koji želite.


 Pritisnite kako biste videli informaciju.(Resolution/Size/Duration/Bitrate)


 Podešavanje Audio Track/Select Subtitle/Region Language/Play Mode/Aspect Ratio.

### Muzika

 
Pritisnite [◀] / [▶] kako biste odabrali Music, zatim [▼] / [▲] / [◀] / [▶] taster kako biste izabrali Music.

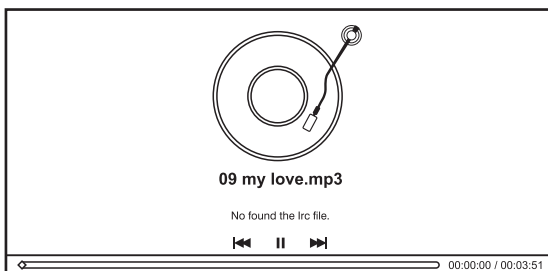


 Izaberite prethodnu pesmu

 Izaberite sledeću pesmu.

 Pusti/stopiraj muziku.


 Izaberite muziku po želji.


 Informacije vezane za muziku.(Mine Type / Size / Bitrate)


 Pritisnite kako biste izabrali Play Mode(Repeat All /Repeat One / Random / None).

### Fotografije

 
Pritisnite [◀] / [▶] taster kako biste izabrali Photo.

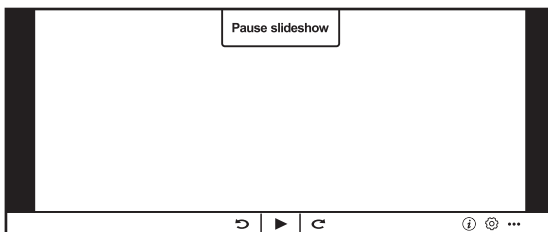

 Pritisnite kako biste rotirali sliku u pravcu suprotnom od kazaljke na satu.

 Pritisnite kako biste rotirali sliku u pravcu kazaljke na satu.

 Pritisnite kako biste zaustavili/pokrenuli sliku.

 Pritisnite kako biste izabrali sliku koju ste želeli da pustite.

 Pritisnite kako biste videli informacije vezane za sliku (Size/Resolution).

 Pritisnite kako biste podesili Play Mode (Aspect Ratio/Playback duration).


## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA
 
### Izvor signala

Pritisnite **SOURCE** taster kako biste izabrali Input Source meni.  
Pritisnite **【▼】 / 【▲】** taster kako biste izabrali.  
Pritisnite **OK** kako biste izabrali izvor.


### TV Podešavanja

Pritisnite **MENU** taster kako biste ušli u glavni meni.  
Pritisnite **【◀】 / 【▶】** kako biste označili potrebnu ikonicu, zatim **OK** taster kako biste izabrali.  
(Opcije: Home/Source/Picture/ Sound / Channel / Common / Advance).

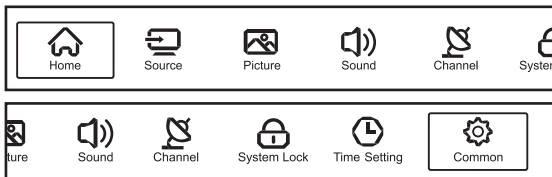

#### 1. Slike

 Pritisnite **MENU** taster kako biste ušli u glavni meni. Pritisnite **【◀】 / 【▶】** taster kako biste izabrali Picture.  
Pritisnite **OK** kako biste izabrali podmeni.



Pritisnite **【▼】 / 【▲】** kako biste izabrali Picture Mode / Contrast / Brightness / Color / Sharpness / Backlight / Noise Reduction / Aspect Ratio / Color Temp / More Settings.  
Pritisnite **MENU** ili **EXIT** da odustanete.

#### Mod za sliku

Pritisnite **【▼】 / 【▲】** kako biste izabrali Picture Mode, zatim **【◀】 / 【▶】** kako biste odabrali.  
**(Opcije: Standard, Movie, Vivid, Soft, User).**

**Standard** Reprodukuj standardne slike.  
**Movie** Ovaj mod je prilagođen za gledanje filmova.  
**Vivid** Slike boja su lepše, slike su živopisnije.  
**Soft** Reprodukuj slike prilagođene prigušenom svetlu.  
**User** Korisnik sam podešava sliku po potrebi.

#### Contrast / Brightness / Color / Sharpness / Backlight

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali, **【◀】 / 【▶】** zatim taster kako biste podesili.  
**Contrast** Podesite kontrast na slici.  
**Brightness** Podesite svetlost na slici.  
**Color** Podesite gustinu slike.  
**Sharpness** Podesite oštrinu slike.  
**Backlight** Podesite pozadinsko svetlo na ekranu.

#### Smanjenje buke

Podešavanje opcije za eliminisanje intenziteta buke.  
Pritisnite **【▼】 / 【▲】** da izaberete Noise Reduction.  
Pritisnite **【◀】 / 【▶】** da izaberete Off / Low / Middle / High / Auto.

#### Veličina displeja

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Aspect Ratio. Pritisnite **【◀】 / 【▶】** taster kako biste podesili veličinu displeja.

 
# RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

## Podešavanje boje

Podesite boju slike po želji. Pritisnite **【▼】 / 【▲】** taster Color Temp.  
Pritisnite **【◀】 / 【▶】** taster kako biste izabrali Cool / Normal / Warm.  
Cool Pravi slike nežno plave boje.  
Normal Pravi živopisne slike.  
Warm Pravi slike crvenkaste boje.

## Dodatna podešavanja

Pritisnite **【▼】 / 【▲】** taster More Settings.  
Pritisnite **OK** kako biste izabrali meni.

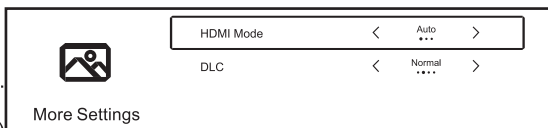

## HDMI Mode (Validan samo za HDMI)

 
Pritisnite **【▼】 / 【▲】** taster kako biste izabrali HDMI Mode.  
Pritisnite **【◀】 / 【▶】** taster kako biste izabrali Video/Graphic/Auto.

## DLC

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali DLC.  
Pritisnite **【◀】 / 【▶】** taster kako biste izabrali Dark/Normal/Bright/Off.

## 2.Zvuk

Pritisnite **MENU** taster kako biste ušli u glavni meni.Pritisnite **【◀】 / 【▶】** kako biste izabrali Sound u glavnom meniju.  
Pritisnite **OK** taster kako biste ušli u sub-meni.

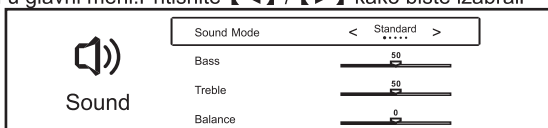

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Sound Mode/Bass/Treble/Balance/AVC /Audio Description/Hearing Impaired/More Settings.  
Pritisnite **MENU** ili **EXIT** taster da odustanete.

## Mod za zvuk

Pritisnite **【▼】 / 【▲】** kako biste izabrali Sound Mode.  
Pritisnite **【◀】 / 【▶】** kako biste izabrali Standard/Music/Theater/News/User.  
Standard Reprodukujе balansirani zvuk u svim uslovima.  
Music Zadržava originalni zvuk pogodan za muzičke programe.  
Theater Pojačava treble i bas za bogato zvučno iskustvo.  
News Pojačan glas za slušanje vesti.  
User Izabereti kako biste sami prilagodili zvuk.

## Bass / Treble / Blance

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali,zatim pritisnite **【◀】 / 【▶】** button to adjust.  
Bass Prilagodite bas.  
Treble Podesite trebl.  
Blance Podesite levi I desni kanal balansa.

## AVC

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali AVC.  
Pritisnite **【◀】 / 【▶】** taster kako biste izabrali On/Off.

**Napomena:** Kada otvorite "AVC", a pritom je zvuk već podešen kada je vreme podešeno i bez obzira na različite TV verzije štampane na svakom kanalu, može da održava jačinu zvučnika stabilnom.

## Audio Description (Validna sam o pod DTV)

Pritisnite **【▼】 / 【▲】** kako biste izabrali Audio Description.Pritisnite **【◀】 / 【▶】** taster kako biste podesili.

 
## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

### Podešavanja za osobe oštećenog sluha (Validna samo pod DTV)

Pritisnite **▼** / **▲** kako biste izabrali Hearing Impaired. Pritisnite **◀** / **▶** taster kako biste izabrali ovu opciju.

#### Dodatna podešavanja

Pritisnite **▼** / **▲** kako biste zabrali More Settings. Pritisnite **OK** taster kako biste izabrali podmeni.

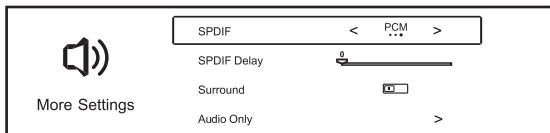

#### SPDIF

Pritisnite **▼** / **▲** taster kako biste izabrali SPDIF. Pritisnite **◀** / **▶** taster kako biste izabrali OFF / PCM / RAW.

#### SPDIF Delay

Pritisnite **▼** / **▲** kako biste izabrali SPDIF Delay, zatim **◀** / **▶** taster kako biste izvršili podešavanja.

#### Surround

 
Postignite bolji efekat zvuka podešavanjem zvučnika. Pritisnite **▼** / **▲** kako biste izabrali Surround, zatim pritisnite **◀** / **▶** taster kako biste izabrali ON/OFF.

#### Zvuk (bez slike)

Pritisnite **▼** / **▲** taster i izaberite Audio Only. Pritisnite **OK** taster kako biste ušli u podmeni.

### 3. Kanali

Pritisnite MENU taster kako biste izabrali glavni meni. Pritisnite **◀** / **▶** taster i odaberite opciju Channel. Pritisnite **OK** taster i uđite u podmeni.

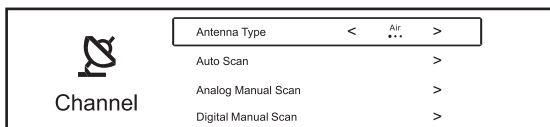

Pritisnite **▼** / **▲** taster kako biste izabrali Antenna Type/Auto Scan/Analog Manual Scan/Digital Manual Scan/Channel List/EPG. Pritisnite **MENU** ili **EXIT** da odustanete.

#### Tip antene-Vazduh/Kabl

 
Pritisnite **▼** / **▲** taster i odaberite AntennaType. Pritisnite **◀** / **▶** button to select Air / Cable.

#### Automatsko pretraživanje

Automatsko pretraživanje bira kanale automatskim putem. Pritisnite **▼** / **▲** taster kako biste izabrali Analog Manual Scan. Pritisnite **OK** taster i izaberite pod-meni. Pritisnite **EXIT** or **MENU** taster kako biste odustali.

#### Digitalno manuelno skeniranje

Pritisnite **▼** / **▲** taster kako biste izabrali Digital Manual Scan. Pritisnite **OK** taster kako biste izabrali podmeni. Pritisnite **EXIT** ili **MENU** taster kako biste izabrali.

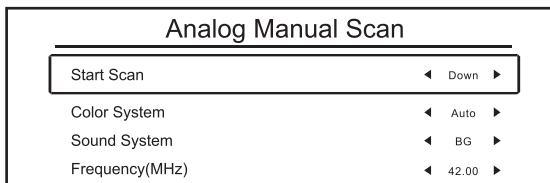

# RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

 
## Lista kanala

Pritisnite **【▼】 / 【▲】** taster I izaberite Channel List, pritisnite **OK** I uđite u podmeni.  
Pritisnite **MENU** kako biste uredili kanale, pritisnite **EXIT** ili **MENU** taster da odustanete.

## EPG

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali EPG.

Pritisnite **OK** taster kako biste ušli u podmeni.

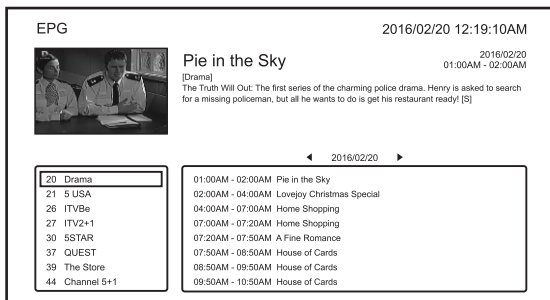


Slika služi samo za upoređivanje.

## Satelitska antena (Opcionalno)

 Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Antenna Type.

Pritisnite **【◀】 / 【▶】** zatim odaberite Satellite.

Napomena: 'Satellite' kao opciju imaju samo određeni modeli uređaja.



## Skeniranje

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Scan.

 
Pritisnite **OK** taster kako biste ušli u podmeni.

## List kanala


Pritisnite **【▼】 / 【▲】** taster kako biste izabrali listu kanala, pritisnite **OK** kako biste ušli u podmeni. Pritisnite **MENU** taster I uredite kanale, pritisnite **EXIT** ili **MENU** da odustanete.

## 4. Sistemsko zaključavanje

Pritisnite **MENU** taster kako biste ušli u glavni meni.  
Pritisnite **【◀】 / 【▶】** kako biste izabrali System Lock.  
Pritisnite **OK** kako biste ušli u podmeni.

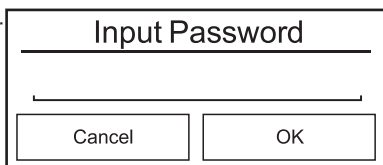


 Pritisnite **【▼】 / 【▲】** taster i izaberite Change Password / System Lock / Parental Control / Keypad Lock.



## Promena lozinke (Change Password)

 Pritisnite **【▼】 / 【▲】** izaberite Change Password.  
Pritisnite **OK** taster pa uđite u podmeni.

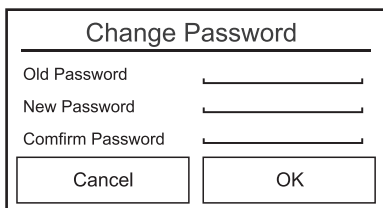

## Sistemsko zaključavanje (System Lock)

Pritisnite **【▼】 / 【▲】** taster I izaberite System Lock.  
Pritisnite **【◀】 / 【▶】** taster I izaberite Off / On.  
Kada je System Lock uključen On, pritisnite **【▼】 / 【▲】** taster I odaberite Parental Control / Keypad Lock.



# RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

## Roditeljska kontrola (Parental Control)

Pritisnite **【▼】 / 【▲】** taster pa izaberite Parental Control. Pritisnite **【◀】 / 【▶】** taster kako biste izvršili podešavanja.

## Zaključavanje tastature (Keypad Lock)

 
Pritisnite **【▼】 / 【▲】** taster pa izaberite Keypad Lock. Pritisnite **【◀】 / 【▶】** taster pa izaberite Off / On.

## 5. Podešavanje vremena

Pritisnite MENU kako biste pristupili glavnom meniju.

Pritisnite **【◀】 / 【▶】** taster pa izaberite Time Setting.

Pritisnite OK kako biste pristupili podmeniju.



Pritisnite **【▼】 / 【▲】** taster i odaberite OSD Timer / Sleep Timer / Autostandby Timer.

### OSD Timer

Pritisnite **【▼】 / 【▲】** taster i odaberite OSD Timer. Pritisnite **【◀】 / 【▶】** pa odaberite opcije: off, 5sec, 15sec, 30sec.

 
### Odbrojanje (Sleep Timer)

Pritisnite **【▼】 / 【▲】** taster i odaberite Sleep Timer. Pritisnite **【◀】 / 【▶】** kako biste izabrali. (Opcije: off, 15min, 30min, 45min, 60min, 90min, 120min, 240min)

### Autostandby Timer

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Autostandby Timer. Pritisnite **【◀】 / 【▶】** zatim izaberite opcije.

(Opcije: off, 3hour, 4hour, 5hour)



## 6. Common

Pritisnite MENU taster kako biste izabrali glavni meni.

Pritisnite **【◀】 / 【▶】** kako biste izabrali Common. Pritisnite **OK** kako biste izabrali podmeni.

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali PVR Setting / Blue Screen / Teletext / Audio Language 1st / Audio Language 2nd / Subtitle Language 1st / Subtitle Language 2nd / HDMI CEC / Menu Reset.

### PVR Setting (Validno samo za DTV)

Pritisnite **【▼】 / 【▲】** kako biste izabrali PVR Setting. Pritisnite OK kako biste izabrali podmeni. Napomena: Ova funkcija zahteva USB flash drive.

### Blue Screen

Podesite plavu boju ekran kada nemate signal.

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Blue Screen.

Pritisnite **【◀】 / 【▶】** kako biste izabrali ON/OFF.

### Teletext (Valid an samo sa ATV/DTV)

Pritisnite **【▼】 / 【▲】** kako biste izabrali Teletext. Pritisnite **【◀】 / 【▶】** i odaberite.

(Optional: Arabic, East, West, Farsi, Russian)

Napomena: signal treba da podržava ovu funkciju.

### Audio Jezik (Language 1st) (Validan samo sa DTV)

Pritisnite **【▼】 / 【▲】** kako biste izabrali Audio Language 1st.

## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Pritisnite **OK** taster da biste pristupili podmeniju.  
Napomena: Signal mora da podržava ovu funkciju.

### Audio Jezik (Language 2nd) (Validan samo sa DTV)

Pritisnite **▼** / **▲** Audio jezik broj 2.  
Pritisnite **OK** taster da biste pristupili podmeniju.  
Napomena: Signal mora da podržava ovu funkciju.

### Titlovi za jezik broj 1 (Validan samo sa DTV)

 
Pritisnite **▼** / **▲** kako biste izabrali titlove za jezik 1.  
Pritisnite **OK** taster da biste pristupili podmeniju.  
Napomena: Signal mora da podržava ovu funkciju.

### Subtitle Language 2nd (Validan samo sa DTV)

Pritisnite **▼** / **▲** kako biste izabrali titlove za jezik 2.  
Pritisnite **OK** taster da biste pristupili podmeniju.  
Napomena: Signal mora da podržava ovu funkciju.

### HDMI CEC

Pritisnite **▼** / **▲** kako biste izabrali HDMI CEC. Pritisnite **OK** taster da biste pristupili podmeniju.

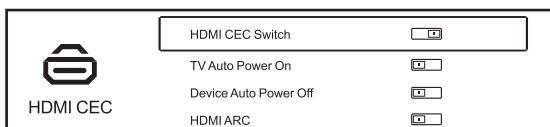

Pritisnite **▼** / **▲** kako biste izabrali HDMI CEC Switch / TV Auto Power On / Device Auto Power Off / HDMI ARC / Device List / Device Menu.

Napomena 1: Sve opcije su jedino dostupne kada je HDMI CEC Switch uključen On.

Napomena 2: Lista uređaja je dostupna samo kada je izvor signala HDMI.

### HDMI CEC Switch

Pritisnite **▼** / **▲** taster kako bih izabrao HDMI CEC Switch, zatim **◀** / **▶** izaberite On/Off. Sve opcije su moguće samo ako je "On" selektirano u CEC.

### TV Auto Power On

Pritisnite **▼** / **▲** taster kako biste izabrali TV Auto Power On.  
Pritisnite **◀** / **▶** kako biste izabrali On / Off.

### Automatsko isključivanje uređaja

Pritisnite **▼** / **▲** taster kako biste izabrali Device Power Off.  
Pritisnite **◀** / **▶** kako biste izabrali On / Off.

### HDMI ARC

Pritisnite **▼** / **▲** kako biste izabrali HDMI ARC. Pritisnite **◀** / **▶** i izaberite On / Off.

### Lista uređaja (Device List)

 
Pritisnite **▼** / **▲** kako biste izabrali Device List.  
Pritisnite **OK** / **▶** kako biste izabrali podmeni.

### Meni uređaja

Pritisnite **▼** / **▲** kako biste izabrali Device Menu.  
Pritisnite **OK** / **▶** kako biste izabrali podmeni.

### Resetovanje menija

Resetovati originalno podešen meni. Pritisnite **▼** / **▲** kako biste izabrali Menu Reset.  
Pritisnite **OK** kako biste izabrali podmeni.

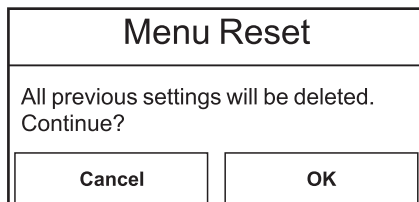

## VODIČ ZA REŠAVANJE PROBLEMA

Mnogi kvarovi su prouzrokovani neodgovarajućim i nepravilnim podešavanjem i uglavnom su jednostavni za otkloniti. Ukoliko imate poteškoća sa rukovanjem, prvo pogledajte sledeću listu uobičajnih grešaka i njihovih rešenja.

SIMPTOMI	METODA PROVERAVANJA I PODEŠAVANJA
Nema slike ili zvuka	Proverite da li je naponski kabl ispravno priključen u utičnicu.
Slika je normalna ali bez zvuka	Proverite da nije slučajno zvuk podešen na nečujno (MUTE). Ukoliko jeste pojačajte zvuk.
Daljinski upravljačne radi.	Proverite da li je TV uključen. Proverite da li su baterije ispravno postavljene. Uverite se da infracrveni odašiljač na daljinskom ili TV-u nije izložen velikoj svetlosti ili da nije blokiran na bilo koji način.
Ne primete nikakav TV signal	Proverite da li je SOURCE prekidač postavljen na TV-u. Proverite i podešavanje za lokaciju i povezanost. Pokušajte da ponovo pretražite kanale i proverite metod pretrage.
Bez signala programa sa spoljašnjeg izvora	Proverite da li je taster SOURCE podešen na ispravnu poziciju za prijem signala.
Problem sa kontrastom i osvetljenjem	Napravite potrebne i željene izmene.
Slab kontrast i blede boje na svim kanalima	Proverite podešavanje za lokaciju prijema signala.
Linije ili tačke po celom ekranu	Drugi električni uređaji mogu da izazovu smetnje. Sklonite ih od televizora.
Sneg na ekranu	Proverite lokacijska podešavanja, kratak spoj, prekinuta konekcija ili bilo koja vidljiva oštećenja.
Dupla slika ili zamagljenost	Proverite podešavanja za lokaciju i uopšte položaj antene ili uređaja. Jak vetar može da izazove takve probleme. visoke zgrade ili planine takođe. Malo podešavanje antene može u mnogo čemu da popravi sliku.

### NAPOMENA:

Spoljna ili krovna antena treba da bude postavljena od strane ovlašćenog osoblja.

### NAPOMENA:

Ne podržavaju svi mobilni uređaji funkciju deljenja prikaza na ekran tv-a.

Molimo vas da proverite da li vaš mobilni uređaj podržava ovu funkciju.

## SPECIFIKACIJA

Proporcija ekrana	16:9
Sistem	PAL/SEC AM BG/DK/I, DVB-T/C+T2, DVB-S/S2(Optional)
Impedansa koaksijalnog kabla	75 $\Omega$
Prijem TV kanala	Ceo opseg kanala
Napajanje, voltaža	100-240V~ 50/60Hz

**Napomena:** Delovi i specifikacije mogu da budu promenjene bez predhodne najave.

### Daljinski upravljač:

Karakteristike: Daljinski upravljač sa svim funkcijama ima radijus rada 8 metara  
Napajanje: DC 3V (dve baterije, veličine AAA, preporuka da koristite alkalne)

 **DOLBY AUDIO™**









Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.  
Za više informacija o FOX uređajima posetite našu internet stranicu:

**[www.foxelectronics.rs](http://www.foxelectronics.rs)**