



LED TELEVIZORI



HDMI[®]
HIGH DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

MODEL:40DLE462

Molimo Vas da detaljno proučite ovo uputstvo pre
upotrebe televizora i da ga čuvate radi kasnije upotrebe

CONTENTS



Safety Instruction.....	2-4
Control Button And Terminal	5-6
Remote Control.....	7-8
Channel	9-10
Picture.....	10
SCREEN.....	11
SOUND.....	11
TIME.....	12
LOCK.....	13
SETUP.....	14
USB.....	15-17
Menu Operation.....	18
Troubleshooting	19
Specifications.....	20



IMPORTANT SAFETY INSTRUCTIONS

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover(or bark). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

**Safe installation**

 
Use the belt fixing the television to facilitate restraining the television from toping forward.



1. **Read Instructions**-All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions**-The safety and operating instructions should be retained for future reference.
3. **Heed Warnings**-All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions**-All operating instructions should be followed.




5. **Water and Moisture**-The appliance should not be used near water.
6. **Cart and Stands**-The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting**-The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation**-The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat**-This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources**-The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization**-Precautions should be taken.
12. **Power Cord Protection**-Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning**-The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Lines**-An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding**-If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods**-The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry**-Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions Requiring Service**-The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.
No naked flame sources, such as lighted candles, should be placed on the apparatus.
The apparatus shall be connected to mains socket outlet with a protective earthing connection.
The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.



Warning

 High voltages are used in the operation of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



Warning

 Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

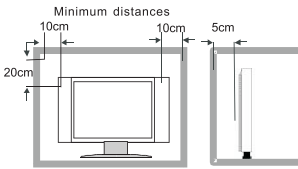


Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained. Heat build up can reduce the service life of your television, and can also be dangerous.




Caution

 Never stand on, lean on, push suddenly the product or its stand. You should pay special attention to children.

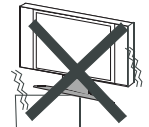


Caution

 Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the television, may result should it fall.



Caution

 When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

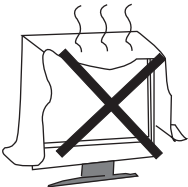

Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



















Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force. Individuals should execute caution when dealing with broken glass should the panel break.



CONTROL KEYS:

BUTTON NAME	BUTTON ICONTYPE				BUTTON INSTRUCTION
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	To display source menu.
MENU BUTTON	MENU			MENU	To select menu.
VOLUME UP BUTTON	VOL+				To increase the sound volume level
VOLUME DOWN BUTTON	VOL-				To decrease the sound volume level
PROGRAM UP BUTTON	CH+		C/P ▲		To select the next higher programme number.
PROGRAM DOWN BUTTON	CH-		C/P ▼		To select the next lower programme number.
STANDBY BUTTON	POWER			STANDBY	Switch ON/OFF the TV when at standby mode.

NOTE:

1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.


CONTROL BUTTON AND TERMINAL

PORT NAME	PORTS ICON TYPE			PORT INSTRUCTION
	1	2	3	
AV IN		VIDEO / Y	AV IN	AV input port
COMPONENT IN		YPbPr	/	Ypbpr signal input port
AV OUT		AV OUT	/	AV output port
AUDIO OUT	AUDIO OUT	L-EXTERNAL SPX-R	/	AUDIO output port
TERMINAL ANTENNA (75 OHM)	ANT	RF	/	TV signal input port
TERMINAL ANTENNA (75 OHM)		RF(S2)		Satellite signal input port.
AUDIO IN		AUDIO IN		AUDIO input port
VIDEO OUT		VIDEO OUT		VIDEO output port
COAXIAL OUT		COAXIAL		Coaxial out port
VGA		VGA		RGB signal input port
VGA AUDIO IN		VGA AUDIO IN		VGA audio input port
HDMI		HDMI		HDMI signal input port
USB IN		USB		USB input port
EARPHONE OUT		Earphone		Earphone output port
SCART		SCART		SCART signal input port
OPTICAL		OPTICAL		Optical output port
RJ45 IN		RJ45		RJ45 input port
DC IN		DC IN		DC+12V input port
TF IN		TF IN		TF input port
PCMCIA		PCMCIA		PCMCIA input port

1. All these terminal connection icons are commonly used for our TV models, and please select designated ports.
2. This connection ports quantity can be different according to models, and please refer to your actual product.

REMOTE CONTROLLER

 The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

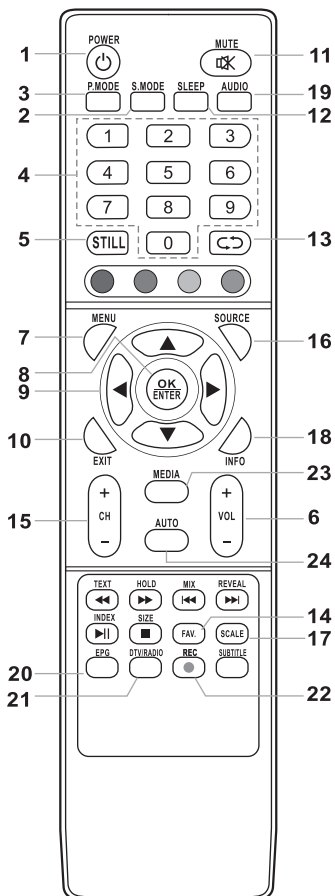

1. POWER BUTTON

Switch On/Off the TV when at standby mode.

2. S.MODE BUTTON

Sound effect selection.

3. P.MODE BUTTON

Picture effect selection.

4. NUMBER BUTTONS

Press these buttons to select the TV program you want to enter or input password.

5. STILL BUTTON

Freeze picture.

6. VOL+/VOL- BUTTON

Press two buttons to directly to turn up or turn down the sound volume level.

7. MENU BUTTON

Press the button to open the main menu, press again or use Exit to close.

8. OK/ENTER BUTTON

Press the button to confirm or enter sub menus.

9. UP, DOWN, LEFT, RIGHT ARROW BUTTONS

Press these buttons to select or adjust the desired item on the TV menu.

10. EXIT BUTTON

Press the button to exit.

11. MUTE BUTTON

Press the button to turn off the volume. Press it again to turn on the volume.

12. SLEEP BUTTON

Press the button to set up the TV auto turn off time.

13. RETURN BUTTON

Press the button to toggle between the current and the previous program you were viewing.

14. FAV. BUTTON

Display favourite of program list.

15. CH+/CH- BUTTON

Press two buttons to directly to adjust the TV program.

16. SOURCE BUTTON

Press the button display Source menu.

17. SCALE BUTTON

Press the button to display and select available aspect modes.

18. INFO BUTTON

Display the Source, and channel etc. information.

19. AUDIO BUTTON (Optional)

Selects audio mode.

20. EPG BUTTON

Open/Close Electronic program guide.

21. DTV/RADIO BUTTON

Switch DTV program and radio program.

22. REC BUTTON

Hotkey of PVR.

23. MEDIA BUTTON

Directly into the USB mode.

24. AUTO BUTTON

In VGA mode, picture position automatic correction.

Note: EPG, DTV/RADIO, REC are only effective in DTV mode.



TELETEXT FUNCTION (Optional)

1) TEXT BUTTON

Press the TEXT button to change the viewing from TV to Teletext if TV stations in your local have teletext broadcasting.

2) REVEAL BUTTON

This is a toggle function key to display hidden characters.

3) MIX BUTTON

This is a toggle function button to display TV picture and teletext together or teletext only.

4) RED/GREEN/YELLOW/BLUE BUTTONS

These 4 Colour keys in teletext mode can quickly enter the pre-captured teletext pages.

5) ▲ / ▼ BUTTON

These keys can be used as a page up/down key in teletext mode.

6) 0, 1, 2, ..., 9 BUTTON

Using the 0, 1, 2, ..., 9 keys, the required Teletext pages are selected.

7) HOLD BUTTON

Some Teletext information is contained on more than one page, the pages automatically changing after a given reading time. Press the HOLD key to stop the page changing. Press the HOLD key again to allow the page to change.

8) SIZE BUTTON

This key is to expand character size and display half teletext page. Each press will display upper ... tower Normal page.

9) INDEX BUTTON

Press the INDEX key to view Index page in teletext mode.

USB FUNCTION

1) ◀ / ▶ BUTTON

Skip a scene or music.

2) ◀◀ / ▶▶ BUTTON

Go back to the previous or skip to the next.

3) ▶|| BUTTON

Play / Pause.

4) ■ BUTTON

Stop playback.

5) SUBTITLE BUTTON

In the USB playback movies, open or closed subtitle function(Need streaming support)

Note:

 
A USB device must already be connected.

BATTERY INSTALLATION OF REMOTE CONTROL UNIT

1. Open the battery compartment cover.
2. Insert two 'AAA' (pencil size) 1.5V batteries. Make sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Close the battery compartment cover.

Note:

- Recommend use alkaline type batteries.
- The life time of the batteries may last up to one year, depending on how often the remote control is used. For the best performance, the batteries should be replaced on a yearly basis, or when remote operation becomes erratic.
- Be sure to place the batteries in the correct direction, as shown left.
- Do not mix old and new batteries, or different types.
- Old batteries may leak chemical and damage the remote control. Always remove batteries as soon as they become weak.

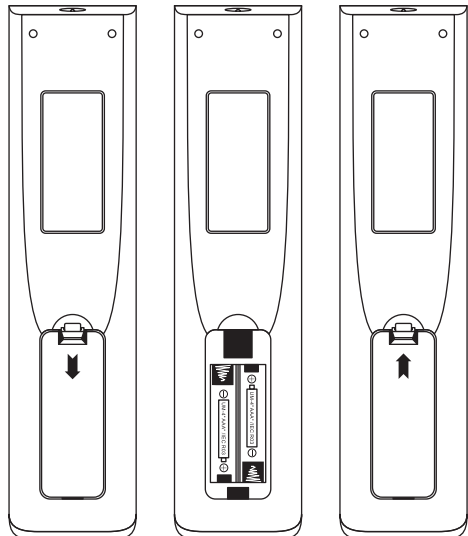


CHANNEL

CHANNEL menu

Press "MENU" and "◀/▶" buttons to select the CHANNEL menu.

Press "▼/▲" button to select the items.

 Press OK button to enter the submenu.

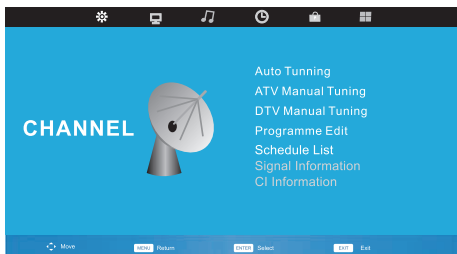

Auto Tuning: Press [▶] or [OK] to start auto tuning of both ATV and DTV channels.

 
ATV Manual Tuning: Press [▶] or [OK] to enter "ATV Manual Tuning" submenu.

Current CH: Press [◀▶] to select the channel number you want to store.

Color System: Press [◀▶] to change the color system as Auto, SECAM, PAL.

Sound System: Press [◀▶] to change the sound system as DK, I, BG, L.

Fine-Tune: Press [◀▶] to scan current program within a frequency range accurately and store the result manually.

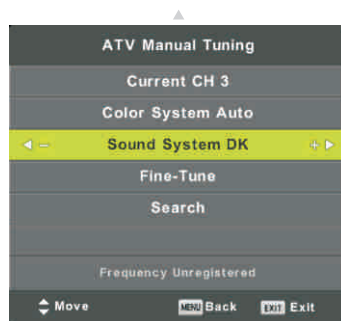

DTV Manual Tuning: Press [▶] or [OK] to enter "DTV Manual Tuning" submenu.

Press [◀▶] to select channel, then press [OK] to search programs.

Note: Only channels with sufficient signal strength will be tuned in: check your antenna if channels are missing after Auto Tuning.



CHANNEL

Programme Edit: Press [▶] or [OK] to enter "Programme Edit" submenu.

This option has five functions:

1. Press Red button to delete the current channel.
2. Press Yellow button and [▲▼] to move the current channel.
3. Press Blue button to skip the current channel.
4. Press [FAV] to set the current channel to your favorite channel, there will be a red heart at the behind of the channel selected. If the current channel is already be one of your favorite channel, press it again will set it to a normal one.

Schedule List

Display Schedule List and Recorded List.

Signal Information:

Display the signal information in DTV mode.

CI Information:

Please contact your "pay per view" provider who can supply a viewing card and cam unit with instructions for their use.

 


PICTURE

PICTURE menu

Press [MENU] to display the main menu.

Press [◀▶] to select "PICTURE" in the main menu, then press [▼] or [OK] to enter.

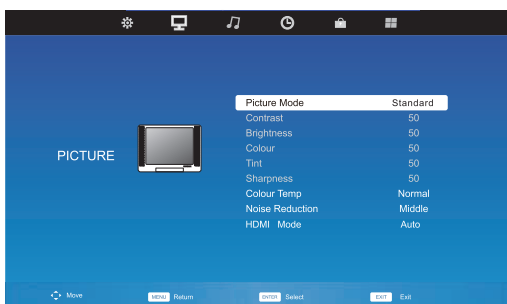

Picture Mode: Press [◀▶] or [OK] to enter "Picture Mode" submenu. Press [▲▼] to change the picture mode in sequence: Dynamic → Standard → Mild → Personal.

You can press [P.MODE] repeatedly on the remote control to change the picture mode directly.

Contrast: Press [◀▶] or [OK] to enter submenu. Press [◀▶] to set the picture's contrast intensity.

Brightness: Press [◀▶] or [OK] to enter submenu. Press [◀▶] to set the picture's brightness.

Colour: Press [◀▶] or [OK] to enter submenu. Press [◀▶] to set the picture's colour intensity.

Tint: Press [◀▶] or [OK] to enter submenu. Press [◀▶] to set the picture's tint. (Available for NTSC video signal only)

Sharpness: Press [◀▶] or [OK] to enter submenu. Press [◀▶] to set the picture's sharpness.

Colour Temp: Press [◀▶] or [OK] to enter "Colour Temp" submenu. Press [▲▼] to change the colour temperature in sequence: Cold → Normal → Warm.

Noise Reduction: Press [◀▶] or [OK] to enter "Noise Reduction" submenu. Press [▲▼] to change the noise reduction in sequence: Off → Low → Middle → High → Default.

SCREEN

Press the "SOURCE" button on the remote control to enter the OSD menu, then press "▲/▼" button to select "SCREEN" item. Press "OK" button to enter "SCREEN" mode.

SCREEN (Only available when connected via SCREEN to a PC)


Automatic adjust the picture of the right size.

Press "▲/▼" button to select "Auto Adjust" or "Position Reset" item.

Press [▶] or [OK] button to Adjust.

Press "▲/▼" button to select "H-Offset", "V-Offset", "Size" or "Phase" of the project.

 Press "◀/▶" button to adjust.

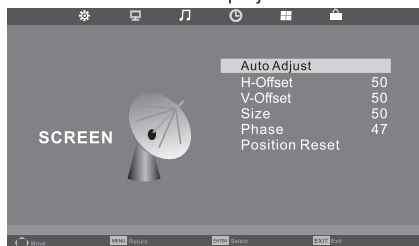


SOUND

SOUND menu

Press [MENU] to display the main menu.

 Press [◀/▶] to select "SOUND" in the main menu, then press [▼] or [OK] to enter.

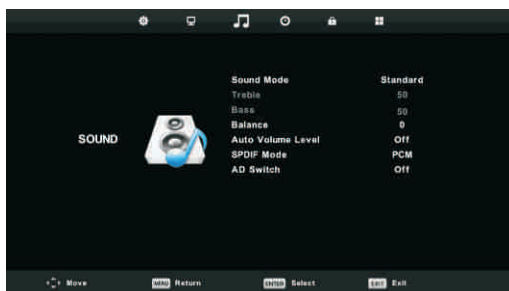

Sound Mode: Press [◀/▶] or [OK] to enter "Sound Mode" submenu. Press [▲/▼] to change the sound mode in sequence: Standard → Music → Movie → Sports → Personal.

You can press [S.MODE] repeatedly Treble: Press [◀/▶] or [OK] to enter submenu. Press [◀/▶] button to adjust.

Balance: Press [◀/▶] or [OK] to enter Bass: Press [◀/▶] or [OK] to enter submenu. Press [◀/▶] button to adjust speaker's balance.

Auto Volume Level: Press [◀/▶] or [OK] to set the automatic volume level to "On" or "Off".

SPDIF Mode: Press [◀/▶] or [OK] to set the SPDIF mode to "Auto", "Off" or "PCM".

 
AD Switch (For DTV only): Press [▶] or [OK] to enter submenu. Press [◀/▶] to select the audio descriptor to "On" or "Off" as well as adjust the volume of the AD.

TIME

TIME menu

Press [MENU] to display the main menu.

Press [◀▶] to select "TIME" in the main menu, then press [▼] or [OK] to enter.

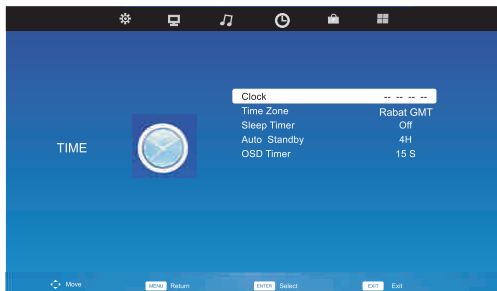

Clock: Use the ◀/▶ buttons to select the position, and use the ▲/▼ buttons to set the time.

Note: User can not change time manually during DTV mode, for time is from signal source directly.

 
Time Zone: Press [OK] to enter submenu. Press [▲▼◀▶] to select items, press [OK] to confirm.

Sleep Timer: Press [▶] or [OK] to enter "Sleep Timer" submenu. Press [▲/▼] to change the sleep timer as Off, 15Min, 30Min, 45Min, 60 Min, 90 Min, 120 Min, 240 Min.

You can press [SLEEP] repeatedly on the remote control to change the sleep timer directly.

Auto Standby: Press [OK] to enter submenu. Press [▲/▼] to select Off, 3 H, 4 H, 5 H, press [OK] to confirm.

OSD Timer: Press [▶] or [OK] to enter submenu. Press [▲/▼] to change the OSD timer as 5 Seconds, 15 Seconds, 30 Seconds.

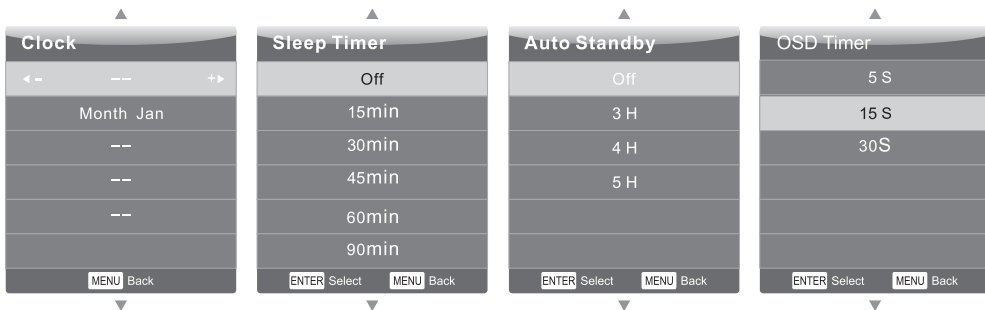


LOCK

LOCK menu


Press [MENU] to display the main menu.

 Press [◀▶] to select "LOCK" in the main menu, then press [▼] or [OK] to enter.

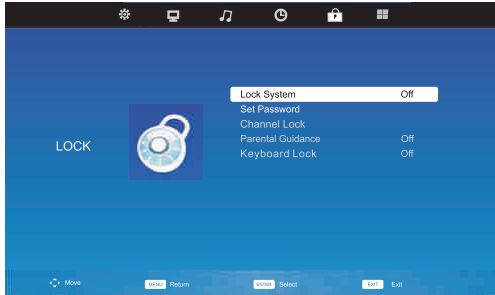


Password: Enter the default password "0000" to go to the LOCK function menu if you have set "Lock System" to "On".

 Lock System: Set the lock system to "On" or "Off" which enables or disables below lock functions.

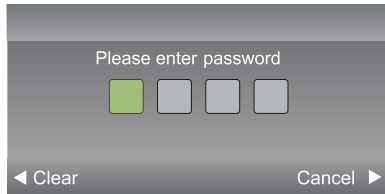

 Set Password: Press [▶] or [OK] to enter submenu to set new password.

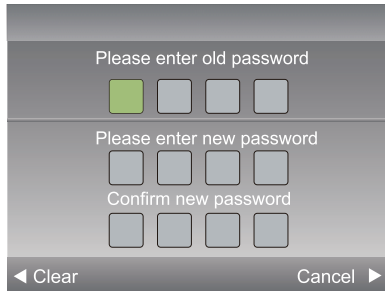

You can change the password by entering the old and a new password and then re-entering it to confirm the new one.

Channel Lock : Press [OK] to display Channel Lock menu.

Parental Guidance: Press [OK] to display submenu, press [▲/▼] to select Off, 3,4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18. Press [OK] to confirm.

Keyboard Lock: Press [OK] to select Off or On.

SETUP

SETUP menu

Press [MENU] to display the main menu.

Press [◀▶] to select "SETUP" in the main menu, then press [▼] or [OK] to enter.



OSD Language

Press OK button to enter and [◀▶], [▼]/[▲] button to select OSD language.

Press "MENU" button to return to the previous menu.

TT Language: Press [OK] to enter submenu, press [▼]/[▲] to select items. Press [OK] to confirm.

Audio Languages / Subtitle Language: Press [OK] to enter submenu, press [◀▶][▼/▲] to select items. Press [OK] to confirm.

Hearing Impaired (For DTV only):

Press [◀▶] or [OK] to set the hearing impaired to "On" or "Off".

PVR File System (For DTV only):

Press [▶] or [OK] to enter the submenu to check the USB connected and provide with the recording function.

Scale: Press [OK] to enter submenu, press [▼]/[▲] to select the aspect ratio mode. Press [OK] to confirm.

Blue Screen

Press OK button to select On or Off.

 
First Time Installation: Press [▶] or [OK] to enter relevant options including OSD Language and Country.

Reset

This will reset all settings to default. Press OK button to start - you will be asked to confirm (see screenshot right).

Press "◀/▶" button to select Yes or No.

Press "MENU" or "EXIT" button to return.



Software Update(USB) : Press [▼]/[▲] to select Software Update item. Press [OK] to confirm.

Note: User only on advice from Customer Support.

USB

 
Press "SOURCE" button to POP-UP the input source menu.

Press "▲/▼" button to select "Media" and press "OK" button to enter the interface, as shown below:



Press "◀/▶" button to select among the "PHOTO", "MUSIC", "MOVIE" and "TEXT" icons.

Press "OK" button to confirm and enter the next menu, as shown below:

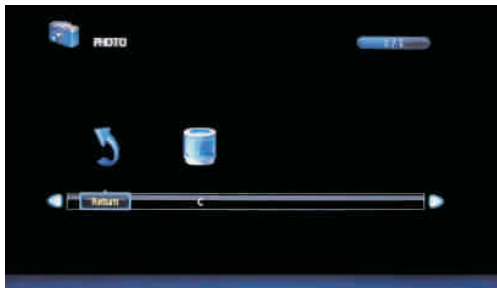

PHOTO

Press OK to select files(indicated with a checkmark) for selective playback(see 6 below).

1.Press "◀/▶" button to select "PHOTO".

2.Press "OK" button to enter the disk selection menu.

 
 
3.Press "◀/▶" button to select disk to enter the submenu.

Select ↻ item to return to the previous menu.

4.Press "▲▼◀▶" button to select the image file you want to play. Press OK to select files (indicated with a checkmark) for selective playback Press red button, you will enter the submenu to delete the file.

5.Press "PLAY" button to play photo slideshow (of checkmarked files;

if no files are ticked, all pictures will play), press "OK" button to display menu.

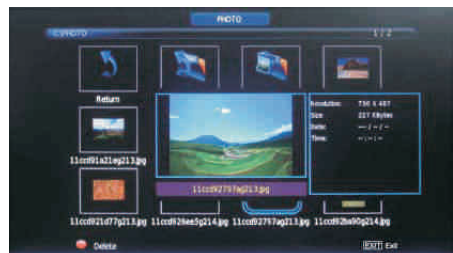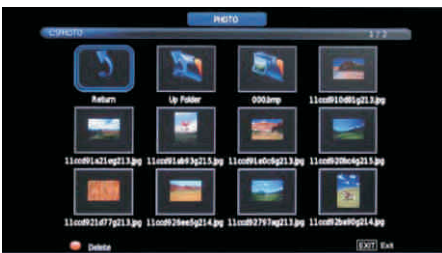

USB

Pause

Press "PAUSE" button to pause the slideshow.

Play

Press "PLAY" button to play the selected photo.

Stop

Press "STOP" button to stop and return.

Next/Prev.

Press "NEXT" or "PREV." button to skip to view the photo which are selected the photo.

Exit

Press "EXIT" button to exit.



 
 
MUSIC

1. Press "◀/▶" button to select "MUSIC."

2. Enter the music interface, press "▲▼◀▶" button to preview the music, as shown below:



3. Press "PLAY" button into music player and playing the selected music, as shown below:

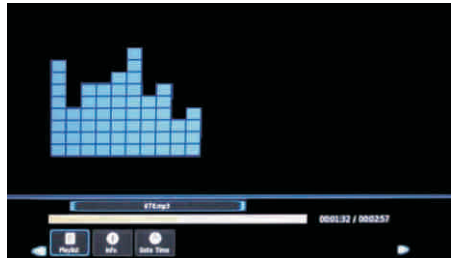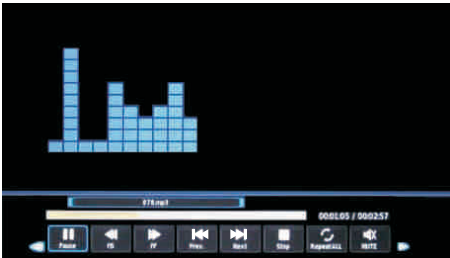

PAUSE

Select "PAUSE" to pause the playing music.

PLAY

Select "PLAY" to play the music.

FB

Select "FB" to fast reverse among 2X, 4X, 8X and 16X modes.

FF

Select "FF" to fast forward among 2X, 4X, 8X and 16X modes.

PREV.

Select "PREV." to skip to previous track.

NEXT

Select "NEXT" to skip to next track.

STOP

Select "STOP" to stop and return.

RepeatALL

Select "Repeat" to repeat play music (Repeat 1, Repeat All, Repeat None).

MUTE

Select "MUTE" to turn off the sound.

USB

- Playlist** Select "Playlist" to display play list.
- Info.** Select "Info" to display the music information.
- Goto Time** Select "Goto Time" to setup play time.

MOVIE

1. Press "◀/▶" button to select "MOVIE"
2. Enter the movie interface, Press "▲▼◀▶" button to preview the files, as shown below.:



3. Press "PLAY" button to play the movie. Press OK button to display menu.
Press the "PLAY" button once more to play the movie full-screen.
Press the "PAUSE" button to pause the playing movie.
Press "PREV." or "NEXT" button to skip the backward or forward. Press "FB" OR "FF" button to fast reverse or fast forward, press "STOP" or "EXIT" button to return.

TEXT

1. Press "◀/▶" button to select "TEXT" (to view text documents stored on USB).
2. Enter the text interface, Press "▲▼◀▶" button to preview the files, as shown below.:



3. Press "PLAY" button to open and play the file, press OK button to display menu. as shown below.:
- Select "Prev Page" to view a next page.
 - Select "Next Page" to view a previous page.
 - Select "STOP" to return.
 - Select "Music" to listen to music while reading.










1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.



MENU OPERATION

MULTIMEDIA

Key function list

	Stop Playback
	direction key (record program detailed information)
INFO 	show details
	Play
	Pause
	fast reverse
	fast forward
	Previous
	Next
RED	Delete
OK	Confirm
EXIT	Exit
SUBTITLE	When playing the movies, turn on or off the SUBTITLE function need the support of the movies' source.

Note: Please use high-speed mobile disk

The following are the function interfaces of the PHOTO, MUSIC, MOVIE and TEXT. About their functions described please refer to the Key function list in page 19.

PHOTO



MUSIC



MOVIE




TEXT



NOTE: In the USB playback multimedia, according to the "INFO" rid device info popup menu button above.

TROUBLE SHOOTING GUIDE

Before contrast the service technician, perform the following simple checks. If any problem still persists, unplug the LCD TV and calling for serving .

Problem	Possible Solution
No sound or picture	<ul style="list-style-type: none"> ● Check that the main plug has been connected to a wall let. ● Check that you have pressed the  button on the front of the TV. ● Check the picture contrast and brightness settings. ● Check the volume.
Normal picture but no sound	<ul style="list-style-type: none"> ● Check the volume. ● Check whether the MUTE button was pressed on the remote control.
Sound is too low	<ul style="list-style-type: none"> ● Check the volume. ● If the volume is still too low after setting the volume level to its maximum, check the volume control on computer sound card or software program.
No picture or black and white picture	<ul style="list-style-type: none"> ● Adjust the colour settings . ● Check whether the broadcast system selected is correct.
“Unknown” message	<ul style="list-style-type: none"> ● Make sure that the power cord is firmly connected to the PC or the video sources. ● Make sure that the PC or video sources are switched on.
Sound and picture interference	<ul style="list-style-type: none"> ● Try to identify the electrical appliance that is affecting the set and move it further away.
Blurred or snowy picture, distorted sound	<ul style="list-style-type: none"> ● Check the direction, location and connections of your aerial.
Remote control does not work	<ul style="list-style-type: none"> ● The battery in the remote control may be exhausted. ● The battery may be improperly installed. ● Check that there is no obstacle between the remote control and the remote (infrared) sensor. ● Ensure that there is no strong light shining on the remote control's infrared sensor.
The LCD TV does not turn on	<ul style="list-style-type: none"> ● Be sure the power cord is plugged on.
The image is too light or too dark	<ul style="list-style-type: none"> ● Adjust the brightness and Contrast.
On PC mode, horizontal bars appear to flicker, jitter or shimmer on the image	<ul style="list-style-type: none"> ● Adjust the Phase.
On PC mode, vertical bars appear to flicker, jitter or shimmer on the image	<ul style="list-style-type: none"> ● Adjust the Clock.
On PC mode, image is not stable and may appear to vibrate	<ul style="list-style-type: none"> ● Check the display resolution and frequency from your PC or video board is a valid mode for your LED TV. Control Panel→ Display→ Settings. ● If the setting is not correct, use your computer utility program to change the display settings. Your monitor supports multi display function within the following frequency domain:
On PC mode, image is not centred on the screen.	<ul style="list-style-type: none"> ● Adjust the horizontal and vertical position.

SPECIFICATIONS

Aspect Ratio	16 : 9
System	PAL/SECAM BG/DK/I, DVB-T/T2+C , NTSC Playback
Base impedance	75 Ω (Unbalance)
Receiving TV Band	All Channels Receiveable
AC Supply Voltage	100-240V~ 50/60Hz

Note: Part of the design and the specification may be changed without prior notice.

INFRA-RED REMOTE CONTROL

Features: Full function remote control

Effective Distance Power: 8 metres

Power Supply: DC 3V (Two batteries, size AAA, recommend use alkaline type batteries)



Manufactured under license from Dolby laboratories.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby laboratories.



LED TELEVIZORI



HDMI[®]
HIGH DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

Molimo Vas da detaljno proučite ovo uputstvo pre upotrebe televizora i da ga čuvate radi kasnije upotrebe

SADRŽAJ

Bezbedosna uputstva	2-4
Контрболни тастер и терминал	5-6
Daljinski upravljač	7-8
Kanal	9-10
Slika	10
EKRAN	11
Zvuk	11
VREME	12
ZAKLJUČAVANJE	13
Podешavanje	14
USB	15-17
Meni operacije	18
Problemi	19
Specifikacija	20





VAŽNA BEZBEDONOSNA UPUTSTVA

UPOZORENJE

KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽNI KABAL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIČNICI OSIM ONIH KOJI BI MOGLI DA SPREČE IZAZIVANJE STRUJNOG UDARA

- KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREĐAJ VLAGI ILI KIŠI..

 <p>Ovaj simbol munje u jednakostranom trouglu upozorava korisnike na prisustvo opasnog i neizolovanog napona unutar kućišta proizvoda koji može biti dovoljan da stvori rizik STRUJNOG UDARA</p>	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> </div> <p>Upozorenje: Da biste smanjili rizik od strujnog udara, nemojte skidati poklopac (ili zadnju stranu). Unutra nema delova koje korisnik može sam da zameni. Za obavljanje servisa zatražite pomoc kvalifikovanog osoblja</p>	 <p>Znak uzvika unutar jednakostranog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instrukcija za rad i održavanje (servisiranje) uređaja.</p>
--	---	--

Ovaj aparat ne treba izlagati void, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

OPREZ

- * Postoji opasnost od eksplozije ako se baterija nepropisno zameni.
- * Zamenite postojeću sa samo odgovarajućom vrstom baterija.
- * Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote.
- * Obezbedite pravilno odlaganje istrošenih baterija.
- * Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja.
- * Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koja se pominju u

VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada. Mnoge povrede, posebno na deci, mogu se izbeći primenom jednostavnih mera opreza kao što su:

- * Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.
- * Korišćenje samo onog nameštaja koji može da sigurno podrži uređaj.
- * Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.
- * Nepostavljanje TV-a na visok nameštaj (na primer, ormare ili police) bez prethodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.
- * Ne pokrivanje televizora krpom i nestavljanje drugih materijala između televizora i nameštaja na kom stoji.



* Sigurna instalacija

- * Koristite pojas za fiksiranje televizora kako bi sprečili uređaj od pada unapred..



 
1. Pročitajte uputstva - Sve napomene o sigurnosti i operativni treba pročitati pre aparat radi.
2. Sačuvajte uputstva - Uputstva za sigurnost i uputstvo za upotrebu treba da se sačuvaju za buduće potrebe.
3. Imajte u vidu Upozorenja - Svih upozorenja na aparatu i u uputstvu za upotrebu treba se pridržavati.
4. Pratite uputstva - Treba pratiti sva uputstva..



5. Voda i vlažnost - Aparat ne treba koristiti u blizini vode.
6. Nosač i postolja - Aparat treba koristiti samo sa nosačem ili postoljem koji preporučuje proizvođač.
7. Montaža na zid ili plafon - Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača.
8. Ventilacija - Aparat treba da bude dobro postavljen, tako da njegova lokacija ili pozicija ne ometaju njegovo dobro provetravanje.
9. Toplota - Ovaj aparat treba postaviti dalje od izvora toplote kao što su radijatori i peći.
10. Napajanje - Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
11. Uzemljenje ili polarizacija - Treba preduzeti mere predostrožnosti.
12. Zaštita kabla za napajanje - Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, prikleštiti stvarima na njemu ili njegovom kraju.
13. Čišćenje - Aparat bi trebalo čistiti samo po preporuci proizvođača:
14. Napajanje spoljne antene treba da se nalazi daleko od dalekovoda.
15. Uzemljenje spoljne antene - Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
16. Kada ga dugo ne koristite - napajanje uređaja trebalo bi da bude isključeno iz utičnice kada se ne koristi duži vremenski period.
17. Upad predmeta i tečnosti - Treba paziti da se predmeti ne upadnu, a tečnost ne prospe u kućište kroz otvore.
18. Kada je potreban servis - Aparat treba da servisira kvalifikovano servisno osoblje kada su:
 - kabl za struju ili utikač oštećeni.
 - kada predmeti upadnu ili kada je tečnost prolivena u uređaj.
 - kada je aparat izložen kiši.
 - kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
19. Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao što su novine, tkanine, zavese, itd.
20. Izvore otvorenog plamena, kao što su upaljene sveće, ne bi trebalo da stoje na aparatu.
21. Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.




Upozorenje
Visok napon se koristi u funkcionisanju ovog proizvoda. Ne uklanjajte zadnji poklopac. Obratite se se kvalifikovanoj osobi za obavljanje servisa.

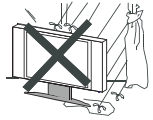

Upozorenje
 ja biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlazi.



 Upozorenje
 Nemojte ispuštati i gurati predmete u kućiste TV-a ili u otvore. Nikada nemojte prosapati tečnost na TV prijemnik

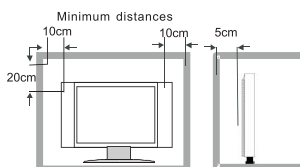


OPREZ


Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati dela uputstva o minimalnim udaljenostima. Toplota može smanjit životni vek televizora, a takodje može biti opasno.



 
Oprez
 Nikad nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak. Treba obratiti posebnu pažnju na decu.

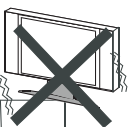

 Oprez
 Ne stavljajte glavnu jedinicu na nestabilno postolje, policu ili sto.
 Usled pada može doći do ozbiljne povrede lica ili štete na na televizoru.



 Oprez
 Kada se proizvod ne koristi za duži vremenski period, preporučljivo je da isključite mrežni kabl iz utičnice.

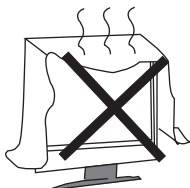

















Oprez
 Izbegavajte izlaganje glavne jedinice direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaji, audio pojačala. Ne blokirajte otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova. Ne savijajte kabl za napajanje ispod glavne jedinice.



Oprez
 Panel (ekran) koji se koristi u ovom proizvodu je napravljen od stakla. Može se slomiti padom uređaja ili nasilnim udarom. Pojedinci treba oprezno da rade arazbijenim staklom ekrana



KONTROLNI DUGMIĆI

NAZIV DUGMIĆA	VRSTA DUGMIĆA				INSTRUKCIJE ZA UPOTREBU
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	PRIKAZIVANJE GLAVNOG MENIJA ZA ODABIR FUNKCIJA TV UREĐAJA (DIGITALNI, ANTENSKI, SMART OPCIJA, MEDIA – USB, HDMI..)
MENU BUTTON	MENU			MENU	PRIKAZIVANJE MENIJA TV UREĐAJA
VOLUME UP BUTTON	VOL+				POJAČAVANJE ZVUKA
VOLUME DOWN BUTTON	VOL-				UTIŠAVANJE ZVUKA
PROGRAM UP BUTTON	CH+		C/P ▲		PREBACIVANJE NA VIŠI KANAL
PROGRAM DOWN BUTTON	CH-		C/P ▼		PREBACIVANJE NA NIŽI KANAL
STANDBY BUTTON	POWER			STANDBY	UKLUČIVANJE/ISKLUČIVANJE TV UREĐAJA DOK JE U RE ŽIMU MIROVANJA

NAPOMENA

- 1.Kontrolni dugmići su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
- 2.Broj i raspored kontrolnih dugmića može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem I njihovom namenom.


KONEKCIJE POZADI

NAZIV ULAZA/IZLAZA	VRSTA IKONICE ZA ULAZ/IZLAZ			INSTRUKCIJE ZA UPOTREBU
	1	2	3	
AV IN				AUDIO/VIDEO ULAZ
COMPONENTIN			/	YPBPR ULAZ, ZA POVEZIVANJE EKSTERNIH UREĐAJA (DVD, PLAYER, KUĆNI BIOSKOP...)
AV OUT			/	AUDIO/VIDEO IZLAZ
AUDIO OUT			/	AUDIO IZLAZ ZA POVEZIVANJE EKSTERNIH ZVUČNIKA
TERMINAL ANTENNA (75OHM), TV SIGNAL INPUT PORT			/	POVEZIVANJE ANTENE ZA ZEMALJSKE KANALE (KROVNA/SOBNA ANTENA)
TERMINAL ANTENNA (75OHM), SATELIT SIGNAL INPUT PORT				POVEZIVANJE SATELITSKE ANTENE
AUDIO IN				AUDIO ULAZ
VIDEO OUT				VIDEO IZLAZ
COAXIAL OUT				DIGITALNI IZLAZ ZA EKSTERNE ZVUČNIKE
VGA				VGA ULAZ ZA POVEZIVANJE RAČUNARA I TV UREĐAJA
VGA AUDIO IN				VGA IZLAZ ZA AUDIO POVEZIVANJE
HDMI				HDMI ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
USB IN				USB ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA I MEMORIJA
EARPHONE OUT				IZLAZ ZA POVEZIVANJE SLUŠALICA
SCART				SCART ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
OPTICAL				OPTIČKI IZLAZ ZA POVEZIVANJE UREĐAJA KOJI KORISTE OPTIČKI KABL
RJ45 IN				ZA POVEZIVANJE TV UREĐAJA NA INTERNET (LAN MREŽA)
DC IN, OPTIONAL				OPCIONO – ULAZ ZA POVEZIVANJE NA ADAPTER OD 12V
TF IN				ULAZ ZA OČITAVANJE MEMORIJSKE KARTICE
PCMCIA				ULAZ ZA CI (CI+)

1.Svi ulazi / izlazi su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.

2.Broj ulaza/izlaza može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom

 Daljinski upravljač se može koristiti samo na udaljenosti na kojoj postoji prijem signala. Pre upotrebe, uverite se da nema prepreka između daljinskog upravljača i TV uređaja.

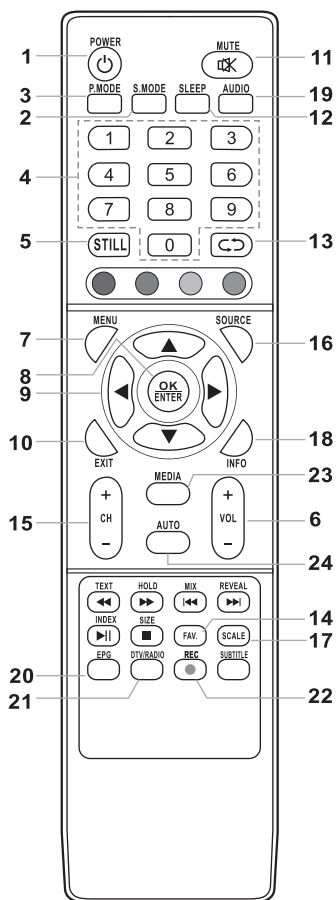

1. POWER BUTTON

uključenje/isključenje TV uređaja

2. S.MODE BUTTON

dugme za podešavanje zvučnih efekata

3. P.MODE BUTTON

dugme za odabir efekata slike

4. NUMBER BUTTONS

pritisnite određeno dugme za odabir programa koji želite ili kako biste uneli lozinku

5. STILL BUTTON

zamrzavanje slike

6. VOL+ / VOL- BUTTON

pojačavanje/utišavanje zvuka

7. MENU BUTTON

pritisnite "MENU" dugme za ulazak u glavni meni. Za izlaz, pritisnite ponovo ili koristite dugme "EXIT"

8. OK BUTTON

pritisnite OK da potvrdite ili uđete u pod-meni

9. UP, DOWN, LEFT, RIGHT ARROW BUTTON

pritisnite kako biste odabrali ili podesili željenu ikonu na meniju TV uređaja

10. EXIT BUTTON

pritisnite za izlaz

11. MUTE BUTTON

pritisnite za isključenje zvuka. Pritisnite ponovo za uključivanje zvuka

12. SLEEP BUTTON

pritisnite za podešavanje automatskog isključenja TV uređaja u određeno vreme

13. RETURN BUTTON

pritisnite za prebacivanje na prethodni kanal koji ste gledali

14. FAV. BUTTON

prikazivanje omiljene programske liste

15. CH+ / CH- BUTTON

promena TV kanala

16. SOURCE BUTTON

prikazivanje menija za odabir funkcije TV uređaja (digitalni, antenski, smart opcija, media-USB, HDMI...)

17. SCALE BUTTON

pritisnite dugme za odabir rezolucije slike

18. INFO BUTTON

prikazivanje informacija o trenutnom statusu signala, kvaliteta slike, programa...

19. AUDIO BUTTON (Optional)

OPCIONO – odabir zvuka sa eksternih zvučnika

20. EPG BUTTON

OPCIONO – otvaranje/zatvaranje elektronskog programskog vodiča

21. DTV/RADIO BUTTON

OPCIONO -prelazak sa DTV na radio program

22. REC BUTTON

snimanje sadržaja sa digitalnih kanala

23. MEDIA

direktno pristupanje USB modu

24. AUTO UVGA

rezimu, pozicija slike se automatski koriguje

Napomena: EPG, DTV/RADIO, REC funkcije imaju efekat samo u DTV modu.

TELETEXT FUNKCIJA (Opciono)

1) TEXT BUTTON Pritisnite dugme za prelazak sa TV slike na Teletext, ukoliko TV stanica podržava isti.

2) REVEAL BUTTON Za prikazivanje skrivenih karaktera

3) MIX BUTTON Dugme za prikazivanje Teletext I TV slike zajedno ili samo Teletext slike. Ovo dugme omogućava korisniku da unese 4 digitalne pod-strane za trenutnu stranu. Ukoliko sledeće digitalne strane nisu unešene za 5 sekundi, prethodni broj strane će biti ponovo pozvan I prikazan na ekranu.

4) RED/GREEN/YELLOW/BLUE BUTTONS

Ova 4 dugmeta u Teletext modu služe za brzo prebacivanje (zumiranje, prebacivanje na sledeću stranu...)

5) UP/DOWN BUTTON Pomeranje stranice gore/dole u teletext modu

6) 0, 1, 2...9 BUTTON Odabir određene teletext stranice uz pomoć numerisanih dugmića.

7) HOLD BUTTON Neke teletext informacije se nalaze na više koje se automatski menjaju nakon određenog vremena. Pritisnite dugme "HOLD" da zaustavite promenu strana. Za nastavak promene strana, pritisnite ponovo "HOLD"

8) SIZE BUTTON Dugme za povećanje dimenzije karaktera I prikazivanje pola teletext strane. Svaki pritisak će prikazivati više i više do normalne strane.

9) INDEX BUTTON Pritisnite ovo dugme kako biste videli Index stranu u teletext modu. Prikaz teletext vremena.

USB FUNKCIJA (Opciono)

1) ◀/▶ BUTTON

Premotajte scenu ili muziku

2) ◀◀/▶▶ BUTTON

Vraćenje na prethodni ili prelazak na naredni fajl

3) ⏮ BUTTON

početak / pauza

4) ■ BUTTON

Zaustavljanje. Pritisnite da potvrdite akciju (Na primer: kopiraj, nalepi itd) . Ponavljanje scene ili muzike u reprodukciji filmova na USB-u.

5) SUBTITLE BUTTON

Otvara ili zatvara funkciju titla (titl mora biti preuzet sa interneta i mora biti identičan kao na fajlu, kao i kompatibilan sa fajlom koji podržava)

Note: A USB device must already be connected. Napomena: USB uređaj već mora biti povezan.

 
INSTALACIJA BATERIJA U DALJINSKI UPRAVLJAČ

1. Otvorite poklopac odeljka za baterije.

2. Stavite dve AAA baterije (uske) od 1,5V. Budite sigurni da se polaritet baterija (+ i -) podudara sa polaritetom unutar odeljka.

Napomena


- Preporučujemo upotrebu alkalnih baterija
- Rok trajanja baterija može biti i duži od jedne godine, u zavisnosti od toga koliko često se daljinski upravljač koristi. Za najbolje performanse, baterije treba menjati bar jednom godišnje ili onda kada počnu da ometaju rad daljinskog upravljača.
- Budite sigurni da su baterije okrenute u dobrom pravcu, kao na slici.
- nemojte mešati stare i nove baterije ili različite vrste baterija
- stare baterije mogu iscuriti i oštetiti daljinski upravljač. Uvek uklonite oslabljene baterije.

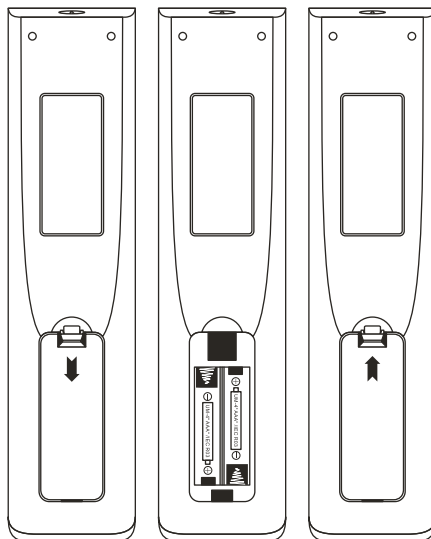

KANALI

Kanal menu

 Pritisnite "MENU" i "◀/▶" tastere da izaberete KANAL menu. Pritisnite "T/A" taster da izaberete stavke taster da se izabere the items. Pritisnite OK taster da udjete u pod meni.

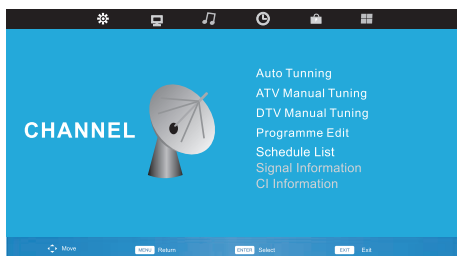

Auto Tuning: Pritisnite [▶] ili [OK] da započne auto pretrafa za oba ATV i DTV kanala.

 
ATV Manual Tuning: Pritisnite [▶] ili [OK] da započne "ATV Manual Tuning" podmeni.

TRENTNI CH: pritisnite [◀/▶] da izaberete broj kanala koji želite da memorišete.

Color System: Pritisnite [◀/▶] da promenite color sistem na Auto, SECAM, PAL.

Sound System: Pritisnite [◀/▶] da promenite zvučni system na DK, I, BG,L.

Fine-Tune: pritisnite [◀/▶] da skenirate trenutni program na trenutnoj frkvenciji i da snimite rezltat ručno.

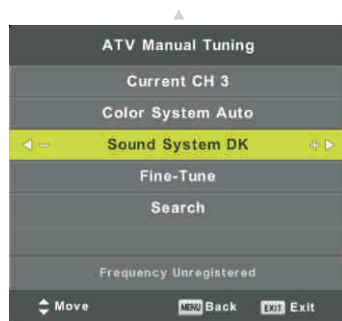

DTV manualno podešavanje: Pritisnite [▶] ili [OK] da udjete "DTV Manualna pretraga" podmeni.



Pritisnite [◀/▶] da izaberete kanal,zatim pritisnite OK da pretražite programe.

Napomena:Samo kanali sa dovoljno jakim signalom biće pronađeni, Preverite svoju antenu ako nedostaju kanali posle auto pretrage.

KANAL

Ova opcija ima 5 funkcija

1. Pritisnite Crveni taster da obrišete trenutni kanal.
2. Pritisnite Žuti taster i ▲ / ▼ da pomerite trenutni kanal.
3. Pritisnite Plavi taster da preskočite trenutni kanal.
4. Pritisnite [FAV] da označite trenutni kanal kao omiljeni, biće crveno srce u pozadini izabranog kanala. Ako je trenutni kanal izabran ceć kao omiljeni, pritisnite još jednom i biće podešen kao normalan.

Lista rasporeda

 
Prikaz liste rasporeda i liste snimaka.

Signal Informacije:

Prikaz informacije o signalu u DTV modu.

CI Informacije:

Molim kontaktirajte vašeg provajdera da vam obezbedi karticu i modul.

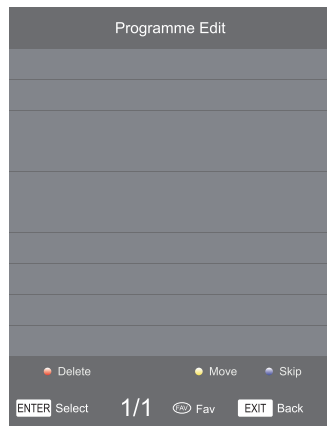


SLIKA

SLIKA

Pritisnite [MENU] za prikaz glavnog menija.

 Pritisnite [◀/▶] da izaberete "SLIKA" u glavnom meniju, zatim [OK] da potvrdite.

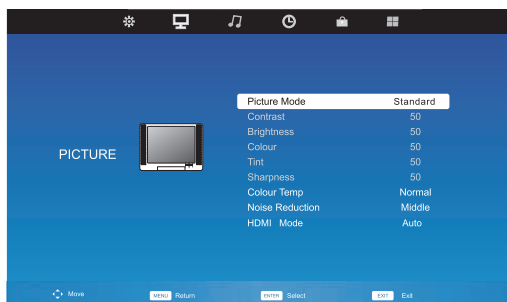

Mod slike: Pritisnite [◀/▶] ili [OK] da uđete u "Picture Mode" podmeni. Pritisnite ▲ / ▼ da promenite mod slike: Dynamic— Standard— Mild — Personal.

Pritisnite [P.MODE] ponajvljajuć da promeni mod Slike direktno.

Contrast: Pritisnite [◀▶] ili [OK] da uđete u podmemni. Pritisnite [◀/▶] to set the picture's contrast intensity.

Brightness: Pritisnite [◀/▶] or [OK] da uđete u podmeni. Pritisnite [◀/▶] da podesite svetlinu slike.

Colour: Pritisnite [◀/▶] ili [OK] da uđete u podmeni. Pritisnite [◀/▶] da podesite jačinu slike.

Tint: Pritisnite [◀/▶] ili [OK] da uđete u podmeni. Pritisnite [◀/▶] da podesite tintu.

Sharpness: Pritisnite [◀/▶] ili [OK] da uđete u podmeni. Pritisnite [◀/▶] da podesite oštrinu slike.

Colour Temp: Pritisnite [◀/▶] ili [OK] da uđete "Colour Temp" podmeni. Pritisnite [▲ / ▼] da promenite toplinu boje Cold — Normal— Warm.

Redukcija šuma: Pritisnite [◀/▶] ili [OK] da uđete u "Noise Reduction" podmeni. Pritisnite ▲ / ▼ da promenite redukciju šuma: Off— Low — Middle — High —Default.

SCREEN

Pritisnite "SOURCE" taster na daljinskom upravljaču da uđete u OSD meni, zatim Pritisnite "▲ /▼" taster da izaberete "EKRAN". Pritisnite "OK" taster da uđete "EKRAN" mod.

 
EKRAN (dostupno samo kada je povezan preko SCREEN Only available when connected via EKRAN sa PC) Automatsko podešavanje veličine slike.

Pritisnite "▲ /▼" taster da izaberete podešavanje slike horizontalno

Pritisnite "OK" taster da uđete u podešavanje slike vertikalno.

Pritisnite "▲ /▼" da izaberete stavke.

Pritisnite "◀ /▶" taster da podesite.

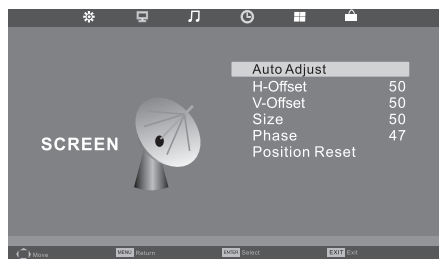


SOUND

Mei ZVUKA

Pritisnite [MENU] da prikaže glavni meni.

 Pritisnite [◀/▶] da izaberete "zvuk" u glavnom meniju, zatim Pritisnite [OK].

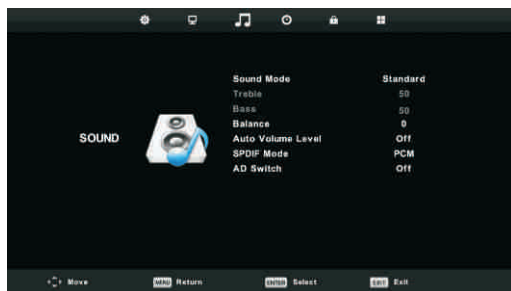

Sound Mode: Pritisnite [◀/▶] ili [OK] da uđete "mod zvuka" podmeni. Pritisnite [▲ /▼] da promenite mod zvuka: Standard—Music—Movie— Sports— Personal.

Možete da pritisnete [S.MODE] ponajavljući na daljinskom upravljaču da promenite mod zvuka direktno.

Balance: Pritisnite [◀/▶] ili [OK] da uđete u podmeni. Pritisnite [◀/▶] da postavite odgovarajuću vrednost levog i desnog zvučnika .

Auto jačina: Pritisnite [◀/▶] ili [OK] da podesite automasku jačinu na "On" ili "Off".

SPDIF Mode: Pritisnite [◀/▶] ili [OK] da podesite SPDIF mod na "Auto", "Off" ili "PCM".

 
AD promena (Za DTV samo): Pritisnite [▶] ili [OK] da uđete u podmeni. Pritisnite [◀/▶] audio opis na "On" or "Off" kao i podešavanje nivoa jačine za AD.

TIME

VREME meni

Pritisnite [MENU] da se prikaže glavni meni.

Pritisnite [◀/▶] da se izabere "VREME" U glavnom meniju, zatim pritisnite [OK].

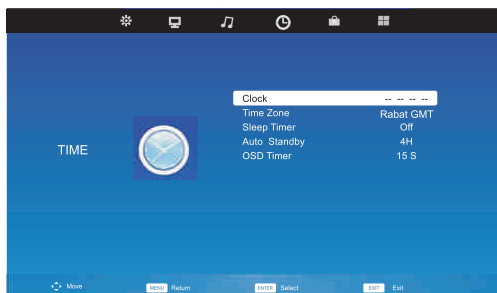

Sat: koristite ◀ / ▶ tastere da se izabere pozicija, i koristite ▲ / ▼ da podesite vreme.

 
Vremenska Zona: Pritisnite [OK] da uđete u podmeni. Pritisnite [▲▼◀▶] da se izabere, Pritisnite [OK]

Sleep Timer: Pritisnite [▶] ili [OK] da uđete u "Sleep Timer"podmeni. Pritisnite [▲/▼] da promenite sleep tajmer sa/na Off, 10Min, 20 Min, 30 Min, 60 Min, 90 Min, 120 Min, 180 Min, 240 Min.

Možete pritisnite [SLEEP] više puta na daljinskom upravljaču da promenite direktno.

Auto Standby: Pritisnite [OK] da uđete u podmeni. Pritisnite [▲/▼] da se izabere Off, 3 H, 4 H, 5 H, Pritisnite [OK]

OSD tajmer: Pritisnite [▶] ili [OK] da uđete u podmeni. Pritisnite [▲/▼] da proeminte OSD tajmer za 5 sekundi, 10 Sekundi, 15 Sekundi, 20 Sekundi, 25 Sekundi, 30 Sekundi.

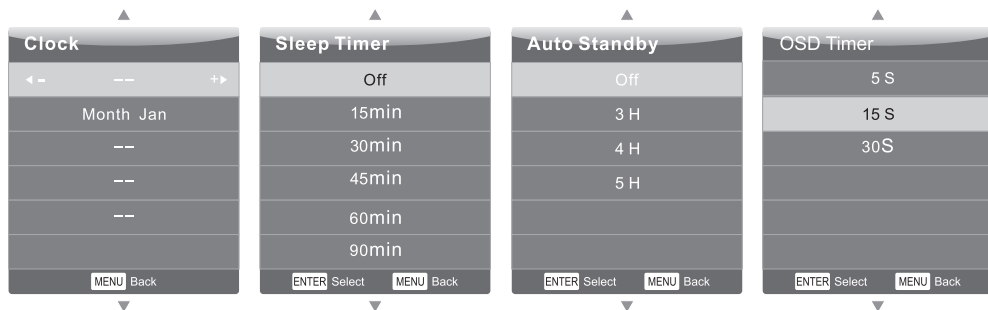


ZAKLJUČAVANJE

ZAKLJUČAVANJE


Pritisnite [MENU] da se prikaže glavni meni.

 Pritisnite [▲/▼] da se izabere "LOCK" U glavnom meniju, zatim pritisnite [OK].

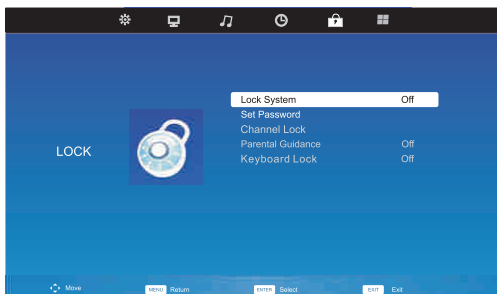


Šifra: Unesite početnu šifru "0000" da uđete u MENI funkciju ako hoćeš da promeniš "Lock System" u "On".

 Sistem zaključavanja: podesi sistem na "On" ili "Off" koji vam omogućava ili onemogućava dole funkcije.

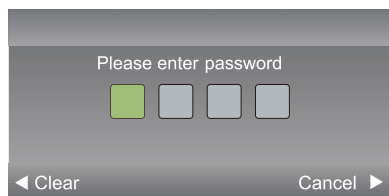

 Podesite šifru: Pritisnite [▶] ili [OK] da uđete u podmeni da podesite novu šifru.

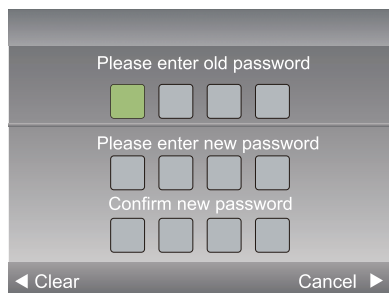

Možete da promenite šifru tako što unesete staru, zatim novu šifru i ponovite novu šifru.

Blokirati program: Pritisnite [OK] da prikaže Blokiraj program meni.

Parental Guidance: Pritisnite [OK] za podmeni, Pritisnite [▲/▼] da se izabere Off, 4,5, 6,7,8,9,10,11,12,13,14, 15,16,17,18. Pritisnite [OK].

Zaključavanje tastature: Pritisnite [OK] da se izabere Off ili On.

PODEŠAVANJE

SETUP menu

Pritisnite [MENU] da se prikaže glavni meni.

Pritisnite [◀/▶] da se izabere "SETUP" U glavnom meniju, zatim pritisnite [OK].



OSD Jezik

Pritisnite OK da izaberete ◀ / ▶ , ▼ / ▲ zatim taster da se izabere OSD jezik.

Pritisnite "MENU" za povratak na prethodni meni.

TTX Jezik: Pritisnite [OK] da uđete u podmeni, Pritisnite [▼/▲] da se izabere items. Pritisnite [OK] to confirm.

Audio Jezik / Jezik titla: Pritisnite [OK] da uđete u podmeni, Pritisnite [◀▶▼▲]da se izabere stavka Pritisnite [OK].

Za oštećeni sluh (za DTV samo):

Pritisnite [◀/▶] ili [OK] da se podesi za oštećeni sluh "On"ili "Off".

PVR sistm datoteka(za DTV samo):

Pritisnite [▶] ili [OK] da uđete u podmeni,proverite da li je USB povezan .

skala: Pritisnite [OK] da uđete u podmeni, Pritisnite [▼/▲] da se izabere 4:3,16:9, Zoom1, Zoom2, Pritisnite [OK]

Plavi ekran

Pritisnite OK taster da se izabere On or Off.

 
Prva instalacija: Pritisnite [▶] ili [OK] da pokrenete odgovarajuće opcije kao i OSD Jezik i zemlju.

Reset

Ovo će da resetuje sva podešavanja na fabričko. Pritisnite OK taster za početak – bićete pitani da potvrdite za početak (vidite sliku desno).

Pritisnite " ◀ / ▶ " taster da se izabere Yes or No.

Pritisnite "MENU" ili "EXIT" taster za izlazak



Software Update(USB): Pritisnite [▼/▲] da se izabere Software Update. Pritisnite [OK]

 
USB

Pritisnite "SOURCE" taster da izađe SOURCE meni.

Pritisnite "[▲/▼]" taster da se izabere "Media" i Pritisnite "OK" da uđete u sledeći meni:




Pritisnite "◀ / ▶" taster da se izabere između "PHOTO", "MUSIC", "MOVIE" i "TEXT" ikone. Pritisnite "OK" taster da potvrdite aktivirate sledeći meni:

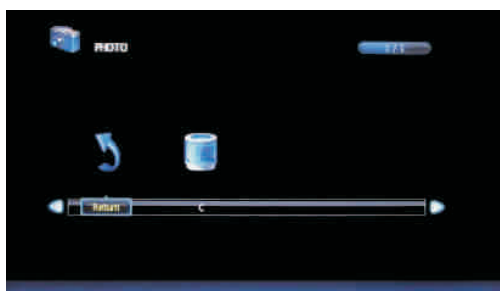

PHOTO

 1. Pritisnite "◀ / ▶" Taster da se izabere "PHOTO".
 2. Pritisnite "OK" taster da uđete u disk meni .
 3. Pritisnite "◀ / ▶" taster da se izabere disk uđete u podmeni.
 4. Pritisnite taster da obeležite fajlove. Pritisnite OK da se izabere fajlove (označeno kvačicom) za selektivnu reprodukciju (vidite6 ispod). Pritisnite crveni taster, ući ćete u podmeni da izbrišete fajl.
 5. Pritisnite OK taster da da pregledate fajl kao na slici ispod:
 6. Pritisnite "PLAY" taster da pustite slajd show(od izabranih fajlova);
- Ako ni jedan fajl nije izabran reprodukuće se svi fajlovi), Pritisnite "OK" da se aktivira meni..

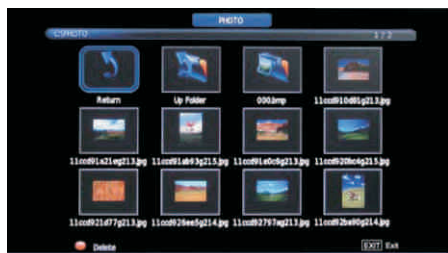

USB

Pauza

Pritisnite "PAUSE" taster da pauzirate slideshiov.

Play

Pritisnite "PLAY" taster reprodukujete izabrane fajlove.

Stop

Pritisnite "STOP" taster za zaustavljanje i reprodukciju.

Next/Prev.

Pritisnite "NEXT" ili "PREV." taster da preskočite pregled izabranog fajla.

Exit

 
 
Pritisnite "EXIT" taster za exit.

MUZIKA

1. Pritisnite ◀ / ▶" taster da se izabere "MUZIKA".
2. Uđite u interfejs MIZIKA, Pritisnite ▶" taster to za pregled muzike kao što je prikazano ispod:



3. Press "PLAY" button into music player and playing the selected music, as shown below:

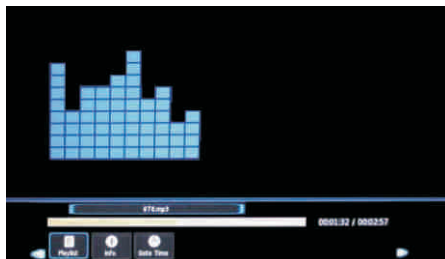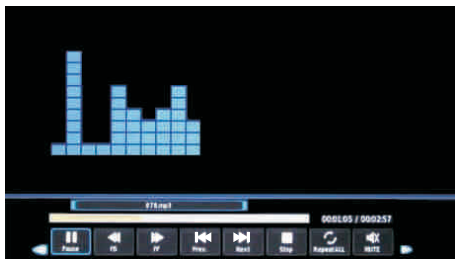

PAUSE

Izaberite "PAUSE" da pauzirate muziku.

PLAY

Izaberite "PLAY" da pustite muziku.

FB

Izaberite "FB" da vratite 2X, 4X, 8X and 16X mod.

FF

Izaberite "FF" da ubrzate 2X, 4X, 8X and 16X mod.

PREV.

Izaberite "PREV." Da vratite na prethodni fajl.

NEXT

Izaberite "NEXT" da pređete na sledeći fajl.

STOP

Izaberite "STOP" da zaustavite i vratite se.

RepeatALL

Izaberite "O" da se ponovi reprodukcija (O ponoviti 1, Oponovite sve, O ništa ne ponovite). I

MUTE

zaberite "MUTE" da ugasis zvuk.

USB

Plavlist Izaberite "Playlist" da se prikaže playlista.

Info- Izaberite "Info" da se prikažu informacije o fajlu.

Goto Time Izaberite "Goto Time" da podesite vreme

MOVIE

1. Pritisnite "◀ / ▶" taster da se izabere "MOVIE"
2. Uđite u movie interfejs. Pritisnite "▲▼◀▶" taster pregled fajlova kao na slici ispod.:



3. Pritisnite "PLAY" taster reprodukujete film. Pritisnite OK taster za prikaz menija. Pritisnite "PLAY" taster još jedno za prikaz u punom ekranu. Pritisnite "PAUSE" taster pauzirate film. Pritisnite "PREV." ili "NEXT" taster preskočite unapred ili unazad fajl. Pritisnite "FB" ili "FF" taster da premotate nazad ili napred Pritisnite "STOP" ili "EXIT" taster da izđete.

TEXT

1. Pritisnite "◀ / ▶" taster da se izabere "TEXT"(za pregled tekstualnih dokumenata na USB-u).
2. Uđite u Text interfejs, Pritisnite"▲▼◀▶"taster za pregled fajlova kao što je prikazano na slici:



3. Pritisnite "PLAY" taster da otvorite fajl , Pritisnite OK taster da prikazete meni. Kao na slici.:

Izaberite "Prev Page" za pregle prethodne stranice.

Izaberite "Next Page" za pregled sledeće stranice.

Izaberite "STOP"za povratak.

Izaberite "Music" da slušate muziku dok čitate.


 







1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.



MENU OPERATION

MULTIMEDIA

Lista

	Stop Playback
	Smjerne strelice
INFO 	Prikaži detalje
	Reprodukcija
	Pauza
	Brzo premotavanje unazad
	Brzo premotavanje unapred
	Prethodni
	Sledeći
RED	Briši
OK	Potvrdi
EXIT	Izlaz
SUBTITLE	Kada gledate film da uključite ili isključite titl

Sledići su funkcijski interfejsi za PHOTO, MUSIC, MOVIE i TEXT. Za njihove funkcije detaljnije pogledajte na 19 stranici

PHOTO



MUSIC



MOVIE



TEXT



VODIČ ZA REŠAVANJE PROBLEMA

Mnogi prividni kvarovi su prouzrokovani nesporazumima prilikom redovne upotrebe i uglavnom su jednostavni za otkloniti. Ukoliko imate poteškoća sa rukovanjem, prvo pogledajte sledeću listu uobičajenih grešaka i njihovih rešenja.

Ako problem ne rešite, isključite uređaj i pozovite svog servisera.

SYMPTOM METHODS OF CHECKING OR ADJUSTING

Nema slike ili zvuka No picture or sound Proverite da li je naponski kabal ispravno priključen u utičnicu.

Slika je normalna ali bez zvuka

Proverite da nije slučajno zvuk podešen na nečujno (MUTE) Ukoliko jeste pojačajte zvuk .

Daljinski upravljač ne radi

Proverite da li je TV uključen.

Proverite da li su baterije ispravno postavljene.

Uverite se da infracrveni odašiljač na daljinskom ili TV nije izložen jakoj svetlosti ili da nije blokiran na bilo koji način.

Ne primete nikakav any TV signal

Proverite da li je SOURCE prekišač postavljen na TV. Proverite i podešavanje za lokaciju i povezanost. Pokušajte da ponovno skenirate kanale i proverite metod pretrage.

Bez signala programa sa spoljašnjeg izvora Proverite da li je taster SOURCE podešen na ispravnu poziciju za prijem signala.

Problem sa kontrastom i osvetljenjem. Napravite potrebene i željene izmene.

Slab contrast i blede boje na svim kanalima Proverite podešavanje za lokaciju prijema signala.

Linije ili tačke po celom ekranu Drugi električni uređaji mogu da izazovu smetnje. Sklonite ih od televizora.

Sneg na ekranu Proverite lokacijska podešavanja, kratak spoj, prekinuta konekcija ili bilo koja vidljiva oštećenja.

Dupla slika ili zamagljenost

Proverite podešavanja za lokaciju i uopšte položaj antene ili uređaja. Jak vetar može da izazove takve problem. Visoke zgrade ili planine takođe. Malo podešavanje antene može u mnogo čemu da popravi sliku..

Napomena: spoljna ili krovna antena treba da bude postavljena od strane ovlašćenog osoblja.

SPECIFIKACIJA

Aspect Ratio	16 : 9
System	PAL/SECAM BG/DK/I, DVB-T/T2+C, NTSC Playback
Imendansa	75 Ω (Unbalance)
PRIJEM TV Band	All Channels Receiveable
Napon	100-240V~ 50/60Hz

Daljinski upravljač

Karakteristike: Daljinski upravljač sa svim funkcijama **radiju rada:** 8 metara

Napajanje: DC 3V (dve baterije, veličine AAA, preporuka da koristite alkalne)

