



LED TELEVIZORI



HDMI[®]
HIGH DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU-SMART TV

MODEL:40DLE468

Molimo Vas da detaljno proučite ovo uputstvo pre upotrebe televizora i da ga čuvate radi kasnije upotrebe

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



 
SAFETY INSTRUCTIONS

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.




5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects did not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.
No naked flame sources, such as lighted candles, should be placed on the apparatus.
The apparatus shall be connected to mains socket outlet with a protective earthing connection.
The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.

SAFETY INSTRUCTIONS



Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

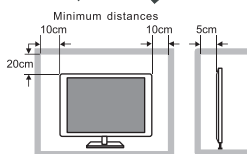

Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

 
Heat built up can reduce the service life of your television, and can also be dangerous.



Caution

Never stand on, lean on, push suddenly the product or its stand.


You should pay special attention to children.

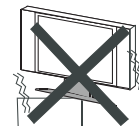

Caution


Do not place the main unit on an unstable cart stand, shelf or table.

 Serious injury to an individual, and damage to the television, may result should it fall.



Caution

 When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

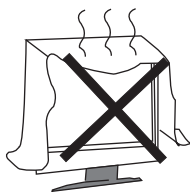

Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force.

Individuals should execute caution when dealing with broken glass should the panel break.



CONTENTS

SAFETY PRECAUTIONS

..... 1-3

DESCRIPTION OF CONTROL KEYS & CONNECTORS

..... 5-6

OPERATION OF REMOTE CONTROL

..... 7-8

CONNECTIONS

..... 9

OPERATION OF FUNCTION MENU

..... 10-19

TROUBLE SHOOTING GUIDE













..... 20

SPECIFICATIONS

..... 21

DESCRIPTION OF CONTROL KEYS & CONNECTORS

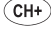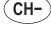CONTROL KEYS:

BUTTON NAME	BUTTON ICON TYPE				BUTTON INSTRUCTION
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	To display source menu.
MENU BUTTON	MENU			MENU	To select menu.
VOLUME UP BUTTON	VOL+			▲VOL	To increase the sound volume level
VOLUME DOWN BUTTON	VOL-			VOL▼	To decrease the sound volume level
PROGRAM UP BUTTON	CH+		C/P▲	▲CH	To select the next higher programme number.
PROGRAM DOWN BUTTON	CH-		C/P▼	CH▼	To select the next lower programme number.
STANDBY BUTTON	POWER			STANDBY	Switch ON/OFF the TV when at standby mode.

NOTE:

1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.


DESCRIPTION OF CONTROL KEYS & CONNECTORS

PORT NAME	PORTS ICON TYPE			PORT INSTRUCTION
	1	2	3	
AV IN		VIDEO / Y	AV IN	AV input port
COMPONENT IN		YPbPr	/	Ypbpr signal input port
AV OUT		AV OUT	/	AV output port
AUDIO OUT	AUDIO OUT 	L-EXTERNAL SPX-R 	/	AUDIO output port
TERMINAL ANTENNA (75 OHM)	ANT 	RF 	/	TV signal input port
TERMINAL ANTENNA (75 OHM)		RF(S2) 		Satellite signal input port.
AUDIO IN		AUDIO IN 		AUDIO input port
VIDEO OUT		VIDEO OUT 		VIDEO output port
COAXIAL OUT		COAXIAL 		Coaxial out port
VGA		VGA 		RGB signal input port
VGA AUDIO IN		VGA AUDIO IN 		VGA audio input port
HDMI		HDMI 		HDMI signal input port
USB IN		USB 		USB input port
EARPHONE OUT				Earphone output port
SCART		SCART 		SCART signal input port
OPTICAL		OPTICAL 		Optical output port
RJ45 IN		RJ45 		RJ45 input port
DC IN		DC IN 		DC+12V input port
TF IN		TF IN 		TF input port
PCMCIA		PCMCIA 		PCMCIA input port

1. All these terminal connection icons are commonly used for our TV models, and please select designated ports.
2. This connection ports quantity can be different according to models, and please refer to your actual product.

OPERATION OF REMOTE CONTROL

 The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

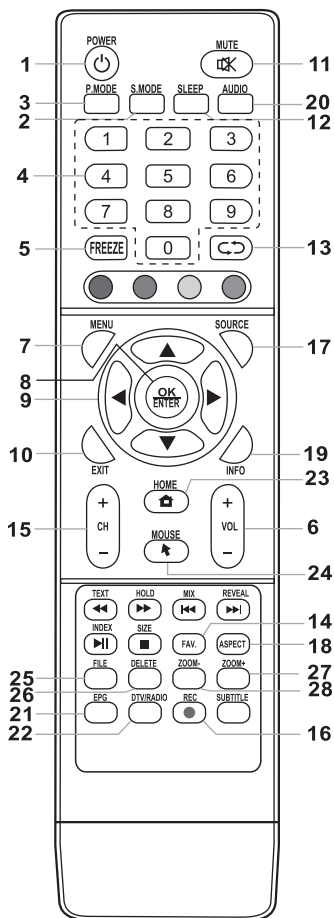

1. POWER BUTTON

Switch On/Off the TV when at standby mode.

2. S.MODE BUTTON

Sound effect selection.

3. P.MODE BUTTON

Picture effect selection.

4. NUMBER BUTTONS

Press these buttons to select the TV program you want to enter or input password.

5. FREEZE BUTTON

Freeze picture.

6. VOL+/VOL- BUTTON

Press two buttons to directly to turn up or turn down the sound volume level.

7. MENU BUTTON

Press the button to open the main menu, press again or use Exit to close.

8. OK BUTTON

Press the button to confirm or enter sub menus.

9. UP, DOWN, LEFT, RIGHT ARROW BUTTONS

Press these buttons to select or adjust the desired item on the TV menu.

10. EXIT BUTTON

Press the button to exit.

11. MUTE BUTTON

Press the button to turn off the volume. Press it again to turn on the volume.

12. SLEEP BUTTON

Press the button to set up the TV auto turn off time.

13. RETURN BUTTON

Press the button to toggle between the current and the previous program you were viewing.

14. FAV. BUTTON

Display favourite of program list.

15. CH+/CH- BUTTON

Press two buttons to directly to adjust the TV program.

16. REC BUTTON

Hotkey of PVR.

17. SOURCE BUTTON

Press the button display Source menu.

18. ASPECT BUTTON

Press the button to display and select available aspect modes.

19. INFO BUTTON

Display the Source, and channel etc. information.

20. AUDIO BUTTON (Optional)

Selects audio mode.

21. EPG BUTTON

Open/Close Electronic program guide.

22. DTV/RADIO BUTTON

Switch DTV program and radio program.

23. HOME BUTTON

Directly into the Smart, Media, USB etc...

24. MOUSE BUTTON

Change cursor from mouse to keyboard

25. FILE BUTTON

Press the button to browse the USB file directly. modes.

26. DELETE BUTTON

User for delete the input.

27. ZOOM+ BUTTON

Press the button to zoom in web.

28. ZOOM- BUTTON

Press the button to zoom out web.

Note: EPG, DTV/RADIO, REC are only effective in DTV mode.

OPERATION OF REMOTE CONTROL

TELETEXT FUNCTION (Optional)

1) TEXT BUTTON

Press the TEXT button to change the viewing from TV to Teletext if TV stations in your local have teletext broadcasting.

2) REVEAL BUTTON

This is a toggle function key to display hidden characters.

3) MIX BUTTON

This is a toggle function button to display TV picture and teletext together or teletext only.

This key allows the user to enter 4 digits sub-page for the current page. If subsequent digit is not entered within 5 seconds, previous page number will be recalled and displayed on the screen.

4) RED/GREEN/YELLOW/BLUE BUTTONS

These 4 Colour keys in teletext mode can quickly enter the pre-captured teletext pages.

5) UP/DOWN BUTTON

These keys can be used as a page up/down key in teletext mode.

6) 0, 1, 2, ..., 9 BUTTON

Using the 0, 1, 2, ..., 9 keys, the required Teletext pages are selected.

7) HOLD BUTTON

Some Teletext information is contained on more than one page, the pages automatically changing after a given reading time. Press the HOLD key to stop the page changing. Press the HOLD key again to allow the page to change.

8) SIZE BUTTON

This key is to expand character size and display half teletext page. Each press will display upper tower Normal page.

9) INDEX BUTTON

Press the INDEX key to view Index page in teletext mode.

Display Teletext time.

USB FUNCTION (Optional)

1) ◀ / ▶ BUTTON

Skip a scene or music.

2) ◀◀ / ▶▶ BUTTON

Go back to the previous or skip to the next.

3) ▶|| BUTTON

Play / Pause.

4) ■ BUTTON

Stop playback.

Press to confirm an action (For example: cope, paste etc.)

Repeat a scene or music.

7) SUBTITLE BUTTON

In the USB playback movies, open or closed subtitle function(Need streaming support)

Note:

 
A USB device must already be connected.

BATTERY INSTALLATION OF REMOTE CONTROL UNIT

1. Open the battery compartment cover.
2. Insert two 'AAA' (pencil size) 1.5V batteries. Make sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Close the battery compartment cover.


Note:

- Recommend use alkaline type batteries.
- The life time of the batteries may last up to one year, depending on how often the remote control is used. For the best performance, the batteries should be replaced on a yearly basis, or when remote operation becomes erratic.
- Be sure to place the batteries in the correct direction, as shown left.
- Do not mix old and new batteries, or different types.
- Old batteries may leak chemical and damage the remote control. Always remove batteries as soon as they become weak.

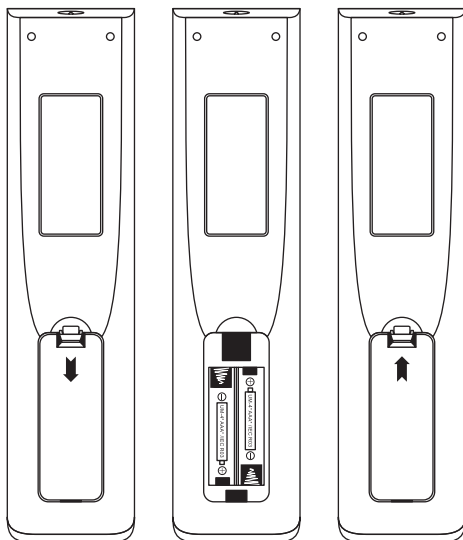

CONNECTIONS

 INSTALLATION OF ANTENNA

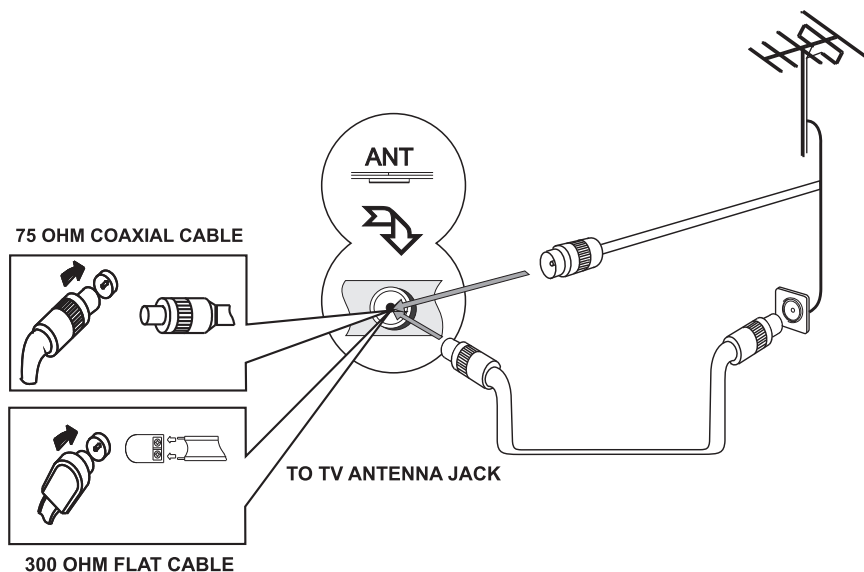

Connect the 75 OHM coaxial cable from the antenna to the antenna jack on the rear panel, as shown above.

Note:

- For better reception, especially in outlying area or where ghost or interference happens, an external roof-mounted antenna is recommended.
- For UHF TV reception, use the specified UHF antenna. Consult the local sale dealer.
- When using 300 OHM flat cable, a 300 OHM - 75 OHM adapter should be adopted for a proper connection to the antenna jack.

POWER CONNECTION

- Plug the AC cord into an AC outlet.
- Press the Power button on the remote control to turn on, press the Power button again to standby.

Note:

- This unit should be operated from a household AC 100-240V~ 50/60Hz.
- When you disconnect the power supply cord, pull it out by the plug. Never pull the cord itself.

CAUTIONS:

 
During a power outage, the TV should be unplugged from the AC outlet. To conserve energy the TV should be unplugged from the AC outlet if not being used for a prolonged period of time.

OPERATION OF FUNCTION MENU


MAIN MENU

The Main Menu UI are as follow.

Press ▼ / ▲ / ◀ / ▶ to select the menu.

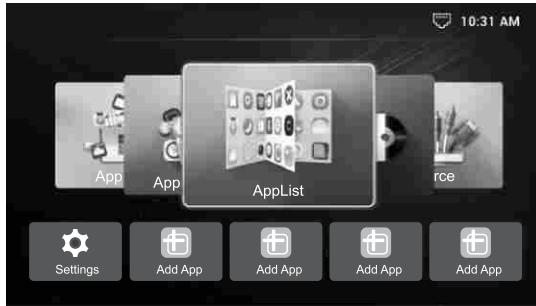

Press OK button to enter to set .

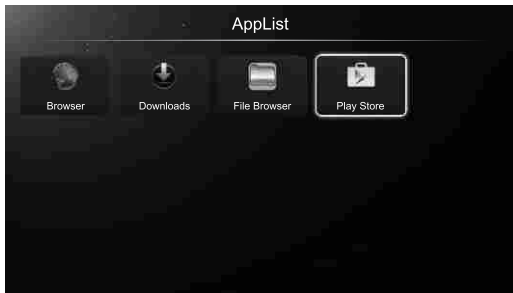 


System Setting

Select the Setting in the Main Menu to enter the System Setting.



 
Network

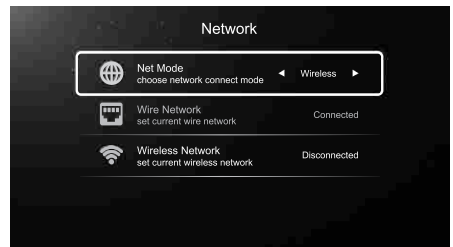

OPERATION OF FUNCTION MENU


Wireless Network

 Select the WIFI ,and press the passwork to connect.

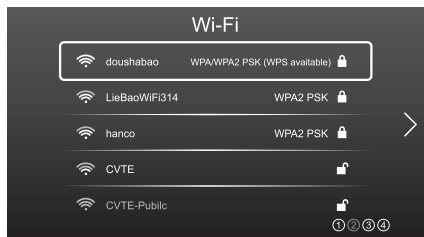


wired network

 Insert the Ethernet cable ,and select Auto get IP address to connect the Ethernet.

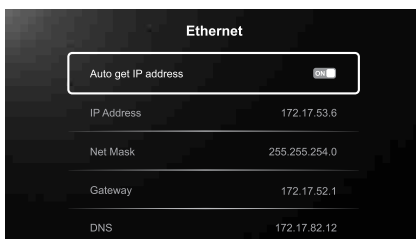

Time

 Press the ◀ / ▶ to select the Time to set.

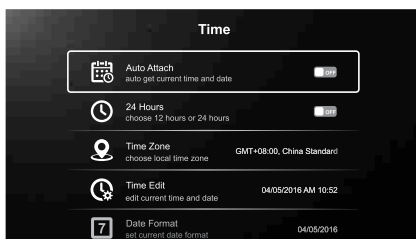



Auto Attach Get the current time and date automatically.

24 Hours Select the 12 hours or 24 hours.

Time Zone Select the local time zone.

Time Edit Edit the current time and date.

  
Date Format Set current date format.

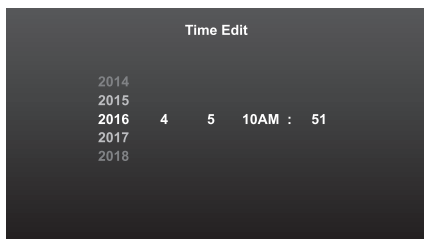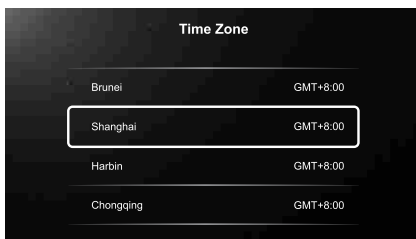

OPERATION OF FUNCTION MENU

General

Press the **General** button to select the General and set the general setting.

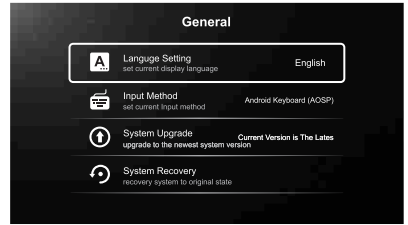


Language Setting Select current display language.

Input Method Select the Input method.


System Upgrade Upgrade to the newest system version.

 System Recovery Recovery system to original state.

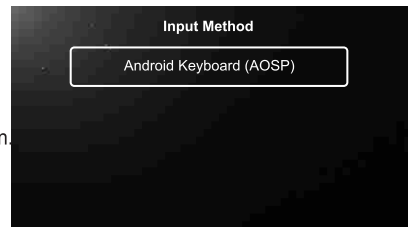

About

 Information about the TV.

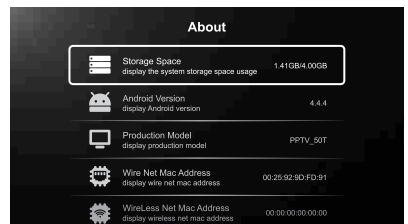

OPERATION OF FUNCTION MENU

Multimedia

Press the Input to select Media source.

 


Select the Video, and **OK** button to enter.




Music

Press the ◀ / ▶ button to select the **Music**.

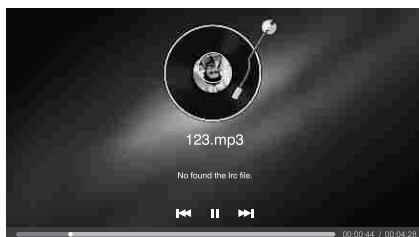


Photo

 Press the ◀ / ▶ button to select the **Photo**.

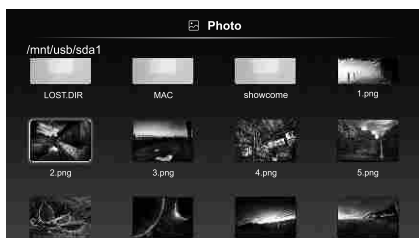

Folder

 Press the ◀ / ▶ button to select the **Folder**.

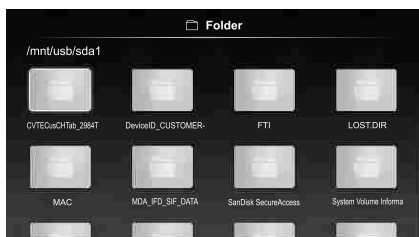

OPERATION OF FUNCTION MENU

 
Input Source

Press **SOURCE** button to enter input source .

Press the [▼] / [▲] button to select, and OK button to enter.

TV Setting

Press the **MENU** button to enter the TV Setting.

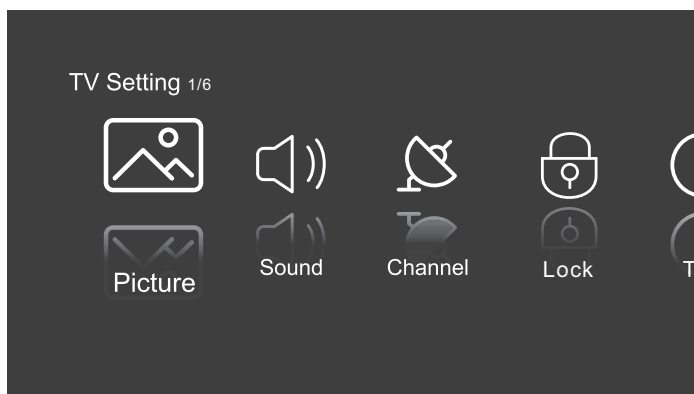

Picture


Press the to set the picture.

Picture Mode

Highlight the item and Press ENTER to enter the sub-menu, that shows the picture mode you can choose:

Standard/Dynamic/Soft/Vivid/User

- | | |
|-------------------|---|
| Contrast | Adjust the white level of the picture. |
| Brightness | Adjust darkness of black sections in the picture. |
| Color | Adjust the color intensity of the picture. |
| Sharpness | Object edges are enhanced for picture detail. |

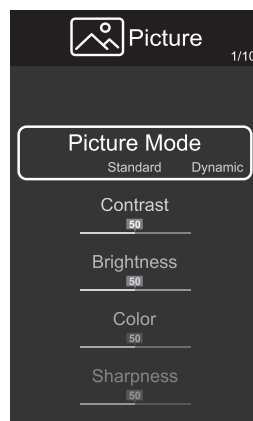 

OPERATION OF FUNCTION MENU

Picture

Hue Adjust the hue(Red,Green,Blue) of the picture.

Noise Reduction (Off/Low/Middle/High/Auto)

You can clear up the input signal by set the item.

Color Temperature

Select the color temperature that you feel comfortable.

Cool Gives white colors a blue tint.

 
Medium Gives white colors a neutral tint.

Warm Gives white colors a red tint.

Aspect Ratio


Select the suitable aspect Ratio.

DLC Select ON/OFF.

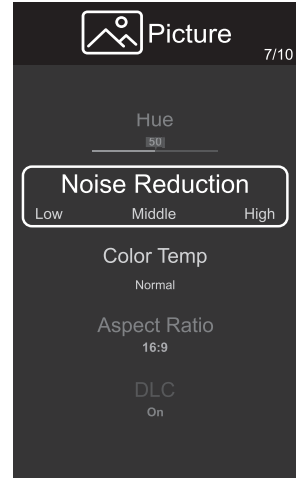

Sound

 Press the **【◀】** / **【▶】** to select sound.

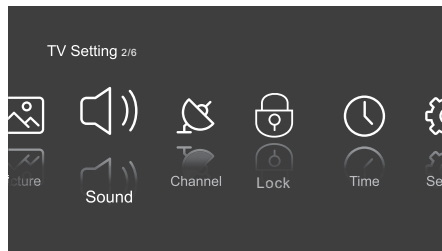

Press Enter button to enter the sub-title, and press **【◀】** / **【▶】** to adjust.

Sound Mode

Standard/Music/Theater/News/User(Only in this mode, Treble and Bass can be adjusted.)

Bass

Adjust the low frequency sounds.

Treble

 
Adjust the high frequency sounds.

Balance

Adjust the level of sound coming from the left and right speakers.


AVC

Press L/R to set or cancel. When set on, it will level out the sound being heard when sudden changes in volume occur during commercial breaks or channel changes.

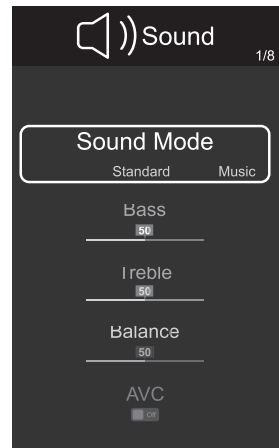


OPERATION OF FUNCTION MENU

 - SPDIF** Select to **OFF/ RAM /PCM** Digital Interface.
- Surround** Select to **ON/OFF** Surround.
- Audio Only** Select to **ON/OFF**.

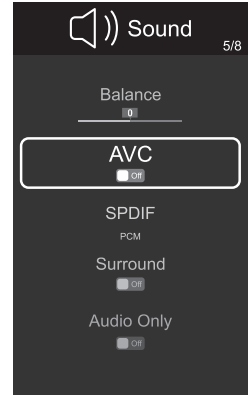


Channel

 Press **【◀】 / 【▶】** to select Channel.

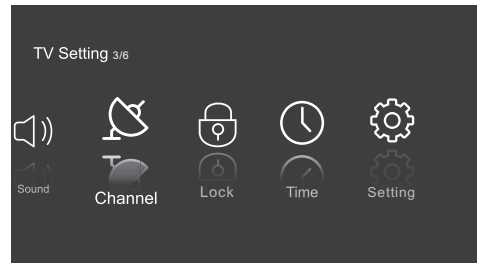

Press **Enter** button to enter the sub-title, and press **【◀】 / 【▶】** to adjust.

 - Antenna Type** Select the Antenna Type.
- Auto Scan** Searching the programs automatically.
- Analog Manual Scan** Searching the programs by input the frequency.
- Digital Manual Scan** Searching the DTV programs by input the frequency.
- Channel List** List the programs.
- Preferences** Set your preference about audio.

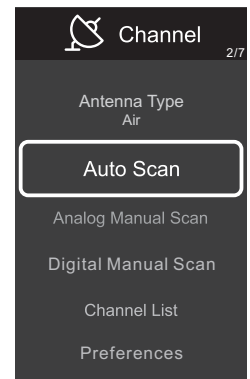




OPERATION OF FUNCTION MENU

Auto Scan

Auto Scan will search for available channels and program receivable channels.

Press $\blacktriangledown/\blacktriangle$ to select Auto Tuning, then press OK to start auto search.

   If you want to stop searching, press **EXIT** to stop searching.

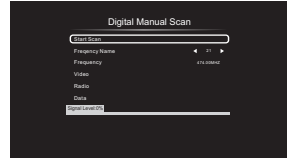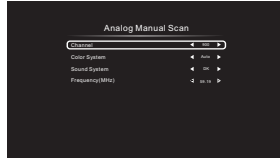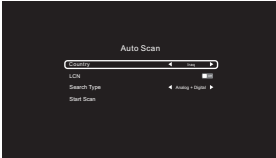


Channel Set the channel number.

 
Color system Select the color system. **(PAL/SECAM/NTSC)**

Sound System Select the sound system. **(DK/BG/I)**

Frequency Input the frequency of the channel.



Press $\blacktriangleleft/\blacktriangleright$ select Channel list page, Press $\blacktriangledown/\blacktriangle$ to select the channel list.

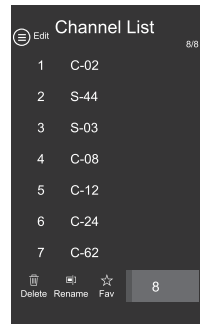 **Edit** Press the Menu button to access channel editing functions.





 **Skip** Press $\blacktriangleleft/\blacktriangleright$ to select  press the OK button to select the channel is set to skip channels.

 **Delete** Press $\blacktriangleleft/\blacktriangleright$ to select  press the OK button to delete the selected channel.

 **Rename** Press $\blacktriangleleft/\blacktriangleright$ to select  press the OK button to enter the rename edit.



 
 **Fav** Press $\blacktriangleleft/\blacktriangleright$ to select  press the OK button to select the channel to the favorite channel.

Hearing Impaired Set On / Off.

Audio Description Set On / Off.

Audio Language Select the sound language of the DTV program output.


Subtitle Language Select the subtitle language for DTV program output.

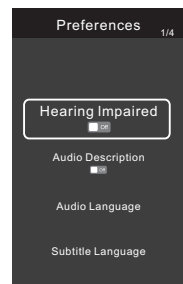


OPERATION OF FUNCTION MENU

Lock

 Press **【◀】 / 【▶】** to select Lock.
 Password: Enter the default password "0000" to go to the Lock function menu if you have set "System Lock" to "On".

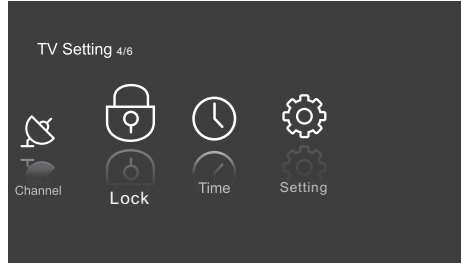


 - System Lock** Set On / Off.
- Change Password** Set new password.
- Parental Control** Set the level that allows the child to watch the program.

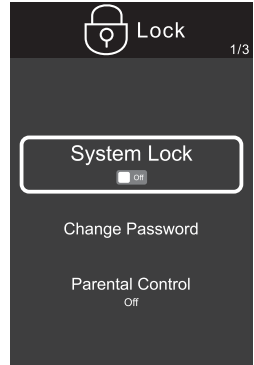

Time

 
Press **【◀】 / 【▶】** to select Time.

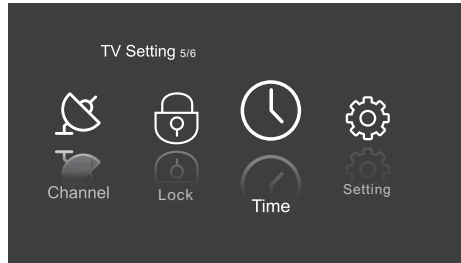

Press Enter button to enter the sub-title, and press **【◀】 / 【▶】** to adjust.

OSD Timer
 Select OSD Timer ,and **【◀】 / 【▶】** to adjust.
 (Available: OFF, 5sec, 15sec, 30sec)

 
Sleep Timer
 Select Sleep Timer ,and **【◀】 / 【▶】** to adjust.
 (Available:OFF, 15min, 30min, 45min, 60min, 90min, 120min, 240min).

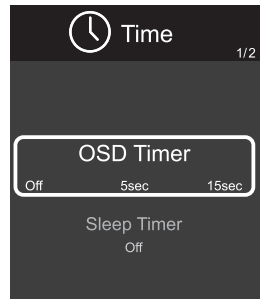

OPERATION OF FUNCTION MENU

Setting

 Press **【◀】** / **【▶】** to select Setting.

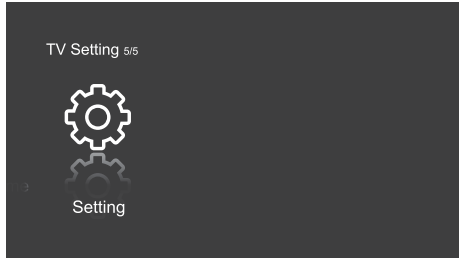

Press Enter button to enter the sub-title, and press **【◀】** / **【▶】** to adjust.

OSD Language

Select OSD Language, and **【◀】** / **【▶】** to adjust.

Blue Screen

Set the background color to blue or black when no input signal.

PVR Setting

Digital program recording settings.

Teletext

 
Set the graphic language.

HDMI CEC Setup

Set the CEC ON/OFF.

Reset

Recall the default setting.

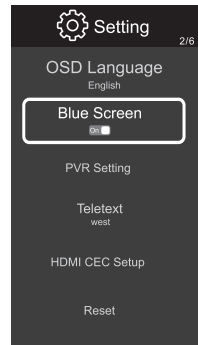


HDMI CEC Setup

Press **【▼】** / **【▲】** to select HDMI CEC Setup.



Reset

 Press **【▼】** / **【▲】** to reset the default setting.

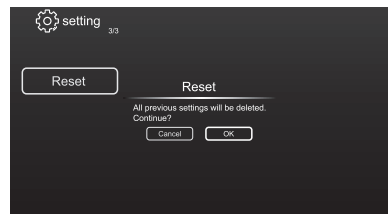

TROUBLE SHOOTING GUIDE

Many apparent malfunctions are caused slight misadjustments of the regular controls of your unit or equally simple causes. If any difficulty arises through normal use of your unit, check the list of common problems in the list below.

If the problem persists, unplug your unit and contact your dealer.

SYMPTOM	METHODS OF CHECKING OR ADJUSTING
No picture or sound	Check the AC plug is in the socket. Check house circuit breaker is in the ON position.
Picture normal but no sound	Check that the volume is not at its minimum setting or on MUTE.
Remote control not working	Check that TV set power is ON. Check batteries are operational and inserted correctly. Make sure infrared receiving window on TV is not exposed to strong lighting or blocked in any way.
Cannot receive any TV signal	Ensure SOURCE switch is set to TV. Check aerial location and connection. Re-check your tuning method.
No program signals output from external source	Check SOURCE button to make sure it is in the correct position for reception.
Contrast and brightness problems	Make necessary adjustments to relevant settings.
Intermittent poor contrast and colour fading on all channels	Check aerial positioning
Dotted lines or stripes appear on screen	There may be Interference from another electrical product. Move appliance if it persists.
Snow on screen	Check aerial for broken circuit, loose connection or any visible damage.
Double images or 'ghosting'	Check aerial location and direction - strong winds may cause it to move. Also check whether mountains or tall buildings may be the problem. Minor adjustment of the direction of your antenna should keep the ghosting to a minimum.

Note: External rooftop/antenna adjustment should be left to a suitably qualified person.

SPECIFICATIONS

Aspect Ratio	16 : 9
System	PAL/SECAM BG/DK/I, NTSC Playback
Base impedance	75 Ω (Unbalance)
Receiving TV Band	All Channels Receiveable
AC Supply Voltage	100-240V~ 50/60Hz

Note: Part of the design and the specification may be changed without prior notice.

INFRA-RED REMOTE CONTROL

Features: Full function remote control

Effective Distance Power: 8 metres

Power Supply: DC 3V (Two batteries, size AAA, recommend use alkaline type batteries)



Manufactured under license from Dolby laboratories.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby laboratories.



LED TELEVIZORI



HDMI[®]
HIGH DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU-SMART TV



Molimo Vas da detaljno proučite ovo uputstvo pre upotrebe televizora i da ga čuvate radi kasnije upotrebe

BEZBEDNOSNA UPUTSTVA

VAŽNA BEZBEDNOSNA UPUTSTVA

UPOZORENJE

- KAKO BI SPREČILI OPASNOST OD POŽARA ILI STRUJNOG UDARA NE KORISTITE OŠTEĆEN PRODUŽNI KABL, RAZDELNIK ILI NEKI DRUGI PRIKLJUČAK ZA STRUJU.
- KAKO BI SPREČILI OPASNOST OD POŽARA ILI STRUJNOG UDARA NE IZLAŽITE OVAJ APARAT VLAZI ILI KIŠI.

 <p>Znak munje unutar jednokrakog trougla upozorava korisnike na opasne i neizlovene delove pod naponom unutar uređaja koji može biti dovoljne jačine da predstavlja opasnost od strujnog udara.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>UPOZORENJE: Kako bi umanjili rizik od strujnog udara ne skidajte poklopac (ili zadnji deo). Unutar uređaja nema delova koje možete sami servisirati. Obratite se kvalifikovanim serviserima.</p>	 <p>Znak uzvika unutar jednokrakog trougla obaveštava korisnike na postojanje važnih uputstava za upotrebu, kao i uputstava o održavanju u literaturi koja prati proizvod.</p>
---	--	---

Uređaj ne bi trebali da izlažete vodi, takođe na uređaj ne stavljajte posude ispunjene tečnošću.

OPREZ

- Opasnost od eksplozije ako baterije nisu pravilno promenjene.
- Zamenu izvršiti samo sa odgovarajućim tipom baterije.
- Ne izlažite baterije direktnom suncu ili izvoru toplote.
- Osigurajte odgovarajuće odlaganje istrošenih baterija.
- Kako bi smanjili rizik od strujnog udara održavajte proizvod samo kako je opisano u korisničkom uputstvu.
- Unutar proizvoda nema delova koje korisnik može sam servisirati. Ne otvarajte kućište proizvoda.

VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnu površinu može potencijalno biti opasan usred pada. Mnoge povrede, naročito dece, mogu se izbeći preuzimanjem jednostavnih mera kao što su:

- Korišćenje kabineta i stalaka preporučenih od strane proizvođača televizora.
- Korišćenjem nameštaja koji će biti bezbedna potpora za televizor.
- Ne stavljati televizor na visoki nameštaj kao što su kredenac ili orman za knjige, bez učvršćivanja istih za odgovarajuću potporu.
- Ne stavljati tkaninu ili bilo koji drugi material između televizora i nameštaja na koji je postavljen.
- Upoznajte decu sa opasnostima penjanja na nameštaj kako bi dohvatili televizor.



Sigurnosna montaža

Koristite pojas kako bi osigurali da se televizor ne prevrne unapred.



 
BEZBEDNOSNA UPUTSTVA

1. **Pročitajte uputstva** – Pre nego što počnete da koristite uređaj pročitajte sva bezbednosna uputstva kao i uputstva za upotrebu uređaja.
2. **Upamtite uputstva** – Upamtite sva bezbednosna uputstva i uputstva za upotrebu uređaja radi buduće upotrebe.
3. **Obratite pažnju na upozorenja** – Pridržavajte se svih upozorenja koja se nalaze na uređaju kao i upozorenja koja se tiču upotrebe ovog proizvoda.
4. **Sledite uputstva** – Treba da sledite sva uputstva koja se tiču upotrebe uređaja.



5. **Voda i vlaga** – Ovaj uređaj ne koristite u blizini vode.
6. **Kolica i stalak** – Uređaj koristiti samo sa kolicima i stalcima koji su preporučeni od strane proizvođača.
7. **Montaža na zid ili plafon** – Uređaj montirati na zid ili plafon samo u skladu sa uputstvima proizvođača.
8. **Ventilacija** – Uređaj postaviti tako da njegova lokacija i položaj ne ometaju njegovu ventilaciju.
9. **Toplota** – Uređaj postaviti dalje od izvora toplote kao što su radijatori, šporeti...
10. **Izvor napajanja** – Uređaj treba da bude povezan sa izvorom napajanja samo kako je navedeno u uputstvu za upotrebu ili na uputstvima koja se nalaze na samom uređaju.
11. **Uzemljenje i polarizacija** – Preduzeti mere predostrožnosti.
12. **Kabl za napajanje i zaštita** – Kabl za napajanje treba da bude postavljen tako da je mala verovatnoća da se gazi i priklješti predmetima.
13. **Čišćenje** – Uređaj čistiti samo po uputstvu proizvođača.
14. **Dalekovod** – Postaviti spoljnu antenu dalje od dalekovoda i strujnih kablova.
15. **Spoljna antena i uzemljenje** – Ako je spoljna antena povezana sa uređajem, antenski sistem mora biti uzemljen kako bi pružio zaštitu od napona i nagomilanog statičkog elektriciteta.
16. **Period kada se uređaj ne koristi** – Kabl za napajanje uređaja isključiti iz utičnice ako se uređaj ne koristi duže vreme.
17. **Predmeti i prodor tečnosti** – Vodite računa da predmeti ne padaju na uređaj, kao i da ne bude poliven tečnošću.
18. **Slučajevi kada je potreban servis** – Uređaj treba servisirati kvalifikovano osoblje u sledećim slučajevima:
 - Kabl za napajanje ili utičnica su oštećeni.
 - Predmeti su pali na uređaj ili je na njega prosuta tečnost.
 - Uređaj je izložen kiši.
 - Uređaj ne radi normalno ili su nastale promene u performansama.
19. Ne prekrivati ventilacione otvore sa predmetima kao što su novine, milje, zavese i slično.
Ne stavljati izvore otvorenog plamena, kao što su sveće, na uređaj.
Uređaj priključiti isključivo u utičnicu sa uzemljenjem.

BEZBEDNOSNA UPUTSTVA



Upozorenje

Ovaj proizvod koristi visoki napon. Ne skidajte poklopac uređaja. Prepustite servisiranje kvalifikovanom osoblju.



 
Upozorenje

Da bi izbegli požar ili strujni udar ne izlažite uređaj kiši ili vlazi.



Upozorenje

Ne pokušavajte da ugurate predmete u otvore uređaja. Ne polivajte uređaj sa tečnošću.

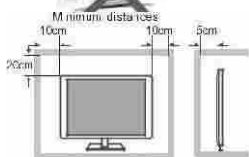

Oprez

Ako televizor postavljate u zatvoreni pregradak ili sličan prostor morate poštovati minimalnu udaljenost (slika levo). Nagomilana toplota može smanjiti vek trajanja vašeg televizora i takođe može biti opasna.



Oprez

Nikada nemojte stajati na, naslanati se na ili iznenada gurnuti uređaj ili postolje na kome se nalazi. Obratite posebnu pažnju na decu.



 
Oprez

Ne postavljajte uređaj na nestabilna kolica, stalak, policu ili sto. Moguće su povrede i oštećenje televizora kao rezultat njegovog pada.



Oprez

Ako se proizvod ne koristi duže vreme preporučljivo je isključiti stjuni kabl iz izvora napajanja.

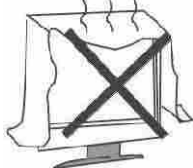

Oprez

Izbegavajte izlaganje uređaja direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge uređaje koji emituju toplot kao što su kasetofoni, video plejeri i audio pojačavači. Ne pokrivajte ventilacione otvore na zadnjem delu uređaja. Ventilacija je neophodna kako bi se sprečio kvar. Nemojte prignječiti strujni kabl sa televizorom



Oprez

Panel ovog proizvoda je od napravljen stakla. Može pući ako se televizor ispusti ili ako se na njega deluje silom. Korisnici treba da vode računa o polomljenom staklu u slučaju da panel pukne.



SADRŽAJ

BEZBEDNOSNA UPUTSTVA

..... 1-3

OPIS KOMANDNIH DUGMIĆA I KONEKTORA

..... 5-6

OPERACIJE DALJINSKOG UPRAVLJAČA

..... 7-8

KONEKCIJE

..... 9

RAD MENIJA FUNKCIJA I

..... 10-19

VODIČ ZA REŠAVANJE














..... 20

SPECIFIKACIJE

..... 21

OPIS KONTROLNIH DUGMIĆA I KONEKTORA

KONTROLNI DUGMIĆI

NAZIV DUGMIĆA	VRSTA DUGMIĆA				INSTRUKCIJE ZA UPOTREBU
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	PRIKAZIVANJE GLAVNOG MENIJA ZA ODABIR UNKCIJA TV UREĐAJA (DIGITALNI, ANTENSKI, SMART OPCIJA, MEDIA - USB, HDMI..)
MENU BUTTON	MENU			MENU	PRIKAZIVANJE MENIJA TV UREĐAJA
VOLUME UP BUTTON	VOL+				POJAČAVANJE ZVUKA
VOLUME DOWN BUTTON	VOL-				UTI AVANJE ZVUKA
PROGRAM UP BUTTON	CH+		C/P ▲		PREBACIVANJE NA VIŠI KANAL
PROGRAM DOWN BUTTON	CH-		C/P ▼		PREBACIVANJE NA NIŽI KANAL
STANDBY BUTTON	POWER			STANDBY	UKLJUČIVANJE/ISKLJUČIVANJE TV UREĐAJA DOK JE U REŽIMU MIROVANJA

NAPOMENA

1. Kontrolni dugmići su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
2. Broj i raspored kontrolnih dugmića može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom.


OPIS KONTROLNIH DUGMIĆA I KONEKTORA

NAZIV ULAZA/IZLAZA	VRSTA IKONICE ZA ULAZ/IZLAZ			INSTRUKCIJE ZA UPOTREBU
	1	2	3	
AV IN				AUDIO/VIDEO ULAZ
COMPONENT IN			/	YPBPR ULAZ, ZA POVEZIVANJE EKSTERNIH UREĐAJA (DVD, PLAYER, KUĆNI BIOSKOP...)
AV OUT			/	AUDIO/VIDEO IZLAZ
AUDIO OUT			/	AUDIO IZLAZ ZA POVEZIVANJE EKSTERNIH ZVUČNIKA
TERMINALANTENNA (75 OHM)			/	POVEZIVANJE ANTENE ZA ZEMALJSKE KANALE (KROVNA/SOBNJA ANTENA)
TERMINALANTENNA (75 OHM)				POVEZIVANJE SATELITSKE ANTENE
AUDIO IN				AUDIO ULAZ
VIDEO OUT				VIDEO IZLAZ
COAXIAL OUT				DIGITALNI IZLAZ ZA EKSTERNE ZVUČNIKE
VGA				VGA ULAZ ZA POVEZIVANJE RAČUNARA I TV UREĐAJA
VGA AUDIO IN				VGA IZLAZ ZA AUDIO POVEZIVANJE
HDMI				HDMI ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
USB IN				USB ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA I MEMORIJA
EARPHONE OUT				IZLAZ ZA POVEZIVANJE SLU ALICA
SCART				SCART ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
OPTICAL				OPTIČKI IZLAZ ZA POVEZIVANJE UREĐAJA KOJI KORISTE OPTIČKI KABLI
RJ45 IN				ZA POVEZIVANJE TV UREĐAJA NA INTERNET (LAN MREŽA)
DC IN				OPCIONO ULAZ ZA POVEZIVANJE NA ADAPTER OD 12V
TF IN				ULAZ ZA OČITAVANJE MEMORIJSKE KARTICE
PCMCIA				ULAZ ZA CI (CI)

1.Svi ulazi / izlazi su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
2.Broj ulaza/izlaza može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom

OPERACIJE DALJINSKOG UPRAVLJAČA

 Daljinski upravljač se može koristiti samo na udaljenosti na kojoj postoji prijem signala. Pre potrebe, uverite se da nema prepreka izmeđ u daljinskog upravljača i TV ure aja.

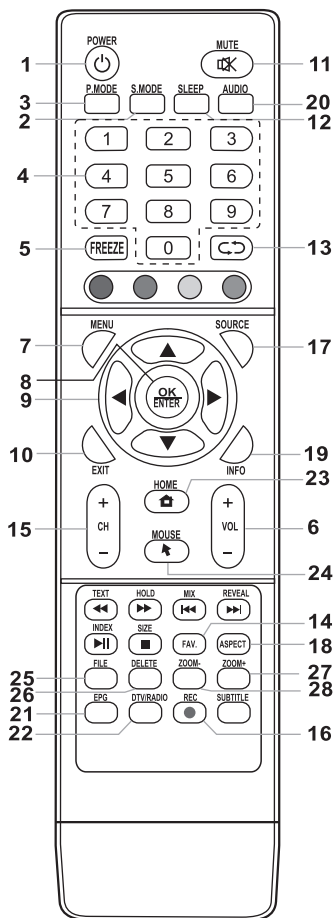

1. POWER BUTTON

uklju enje/isklju enje TV ure aja

2.S.MODE BUTTON

dugme za podešavanje zvu nih efekata

3.P.MODE BUTTON

dugme za odabir efekata slike

4.NUMBER BUTTONS

pritisnite odre eno dugme za odabir programa koji želite ili kako biste uneli lozinku

5. FREEZE BUTTON

zamrznite sliku

6.VOL+/VOL- BUTTON

poja avanje/utišavanje zvuka

7.MENU BUTTON

pritisnite "MENU" dugme za ulazak u glavni meni. Za izlaz, pritisnite ponovo ili koristite dugme "EXIT"

8.OK BUTTON

pritisnite O d a potvrdite ili u ete u pod-meni

9. UP, DOWN, LEFT, RIGHT ARROW BUTTON

pritisnite kako biste odabrali ili podesili željenu ikonu na meniju TV ure aja

10.EXIT BUTTON

pritisnite za izlaz

11.MUTE BUTTON

pritisnite za isklju enje zvuka. Pritisnite ponovo za uklju enje zvuka

12.SLEEP BUTTON

pritisnite za podešavanje automatskog isklju enja TV ure aja u odre eno vreme

13.RETURN BUTTON

pritisnite za prebacivanje na prethodni kanal koji ste gledali

14.FAV.BUTTON

prikazivanje omiljene programske liste

15.CH+/CH- BUTTON

promena TV kanala

16.REC BUTTON

Snimanje sadržaja na USB

17.SOURCE BUTTON

prikazivanje menija za odabir funkcije TV ure aja (digitalni, antenski, smart opcija, media – USB, HDMI...)

18.ASPECT BUTTON

pritisnite dugme za odabir rezolucije slike

19.INFO BUTTON

prikazivanje informacija o trenutnom statusu signala, kvaliteta slike, programa...

20. AUDIO BUTTON (Optional)

OPCIONO – odabir zvuka sa eksternih zvu nika

21.EPG BUTTON

OPCIONO – otvaranje/zatvaranje elektronskog programskog vodi a

22.DTV/RADIO BUTTON – OPCIONO

prelazak sa DTV na radio program

23. HOME BUTTON

Direktan ulazak u Smart, Media, USB itd...

24. MOUSE BUTTON

Opcija prebacivanja kursora sa miša na tastaturu i obrnuto

25. FILE BUTTON

Pritisnite dugme za direktan pregled nacina USB

26. DELETE BUTTON

Brisanje datoteke u smart i USB modu.

27. ZOOM + BUTTON

Zumiranje slike u Smart modu

28. ZOOM – BUTTON

Pritisnite dugme za smanjenje slike u Smart modu

Napomena: EPG, DTV/RADIO, REC funkcije imaju efekat samo u DTV modu.

OPERACIJE DALJINSKOG UPRAVLJAČA

TELETEXT FUNKCIJA (Opciono)

1) TEXT BUTTON Pritisnite dugme za prelazak sa TV slike na Teletext, ukoliko TV stanica podržava isti.

2) REVEAL BUTTON Za prikazivanje skrivenih karaktera

3) MIX BUTTON Dugme za prikazivanje Teletext i TV slike zajedno ili samo Teletext slike. Ovo dugme omogućeva korisniku da unese digitalne pod-strane za trenutnu stranu. Ukoliko sledeće digitalne strane nisu unesene za 5 sekundi, prethodni broj strane će biti ponovo pozvan i prikazan na ekranu.

4) RED/GREEN/YELLOW/BLUE BUTTONS

Ova dugmeta u Teletext modu služe za brzo prebacivanje (zumiranje, prebacivanje na sledeću stranu...)

5) UP/DOWN BUTTON Pomeranje stranice gore/dole u teletext modu

6) 0, 1, 2 9 BUTTON Odabir određene teletext stranice uz pomoć numerisanih dugmića.

7) HOLD BUTTON Neke teletext informacije se nalaze na više stranica koje se automatski menjaju nakon određeno vreme. Pritisnite dugme "HOLD" da zaustavite promenu stranica. Za nastavak promene stranica, pritisnite ponovo "HOLD"

8) SIZE BUTTON Dugme za povećanje dimenzija karaktera i prikazivanje pola teletext strane. Svaki pritisak će prikazivati više i više do normalne strane.

9) INDEX BUTTON Pritisnite ovo dugme kako biste videli Index stranu u teletext modu. Prikaz teletext vremena.

USB FUNKCIJA (Opciono)

1) ◀/▶ BUTTON

Premotajte scenu ili muziku

2) ◀▶/▶▶ BUTTON

Vraćanje na prethodni ili prelazak na naredni fajl

3) ▶|| BUTTON

po etak / pauza

4) ■ BUTTON

Zaustavljanje. Pritisnite da potvrdite akciju (Na primer: kopiraj, nalepi itd.). Ponavljanje scene ili muzike u reprodukciji filмова na USB-u.

5) SUBTITLE BUTTON

Otvora ili zatvara funkciju titla (titl mora biti preuzet sa interneta i mora biti identičan kao na fajlu, kao i kompatibilan sa fajlom koji podržava)

Note: A USB device must already be connected. Napomena: USB uređaj mora biti povezan.

 
INSTALACIJA BATERIJA U DALJINSKI UPRAVLJAČ

1. Otvorite poklopac odeljka za baterije.

2. Stavite dve AAA baterije (uskе) od 1,5V. Budite sigurni da se polaritet baterija (+ i -) podudara sa polaritetom unutar odeljka.


Napomena

- Preporučujemo upotrebu alkalnih baterija
- Rok trajanja baterija može biti i duži od jedne godine, u zavisnosti od toga koliko često se daljinski upravljač koristi. Za najbolje performanse, baterije treba menjati bar jednom godišnje ili onda kada po nekoj stvari ometaju rad daljinskog upravljača.
- Budite sigurni da su baterije okrenute u dobrom pravcu, kao na slici.
- nemojte mešati stare i nove baterije ili različite vrste baterija
- stare baterije mogu iscuriti i oštetiti daljinski upravljač. Uvek uklonite oslabljene baterije.

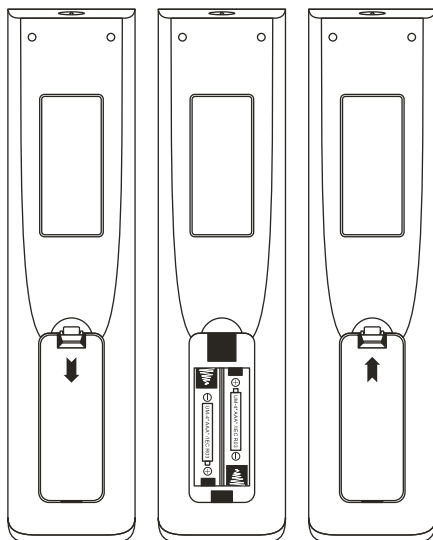

KONEKCIJE

 INSTALACIJA ANTENE

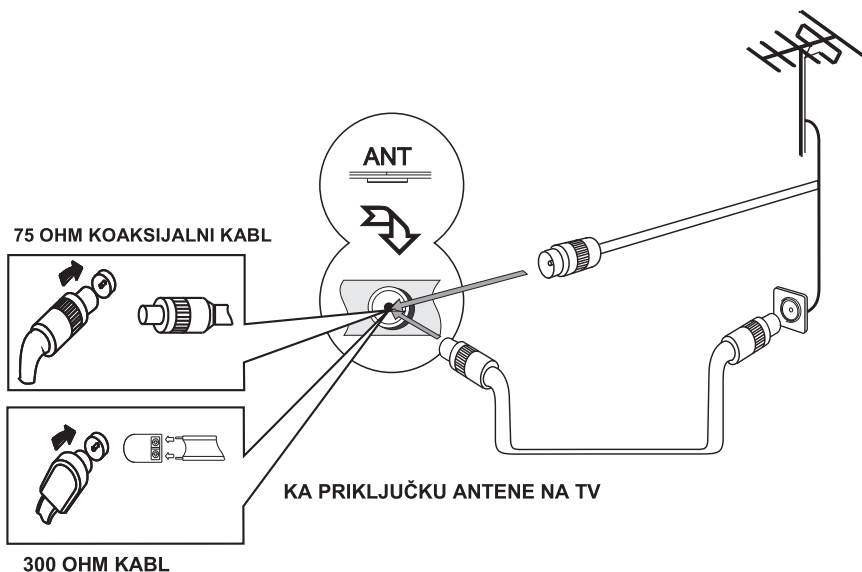

Povežite 75 OHM koaksijalni kabl od antene do antenskog priključka na zadnjem delu televizora kao što je prikazano na slici.

Obaveštenje:

- Za bolji prijem, naročito u ruralnim oblastima, gde ima puno smetnji, preporučljivo je korišćenje spoljne antene na krovu.
- Za UHF TV prijem, koristite posebnu UHF antenu. Konsultujte se sa lokalnim prodavačem.
- Pri korišćenju 300 OHM kabla, koristite 300 OHM - 75 OHM adapter za pravilnu konekciju sa antenskim priključkom televizora.

PRIKLJUČAK ZA NAPAJANJE

- Priključite kabl za napajanje uređaja u odgovarajuću utičnicu.
- Pritisnite dugme POWER na daljinskom upravljaču da uključite/isključite TV.

Obaveštenje:

- Ovaj uređaj radi sa neizmeničnim napajanjem od 100-240V~ 50/60Hz.
- Kada isključujete kabl za napajnja uradite to pomoću utikača, a ne samog kabla.

UPOZORENJE:

 
Prilikom nestanka struje isključite uređaj iz napajanja. Kako bi uštedeli struju isključite TV iz napajanja ako ga ne koristite duži vremenski period.

RAD MENIJA FUNKCIJA I


GLAVNOG MENIJA

Glavni meni korisni kog interfejsa je kako sledi:

Pritisnite dugme ▼/▲ / ◀ / ▶ za izbor menija

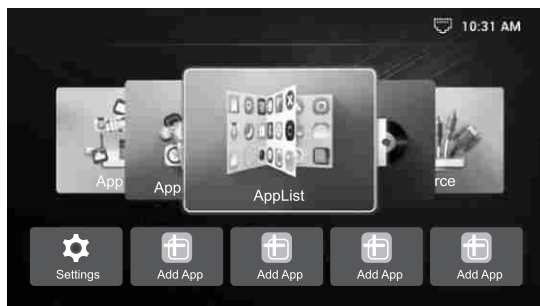

 Pritisnite dugme OK kako biste ušli u postavke

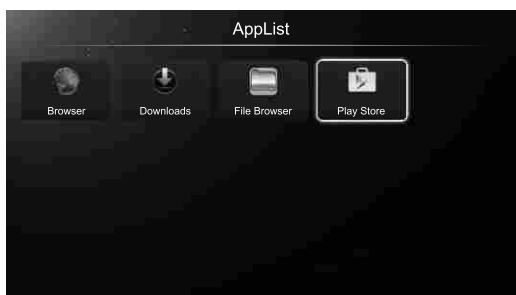

Postavke sistema

Izaberite postavke u glavnom meniju za ulaz u postavke sistema



 
Mreža



RAD MENIJA FUNKCIJA


Beži na mreža

Izaberite beži nu mrežu i pritisnite lozinku za povezivanje

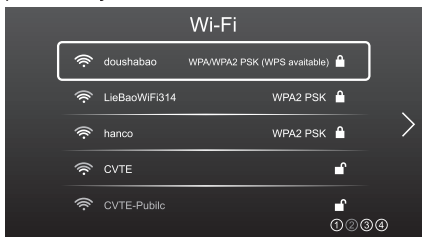


Beži na mreža

 Ubacite Ethernet kabel i izaberite automatsko dobijanje IP adrese za povezivanje na Ethernet

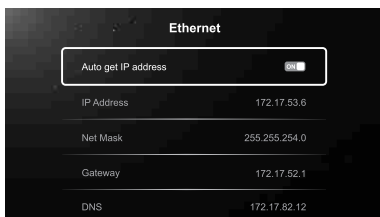

Vreme

 Pritisnite ◀ / ▶ za izbor vremena za postavljanje

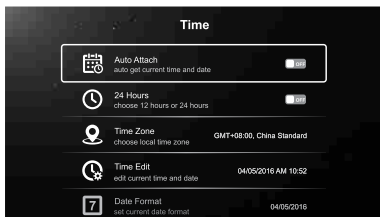

Automatsko

Povezivanje: Dobijte automatski trenutni datum i vreme

24 Sata:

 
 
Izaberite 12 ili 24 asa

Vremenska zona:

Izaberite lokalnu vremensku zonu

Ure ivanje vremena: Uredite trenutno vreme i datum


Format datuma: Postavite format datuma.

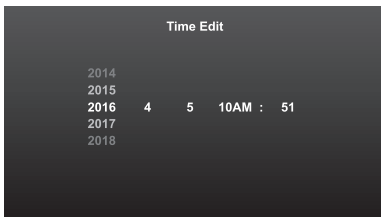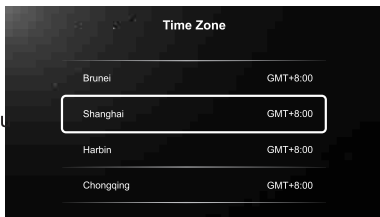

RAD MENIJA FUNKCIJA

Opšte

Molimo da izaberete General (Opšte) i postavite opšte postavke

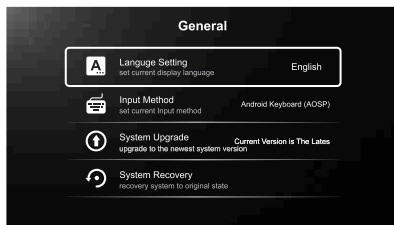


Opšte

Izaberite trenutni prikaz

Na in Ubacivanje Jezika Izaberite na in umetanja


Nadogradnja Ažurirajte do najnovije verzije sistema sistema

 Oporavak Oporavak sistema na originalno stanje

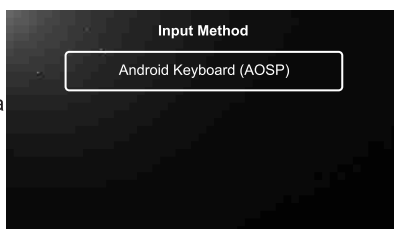

O TV-u

 Informacije o TV-u

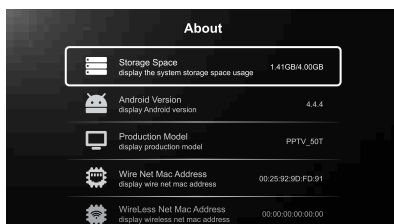

RAD OPERATIVNOG MENIJA

Multimedia

Pritisnite Input (Ulaz) za izbor izvora medija.



Izaberite Video (Video) i pritisnite na dugme OK za ulaz.



Multimedia

Pritisnite dugme ◀ / ▶ za izbor muzike


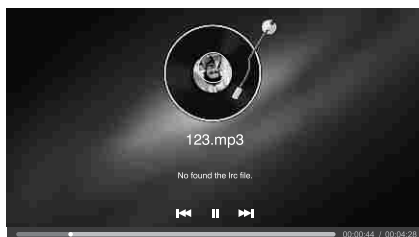 



Photo (fotografija)

 Pritisnite ◀ / ▶ dugme za izbor fotografija

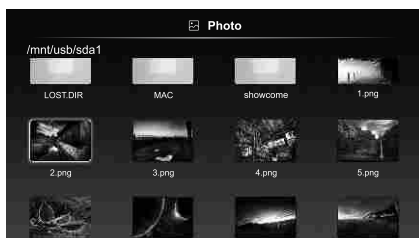

Mapa

 Pritisnite ◀ / ▶ dugme za izbor mape

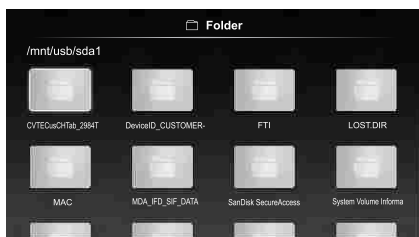

RAD OPERATIVNOG MENIJA

 
Izvor ulaza

Pritisnite dugme **SOURCE (IZVOR)** da biste ušli u izvor ulaza.

Pritisnite dugme **【▼】 / 【▲】** za izbor i dugme **OK** za ulaz.

Postavke TV-a

Pritisnite dugme **MENU (MENI)** da biste ušli u postavke TV-a

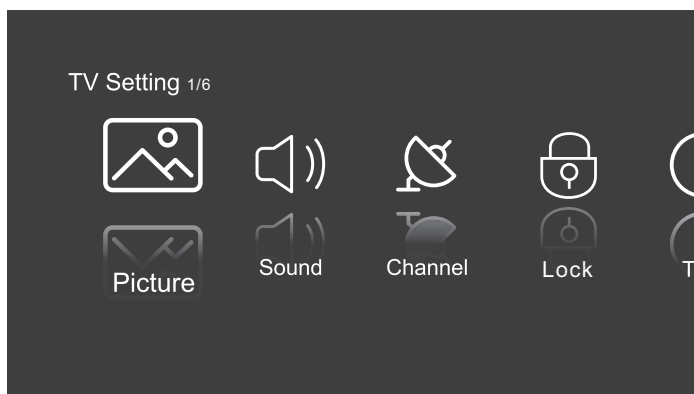

Slika

Pritisnite za postavljanje slike

Na in rada Slika

Istaknite stavku i pritisnite **ENTER (ULAZ)** za ulaz u podmeni koji pokazuje na in rada Slika koji možete izabrati Standard (Standardni)/Dynamic (Dinami ni)/SoftNivid (SoftNivid)/User (Korisni ki)

 
Kontrast Postavite nivo beline slike

Svetlina Postavite tamno u crnih delova na

slici

Boja Postavite intenzitet boje slike

Oštrina Rubovi predmeta su poboljšani zbog detalja

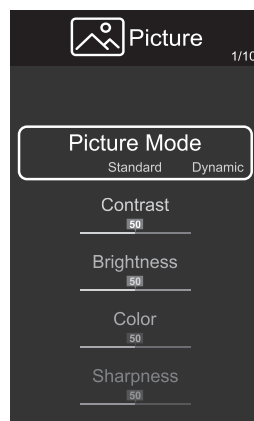

RAD OPERATIVNOG MENIJA

Slika

Nijansa Podesite boje (crvena, zelena, plava) na slici.

Smanjenje buke (Isklju eno / Niska / Srednja / HighfAuto)

Možete po istiti ulazni signal postavljaju i stavku.

Temperatura boje

Izaberite temperaturu boje da se ose ate ugodno.

- Hladna** Daje bijeloj boji plavu nijansu.
- Srednja** Daje bijeloj boji neutralnu nijansu
- Topla** Daje bijeloj boji crvenu nijansu.

 
Format prikaza

Izaberite odgovaraju i format prikaza

DLC Odaberite ON (UKLJU ENO) / OFF (ISKLJU ENO).

Zvuk

Pritisnite [◀] / [▶] za izbor zvuka.

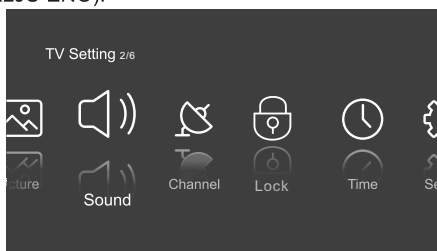

Pritisnite tipku Enter (Ulaz) za ulazak u pod-naslov I pritisnite [◀] / [▶] za podešavanje.

Na in rada zvuk

Standard / Muzika / Pozorište / Novosti / Korisnik (samo u ovom na inu rada, Visoki ton i Niski ton može se podesiti).

Niski ton

Podesite niske zvukove frekvencije.

Visoki ton

 
 
Podesite visoke zvukove frekvencije.

Ravnoteža

Podesite nivo zvuka koji dolazi iz levog i desnog zvu nika.


AVC

Pritisnite UR da biste postavili ili otkazali. Kada je postavljena, ona e izjedna iti zvuk koji se uje kada do e do nagle promene u volumenu tokom pauze za reklame ili promene kanala.

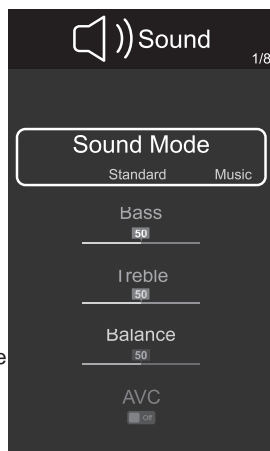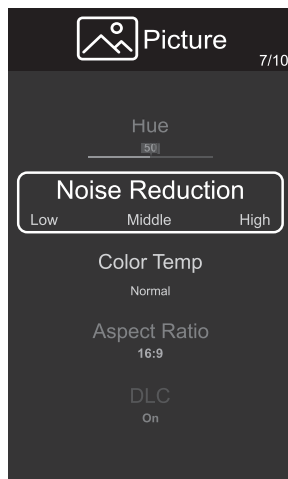


RAD MENIJA FUNKCIJA

 - SPDIF** Izaberite za **OFF/RAM/PCM**/digitalni interfejs
- Okruženje** Izaberite za uklju enje/isklju enje okruženja
- SAMO AUDIO** Izaberite za uklju ivanje/isklju ivanje

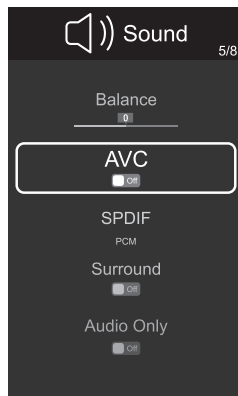


Kanal

 Pritisnite **【◀】 / 【▶】** za izbor kanala

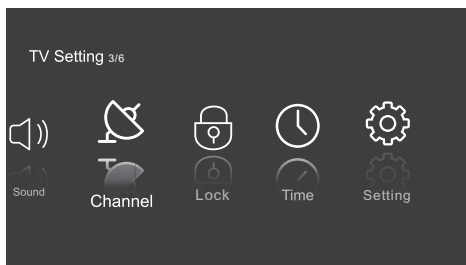

Pritisnite tipku **Enter** (Ulaz) za ulazak u pod-naslov I pritisnite **【◀】 / 【▶】** za podešavanje.



 
- Vrsta antene** Izaberite vrstu antene.
- Automatsko skeniranje:** Automatska pretraga programa
- Analogno ru no skeniranje:** Pretraga programa po ulazu frekvencije
- Digitalno ru no skeniranje:** Pretraživanje DTV programa
- Lista kanala** Lista programa
- Preferencije** Postavite audio

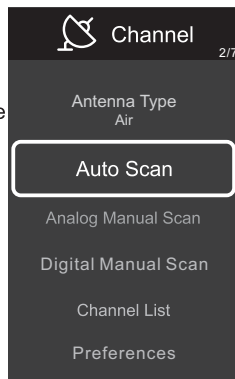

RAD OPERATIVNOG MENIJA

Automatsko Skeniranje

   
Automatsko skeniranje e pretražiti dostupne kanale i kanale koji mogu primiti programe. Pritisnite ▼/▲ za izbor automatskog podešavanja, zatim pritisnite **OK** za pokretanje automatskog traženja. Ako želite prestati tražiti, pritisnite **EXIT (IZLAZ)** za prekid traženja.

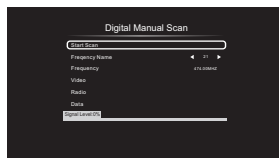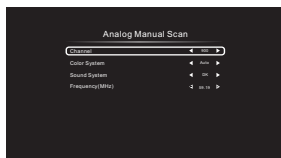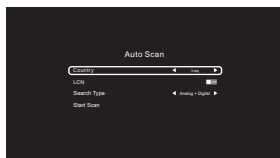

- Kanal:** izaberite broj kanala
- Sistem boje** Izaberite sistem boje (**PAL/SECAM/NTSC**)
- Sistem zvuka** Izaberite sistem zvuka (**DK/BG/I**)
- Frekvencija** Unesite frekvenciju kanala.

Pritisnite ◀ / ▶ za izbor ▼ / ▲ pritisnite dugme OK za brisanje izabranog kanala

  Pritisnite dugme Menu (Meni) za pristup funkcijama ure ivanja kanala

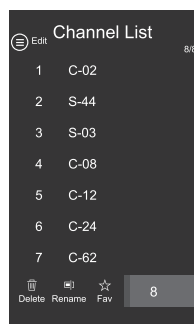

 Pritisnite ◀ / ▶ za izbor  pritisnite dugme OK za izbor kanala i preskakanje kanala

 Pritisnite ◀ / ▶ za izbor  pritisnite dugme OK za brisanje izabranog kanala

 Pritisnite ◀ / ▶ za izbor  pritisnite dugme OK unos ure ivanja naziva



 
 Pritisnite ◀ / ▶ za izbor  pritisnite dugme OK za izbor kanala u omiljene kanale

Osobe ošte enog sluha Postavite Uklju eno/Isklju eno

Audio opis Postavite Uklju eno/Isklju eno

Audio jezik Postavite zvu ni jezik na DTV izlaznom programu

Jezik podnaslova Izaberite jezik podnaslova na DTV izlaznom programu

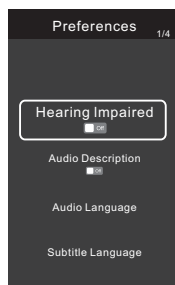


RAD MENIJA FUNKCIJA

Zaključavanje

Pritisnite **【◀】 / 【▶】** za izbor zaključavanja.

 
Lozinka: Unesite zadanu lozinku "0000" da biste otišli na meni funkcije zaključavanja, ako ste postavili "System Lock" (zaključavanje sistema) na "UKLJUČENO".

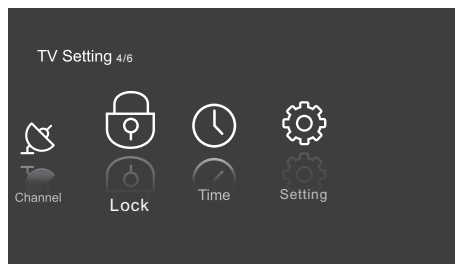

Zaključavanje sistema Postavite za uključavanje / isključavanje.


Promena lozinke Postavite novu lozinku

 Roditeljske kontrole Postavite nivo koji omogućava da dete gleda program

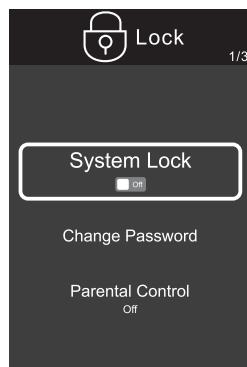

Vreme

 Pritisnite **【◀】 / 【▶】** za izbor vremena

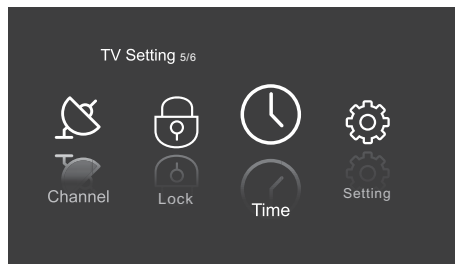


Pritisnite tipku Enter (Ulaz) za ulazak u pod-naslov i pritisnite **【◀】 / 【▶】** za podešavanje.

OSD MERA VREMENA

Izaberite OSD mera vremena i pritisnite **【◀】 / 【▶】** za podešavanje
Dostupno: OFF (ISKLJUČENO), 5sec, 15sec, 30 sec

Mera vremena za spavanje

 
Izaberite mera vremena za spavanje i pritisnite **【◀】 / 【▶】** za podešavanje
Dostupno je: OFF (ISKLJUČENO), 15min, 30min, 45min, 60min, 90min, 120min, 240min

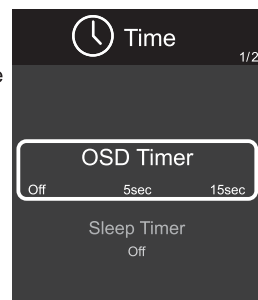

RAD MENIJA FUNKCIJA

Postavke

 Pritisnite **【◀】** / **【▶】** za izbor postavki

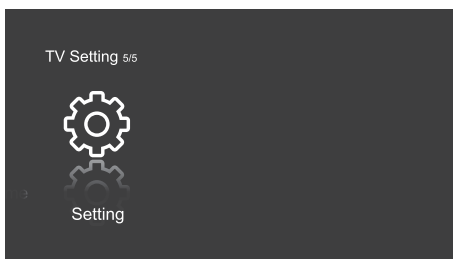

Pritisnite dugme Enter za ulaz u podnaslov i pritisnite **【◀】** / **【▶】** za podešavanje

OSD JEZIK

Izaberite OSD jezik I pritisnite **【◀】** / **【▶】** za podešavanje

Plavi ekran

Izaberite pozadinsku boju izme u plave i crne kada nema ulaznog signala

Postavke PVR-a

Postavke snimanja digitalnog programa

Teletekst

Postavite grafi ki jezik

HDMI CEC

 
 
Postavite HDMI/CEC na UKLJU ENO/ISKLJU ENO

Resetiranje

Vratite na fabri ke postavke


HDMI CEC

Pritisnite **【▼】** / **【▲】** za izbor postavljanja HDMI/CEC

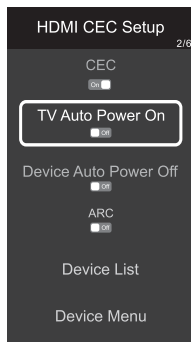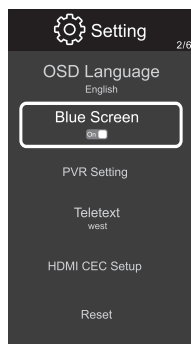

Resetiranje

 Pritisnite **【▼】** / **【▲】** za vra nje na zadane postavke

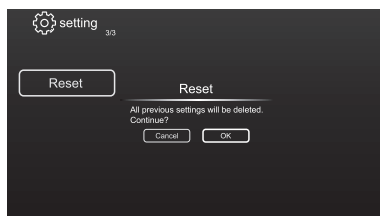

VODIČ ZA REŠAVANJE PROBLEMA

Mnogi prividni kvarovi su prouzrokovani nesporazumima prilikom redovne upotrebe i uglavnom su jednostavni za otkloniti. Ukoliko imate poteškoća sa rukovanjem, prvo pogledajte sledeću listu uobičajenih grešaka i njihovih rešenja.

Ako problem ne rešite, isključite uređaj i pozovite svog servisera.

SYMPTOM	METHODS OF CHECKING OR ADJUSTING
Nema slike ili zvuka No picture or sound	Proverite da li je naponski kabal ispravno priključen u utičnicu.
Slika je normalna ali bez zvuka	Proverite da nije slučajno zvuk podešen na nečujno (MUTE) Ukoliko jeste pojačajte zvuk .
Daljinski upravljač ne radi	Proverite da li je TV uključen. Proverite da li su baterije ispravno postavljene. Uverite se da infracrveni odašiljač na daljinskom ili TV nije izložen jakoj svetlosti ili da nije blokiran na bilo koji način.
Ne primete nikakav any TV signal	Proverite da li je SOURCE prekišač postavljen na TV. Proverite i podešavanje za lokaciju i povezanost. Pokušajte da ponovno skenirate kanale i proverite metod pretrage.
Bez signala programa sa spoljašnjeg izvora	Proverite da li je taster SOURCE podešen na ispravnu poziciju za prijem signala.
Problem sa kontrastom i osvetljenjem.	Napravite potrebne i željene izmene.
Slab contrast i blede boje na svim kanalima	Proverite podešavanje za lokaciju prijema signala.
Linije ili tačke po celom ekranu	Drugi električni uređaji mogu da izazovu smetnje. Sklonite ih od televizora.
Sneg na ekranu	Proverite lokacijska podešavanja, kratak spoj, prekinuta konekcija ili bilo koja vidljiva oštećenja.
Dupla slika ili zamagljenost	Proverite podešavanja za lokaciju i uopšte položaj antene ili uređaja. Jak vetar može da izazove takve problem. Visoke zgrade ili planine takode. Malo podešavanje antene može u mnogo čemu da popravi sliku.

Napomena: spoljna ili krovna antena treba da bude postavljena od strane ovlašćenog osoblja.

Specifikacije

Raspon dijagonale	16:9
Sistem	PAL/SECAM BG/DK/I, DVB-T2/C/T
Osnovno napajanje	75 (Naizmjenične)
Prijem TV kanala	All Channels Receiveable
Napajanje, voltaža	100-240V- 50/60Hz

Napomena : delovi i specifikacije mogu da budu promenjene bez prethodne najave.

INFRACRVENI DALJINSKI UPRAVLJAČ

Osobenost: Potpuno funkcionalan daljinski upravljač sa efektivnom pokrivenošću od 8 metara

Napajanje: DC 3V (Dve baterije , veličine AAA, sa preporukom da se koriste samo alkalne)



