



## LED TELEVIZORI



**UPUTSTVO ZA UPOTREBU-SMART TV**

**MODEL:55DLE988**

Molimo Vas da detaljno proučite ovo uputstvo pre  
upotrebe televizora i da ga čuvate radi kasnije upotrebe



# SAFETY INSTRUCTIONS

## IMPORTANT SAFETY INSTRUCTIONS

### WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

### CAUTION

#### RISK OF ELECTRIC SHOCK DO NOT OPEN

Warning: To reduce the risk of electric shock, do not remove cover(or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

### CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user serviceable parts inside the TV; do not open the TV casing.

### IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



#### Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



## **SAFETY INSTRUCTIONS**

---

- 1. Read Instructions** All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions** The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions** All operating instructions should be followed.



- 5. Water and Moisture** The appliance should not be used near water.
- 6. Cart and Stands** The appliance should only be used with a cart or stand that is recommended by the manufacturer.
- 7. Wall or Ceiling Mounting** The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 8. Ventilation** The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
- 9. Heat** This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
- 10. Power Sources** The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
- 11. Grounding or Polarization** Precautions should be taken.
- 12. Power Cord Protection** Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
- 13. Cleaning** The appliance should be cleaned only as recommended by the manufacturer.
- 14. Power Line** An outdoor antenna should be located away from power lines.
- 15. Outdoor Antenna Grounding** If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built up static charges.
- 16. Non-use Periods** The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- 17. Object and Liquid Entry** Care should be taken so that objects did not fall, and liquids are not spilled into the enclosure through openings.
- 18. Conditions requiring Service** The appliance should be serviced by qualified service personnel when:
  - The power supply cord or the plug has been damaged.
  - Objects have fallen on or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
- 19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.**

 
No naked flame sources, such as lighted candles, should be placed on the apparatus.  
The apparatus shall be connected to mains socket outlet with a protective earthing connection.  
The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.

## SAFETY INSTRUCTIONS



### Warning

High voltages are used in the operating of this product.  
Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




### Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



### Warning

Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

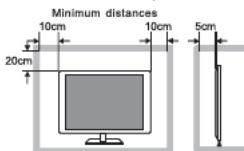

### Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

Heat built up can reduce the service life of your television, and can also be dangerous.



### Caution

Never stand on, lean on, push suddenly the product or its stand.

You should pay special attention to children.



### Caution

Do not place the main unit on an unstable cart stand, shelf or table.

Serious injury to an individual, and damage to the television, may result should it fall.



### Caution

When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.



### Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



### Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force. Individuals should execute caution when dealing with broken glass should the panel break.



## **CONTENTS**

---

### **SAFETY INSTRUCTIONS**

---

----- 1 - 3

### **DESCRIPTION OF CONTROL KEYS & CONNECTORS**

---

----- 5 - 6

### **OPERATION OF REMOTE CONTROL**

---

----- 7 - 8

### **CONNECTIONS**

---

----- 9

### **OPERATION OF FUNCTION MENU**

---

----- 10 - 19

### **TROUBLE SHOOTING GUIDE**

---

----- 20

### **SPECIFICATIONS**

---

----- 21

## **DESCRIPTION OF CONTROL KEYS & CONNECTORS**

---

### **CONTROL KEYS:**

BUTTON NAME	BUTTON ICON TYPE				BUTTON INSTRUCTION
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	To display source menu.
MENU BUTTON	MENU			MENU	To select menu.
VOLUME UP BUTTON	VOL+				To increase the sound volume level
VOLUME DOWN BUTTON	VOL-				To decrease the sound volume level
PROGRAM UP BUTTON	CH+		C/P A		To select the next higher programme number.
PROGRAM DOWN BUTTON	CH-		C/P V		To select the next lower programme number.
STANDBY BUTTON	POWER			STANDBY	Switch ON/OFF the TV when at standby mode.

### **NOTE:**

1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.

## DESCRIPTION OF CONTROL KEYS & CONNECTORS


PORT NAME	PORTS ICON TYPE			PORT INSTRUCTION
	1	2	3	
AV IN		VIDEO / Y 	AV IN 	AV input port
COMPONENTIN		VIDEO / Y 	YPbPr 	YPbPr signal input port
AV OUT		(mini) AV OUT 		AV output port
AUDIO OUT	AUDIO OUT 	L-EXTERNAL SPX-R 		AUDIO output port
TERMINAL ANTENNA (75 OHM)	ANT 	RF 		TV signal input port
TERMINAL ANTENNA (75 OHM)		RF S2 		Satellite signal input port
VGA		VGA 		RGB signal input port
VGA AUDIO IN		VGA AUDIO IN 		VGA audio input port
HDMI		HDMI 		HDMI signal input port
USB IN		USB 		USB input port
EARPHONE OUT				Earphone output port
AUDIO IN		AUDIO IN 		AUDIO input port
VIDEO OUT		VIDEO OUT 		VIDEO output port
COAXIAL OUT		COAXIAL 		Coaxial output port
OPTICAL		OPTICAL 		Optical output port
SCART		SCART 		SCART signal input port
PCMCIA		PCMCIA 		PCMCIA input port
RJ45 IN		RJ45 		RJ45 input port
DC IN		DC IN 		DC+12V input port
TF IN		TF IN 		TF input port

**NOTE:**

1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.

# OPERATION OF REMOTE CONTROL

The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

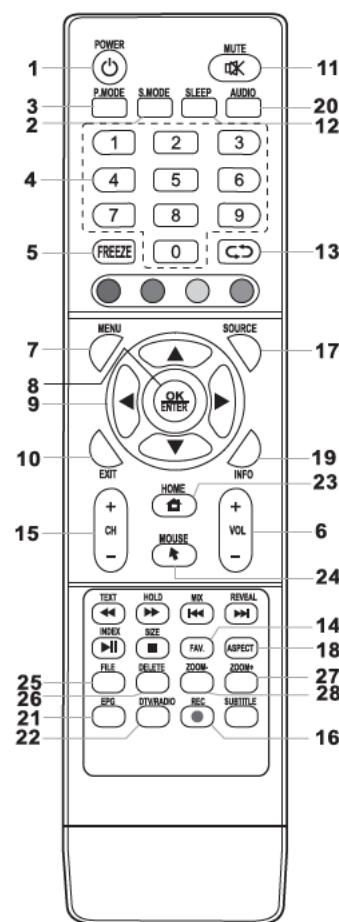

## 1. POWER BUTTON

Switch On/Off the TV when at standby mode.

## 2. S.MODE BUTTON

Sound effect selection.

## 3. P.MODE BUTTON

Picture effect selection.

## 4. NUMBER BUTTONS

Press these buttons to select the TV program you want to enter or input password.

## 5. FREEZE BUTTON

Freeze picture.

## 6. VOL+/VOL- BUTTON

Press two buttons to directly to turn up or turn down the sound volume level.

## 7. MENU BUTTON

Press the button to open the main menu, press again or use Exit to close.

## 8. OK/ENTER BUTTON

Press the button to confirm or enter sub menus.

## 9. UP, DOWN, LEFT, RIGHT ARROW BUTTONS

Press these buttons to select or adjust the desired item on the TV menu.

## 10. EXIT BUTTON

Press the button to exit.

## 11. MUTE BUTTON

Press the button to turn off the volume. Press it again to turn on the volume.

## 12. SLEEP BUTTON

Press the button to set up the TV auto turn off time.

## 13. RETURN BUTTON

Press the button to toggle between the current and the previous program you were viewing.

## 14. FAV. BUTTON

Display favourite of program list.

## 15. CH+/CH- BUTTON

Press two buttons to directly to adjust the TV program.

## 16. REC BUTTON

Hotkey of PVR.

## 17. SOURCE BUTTON

Press the button display Source menu.

## 18. ASPECT BUTTON

Press the button to display and select available aspect modes.

## 19. INFO BUTTON

Display the Source, and channel etc. information.

## 20. AUDIO BUTTON (Optional)

Selects audio mode.

## 21. EPG BUTTON

Open/Close Electronic program guide.

## 22. DTV/RADIO BUTTON

Switch DTV program and radio program.

## 23. HOME BUTTON

Directly into the Smart, Media, USB etc...

## 24. MOUSE BUTTON

Change cursor from mouse to keyboard

## 25. FILE BUTTON

Press the button to browse the USB file directly.

## 26. DELETE BUTTON

User for delete the input.

## 27. ZOOM+ BUTTON

Press the button to zoom in web.

## 28. ZOOM- BUTTON

Press the button to zoom out web.

**Note:** EPG, DTV/RADIO, REC are only effective in DTV mode.

## OPERATION OF REMOTE CONTROL

### TELETEXT FUNCTION (Optional)

#### 1) TEXT BUTTON

Press the TEXT button to change the viewing from TV to Teletext if TV stations in your local have teletext broadcasting.

#### 2) REVEAL BUTTON

This is a toggle function key to display hidden characters.

#### 3) MIX BUTTON

This is a toggle function button to display TV picture and teletext together or teletext only.

This key allows the user to enter 4 digits sub-page for the current page. If subsequent digit is not entered within 5 seconds, previous page number will be recalled and displayed on the screen.

#### 4) RED/GREEN/YELLOW/BLUE BUTTONS

These 4 Colour keys in teletext mode can quickly enter the pre-captured teletext pages.

#### 5) UP/DOWN BUTTON

These keys can be used as a page up/down key in teletext mode.

#### 6) 0, 1, 2, ..., 9 BUTTON

Using the 0, 1, 2, ..., 9 keys, the required Teletext pages are selected.

#### 7) HOLD BUTTON

Some Teletext information is contained on more than one page, the pages automatically changing after a given reading time. Press the HOLD key to stop the page changing. Press the HOLD key again to allow the page to change.

#### 8) SIZE BUTTON

This key is to expand character size and display half teletext page. Each press will display upper .... tower .... Normal page.

#### 9) INDEX BUTTON

Press the INDEX key to view Index page in teletext mode.

Display Teletext time.

### USB FUNCTION (Optional)

#### 1) < / > BUTTON

Skip a scene or music.

#### 2) << / >> BUTTON

Go back to the previous or skip to the next.

#### 3) >> BUTTON

Play / Pause.

#### 4) ■ BUTTON

Stop playback.

Press to confirm an action (For example: cope, paste etc.)

Repeat a scene or music.

#### 7) SUBTITLE BUTTON

In the USB playback movies, open or closed subtitle function(Need streaming support)

#### Note:

A USB device must already be connected.

## BATTERY INSTALLATION OF REMOTE CONTROL UNIT


1. Open the battery compartment cover.

2. Insert two ' AAA ' (pencil size) 1.5V batteries. Make sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.

3. Close the battery compartment cover.

#### Note:


- Recommend use alkaline type batteries.
- The life time of the batteries may last up to one year, depending on how often the remote control is used. For the best performance, the batteries should be replaced on a yearly basis, or when remote operation becomes erratic.
- Be sure to place the batteries in the correct direction, as shown left.
- Do not mix old and new batteries, or different types.
- Old batteries may leak chemical and damage the remote control. Always remove batteries as soon as they become weak.

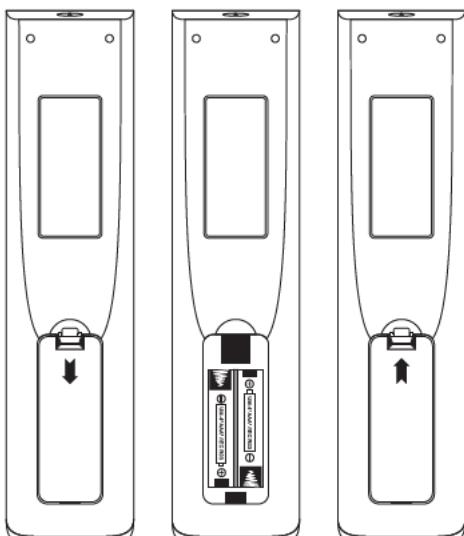

## CONNECTIONS

---

### INSTALLATION OF ANTENNA

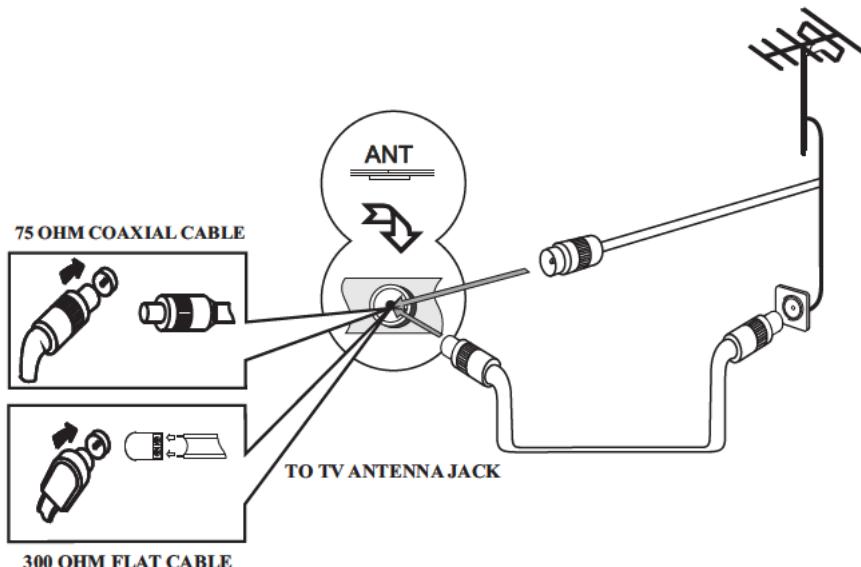

Connect the 75 OHM coaxial cable from the antenna to the antenna jack on the rear panel, as shown above.

#### Note:

- For better reception, especially in outlying area or where ghost or interference happens, an external roof mounted antenna is recommended.
- For UHF TV reception, use the specified UHF antenna. Consult the local sale dealer.
- When using 300 OHM flat cable, a 300 OHM 75 OHM adapter should be adopted for a proper connection to the antenna jack.

### POWER CONNECTION

- Plug the AC cord into an AC outlet.
- Press the Power button on the remote control to turn on, press the Power button again to standby.

#### Note:

- This unit should be operated from a household AC100 240V~ 50/60Hz.
- When you disconnect the power supply cord, pull it out by the plug. Never pull the cord itself.


### CAUTIONS:

During a power outage, the TV should be unplugged from the AC outlet. To conserve energy the TV should be unplugged from the AC outlet if not being used for a prolonged period of time.


## OPERATION OF FUNCTION MENU

---

### 1. LAUNCHER

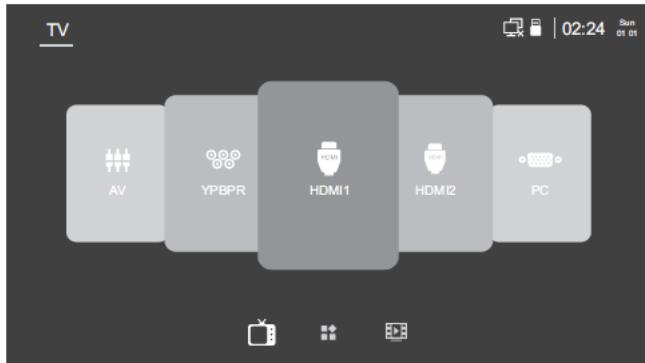

- 1.1) Launcher main screen, press the  $\blacktriangleleft / \triangleright$  buttons to switch the channel, <OK> button to enter the selected channel, and press the <HOME> button to exit to Launcher.

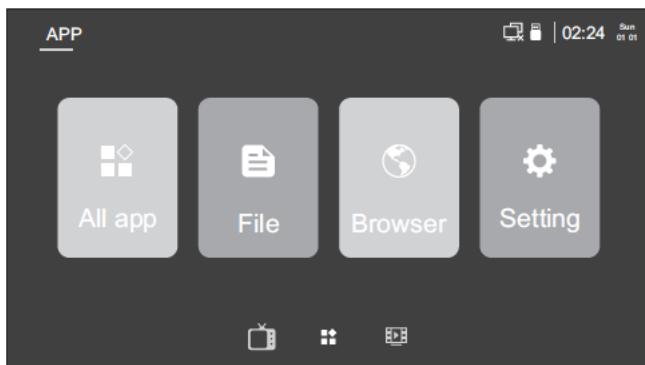


- 1.2) • Press the  $\blacktriangledown$  button to shift the focus to the bottom of the small icon and press the  $\triangleright$  button to switch to the second screen.  
• Press the  $\blacktriangleup$  button to shift the focus to the first four large icons and press the  $\blacktriangleleft / \triangleright + \text{OK}$  button to access the corresponding item.

## OPERATION OF FUNCTION MENU

---




1.2.1) Press “All app”to enter the APP display page, press the  $\blacktriangleleft$  /  $\triangleright$  + OK button to access the specified APK

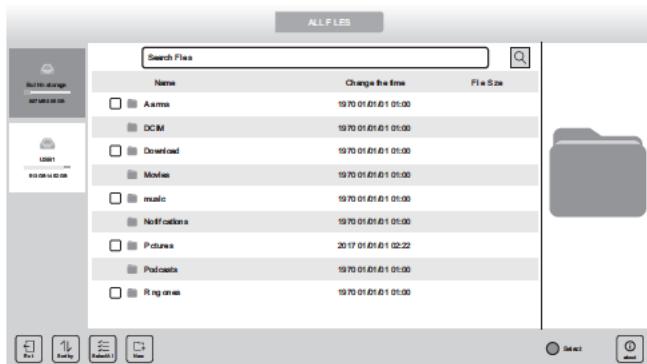


1.2.2) Press “File”to enter the file manager to view the file.

## **OPERATION OF FUNCTION MENU**

---

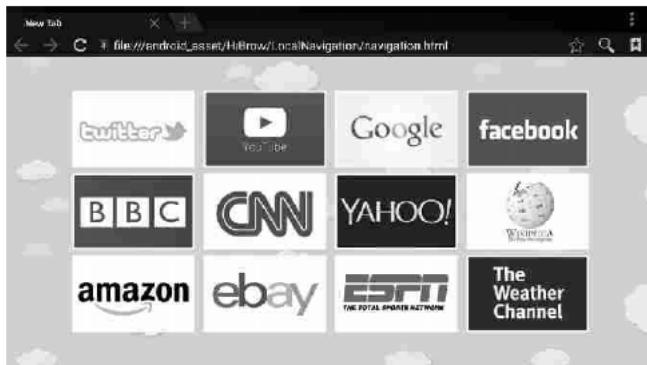


1.2.3) Press “Browser” to access the browser.

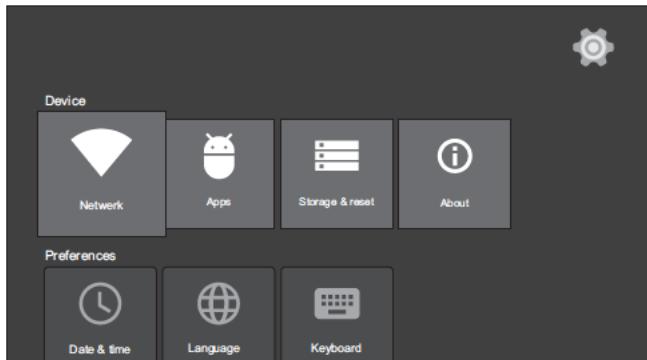

1.2.4) Click “Setting” to enter the settings page, you can set the network, language and so on.

## OPERATION OF FUNCTION MENU

---

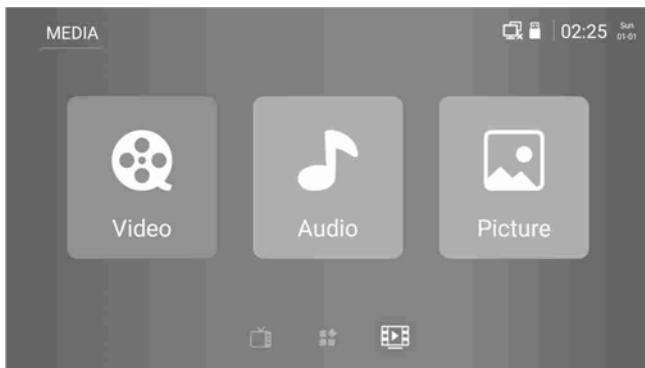

- 1.3) • In the second screen, press the ▼ button to shift the focus to the small icon at the bottom and press the ► button to switch to the third screen.  
• Press the ▲ button to switch the focus to the top of the three large icons, press the ◀ / ▶ + OK button to enter the corresponding item, you can browse the classified video, audio, pictures.

## **OPERATION OF FUNCTION MENU**

---


### **2.BINPUT SOURCE**

Press <SOURCE> to display the source menu.

Press ▲ / ▼ to select the corresponding input source, and then press <OK> to confirm.

### **3.TV SETTING**

#### **3.1 Picture Setup**

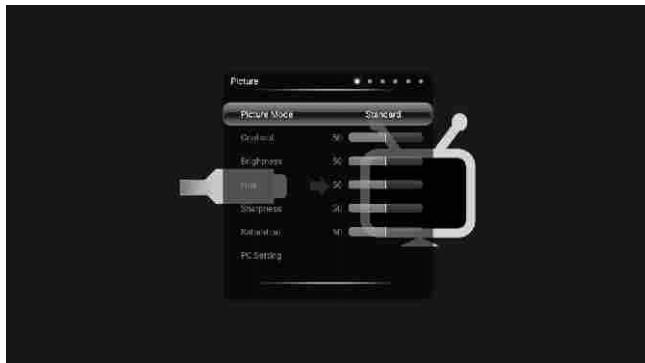


Press <Menu> to display the main menu, then press ◀ / ▶ to select the Picture, press ▲ / ▼ to select the corresponding option, press <Exit> to exit the menu.

- Picture mode: Select the picture mode, when set to user mode, the user can customize the brightness, contrast, chroma, hue and sharpness and other effects parameters.
- Color Temperature: used to set the color temperature you feel comfortable, including standard, warm, cold three modes.
- Aspect Ratio: Set the user's favorite aspect ratio mode.
- Noise Reduction: used to reduce noise to improve picture quality.
- MPEG NR: used to smooth the video screen to reduce noise to improve image quality.

## OPERATION OF FUNCTION MENU

---

### 3.2 Sound Setup

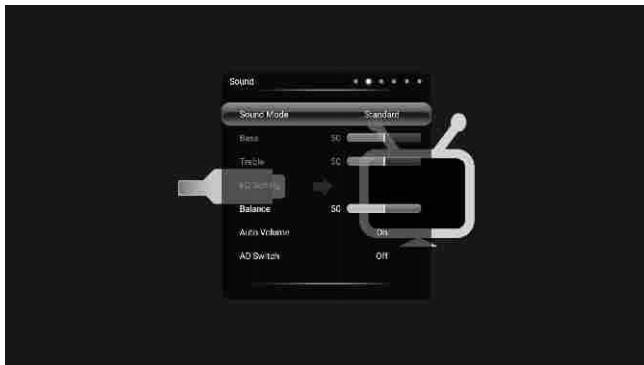


Press <Menu> to display the main menu, then press **◀ / ▶** to select the Sound, press **▼ / ▲** to select the corresponding option, press <Exit> to exit the menu.

- Sound Mode: Select the sound mode, when set to user mode, the user can according to their favorite bass and treble to adjust.
- EQ settings: Click the eq setting to enter the submenu to adjust the gain of the corresponding frequency sound, the adjustment range is 0~100.(Optional in user mode)
- Balance: adjust the speaker sound output balance, adjust the range of 0~100.
- Auto Volume: Turn on / off the automatic volume control, when the volume exceeds the set value, will automatically reduce the volume amplitude, protect the amplifier.
- AD Switch: designed for people with visual impairment, you can make up for the lack of visual impairment through the sound, open the AD volume can also be adjusted.
- Hearing Impaired: designed for people with hearing impaired, open will mark whether to speak for the narration, will raise this is the sound of water, open the door, laughter, and so on.
- Surround: Select the surround sound mode (off / on).
- SPDIF Mode: Select Coaxial/Optical Output Mode.

## **OPERATION OF FUNCTION MENU**

---

### **3.3 Channel setup**

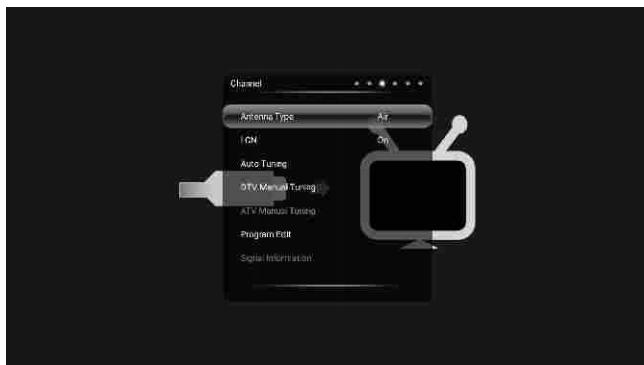


Press <Menu> to display the main menu, then press **◀ / ▶** to select the Channel,  
Press **▼ / ▲** to select the corresponding option, press <Exit> to exit the menu.

- Antenna Type: Select the antenna type.
- LCN: Whether to open the logical channel number sort.
- Auto Tuning: click on the automatic search into the sub menu, you can select the automatic search type, click on the corresponding country to automatically search the page.
- DTV/ATV Manual Tuning: click to sub menu, manual search can be based on their own settings to search program channel, when the search to stop.
- Program Edit: Click to enter the submenu, there are four shortcuts, by pressing **▼ / ▲** to select the channel you want to operate, you can delete the selected channel, move, jump and increase or delete the channel to the favorite program list operating.
- Signal Information: Displays information about the signal.

## **OPERATION OF FUNCTION MENU**

---

### **3.4 Setting**

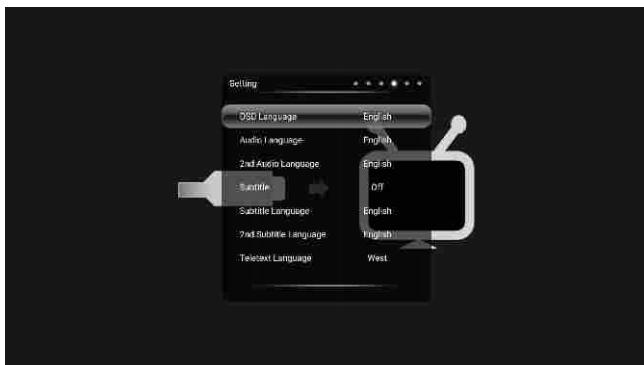


Press <Menu> to display the main menu, then press **◀ / ▶** to select the Setting,  
Press **▼ / ▲** to select the corresponding option, press <Exit> to exit the menu.

- **Audio Language** : Set the Audio Language.
- **2nd Audio Language** : Set the 2nd Audio Language.
- **Subtitle** : Turn on/off Subtitle.
- **Subtitle Language**: Set the first language of the subtitle.
- **2nd Subtitle Language** : Sets the second language of the subtitle.
- **Teletext Language**: Sets the language of teletext.
- **PVR File System**: Click to enter the submenu, you can select the appropriate disk, time forward length,format and speed test.
- **Blue Screen** : Turn on/off Blue Screen.
- **Reset**: Click will pop up a dialog box, choose whether to restore to the default settings.

## **OPERATION OF FUNCTION MENU**

---

### **3.5 Time**

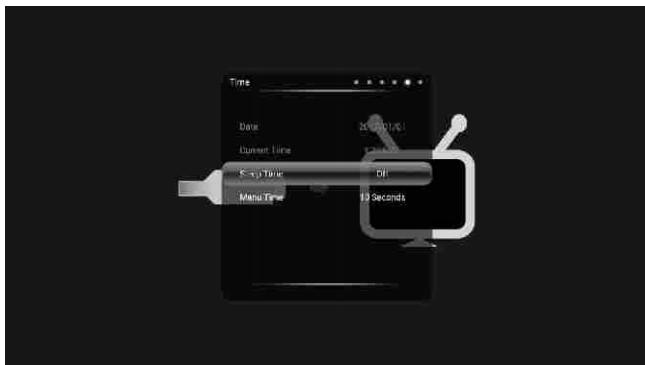


Press <Menu> to display the main menu, then press ◀ / ▶ to select the Time, press ▼ / ▲ to select the corresponding option, press <Exit> to exit the menu.

- Sleep time : Set the system sleep time.
- Menu Time : Setting menu display time.

## OPERATION OF FUNCTION MENU

---

### 3.6 Lock

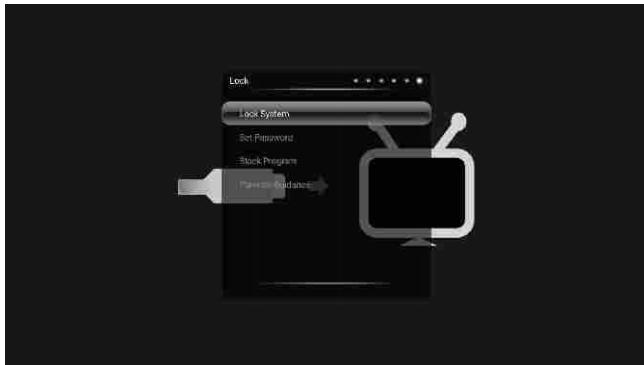

Press <Menu> to display the main menu, then press **◀ / ▶** to select the Lock,  
Press **▼ / ▲** to select the corresponding option, press <Exit> to exit the menu.

- Lock System: open / close the system lock, the default password is "0000".
- Change Password: Click the Change Password dialog box to set a new password.
- Block Program: Click into the submenu to select the program to lock.
- Parental Guidance: Click to enter the submenu, you can set the level.

## **TROUBLE SHOOTING GUIDE**

---

Many apparent malfunctions are caused slight misadjustments of the regular controls of your unit or equally simple causes.

If any difficulty arises through normal use of your unit, check the list of common problems in the list below.

If the problem persists, unplug your unit and contact your dealer.

<b>SYMPTOM</b>	<b>METHODS OF CHECKING OR ADJUSTING</b>
No picture or sound	Check the AC plug is in the socket. Check house circuit breaker is in the ON position.
Picture normal but no sound	Check that the volume is not at its minimum setting or on MUTE.
Remote control not working	Check that TV set power is ON. Check batteries are operational and inserted correctly. Make sure infrared receiving window on TV is not exposed to strong lighting or blocked in any way.
Cannot receive any TV signal	Ensure SOURCE switch is set to TV. Check aerial location and connection. Re check your tuning method.
No program signals output from external source	Check SOURCE button to make sure it is in the correct position for reception.
Contrast and brightness problems	Make necessary adjustments to relevant settings.
Intermittent poor contrast and colour fading on all channels	Check aerial positioning
Dotted lines or stripes appear on screen	There may be Interference from another electrical product. Move appliance if it persists.
Snow on screen	Check aerial for broken circuit, loose connection or any visible damage.
Double images or 'ghosting'	Check aerial location and direction strong winds may cause it to move. Also check whether mountains or tall buildings may be the problem. Minor adjustment of the direction of your antenna should keep the ghosting to a minimum.

**Note:** External rooftop/antenna adjustment should be left to a suitably qualified person.

## SPECIFICATIONS

---

<b>Aspect Ratio</b>	16:9
<b>System</b>	PAL/SECAM BG/DK/I,DVB T/T2+C,NTSC Playback
<b>Base impedance</b>	75Ω (Unbalance)
<b>Receiving TV Band</b>	All Channels Receiveable
<b>AC Supply Voltage</b>	100~240V~ 50/60Hz

**Note:** Part of the design and the specification may be changed without prior notice.

## INFRA-RED REMOTE CONTROL

Features: Full function remote control

Effective Distance Power: 8 metres

Power Supply: DC 3V (Two batteries, size AAA, recommend use alkaline type batteries)



Manufactured under license from Dolby laboratories.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby laboratories.



## LED TELEVIZORI



**UPUTSTVO ZA UPOTREBU-SMART TV**

**MODEL:55DLE988**

Molimo Vas da detaljno proučite ovo uputstvo pre  
upotrebe televizora i da ga čuvate radi kasnije upotrebe



# BEZBEDNOSNA UPUTSTVA

## VAŽNA BEZBEDNOSNA UPUTSTVA

### UPOZORENJE

- KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽNI KABAL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIĆNICI OSIM ONIH KOJI BI MOGLI DA SPREČE IZAZIVANJE STRUJNOG UDARA
- KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREDAJ VLAGI ILI KIŠI.



Ovaj simbol munje u jednakostranom trouglu upozorava korisnike na prisustvo opasnog i neizolovanog napona unutar kućista proizvoda koji može biti dovoljan da stvorи rizik od strujnog udara.

### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



Upozorenje: Da biste smanjili rizik od strujnog udara, nemojte skidati poklopac (ili zadnju stranu). Unutra nema delova koje korisnik može sam da zameni. Za obavljanje servisa zatražite pomoć kvalifikovanog osoblja.

Znak uzvika unutar jednakostranog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instrukcija za rad i održavanje (servisiranje) uređaja.

Ovaj aparat ne treba izlagati vodi, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

### OPREZ

- \* Postoji opasnost od eksplozije ako se baterija nepropisno zameni.
- \* Zamenite postojeću sa samo odgovarajućom vrstom baterija.
- \* Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote.
- \* Obezbedite pravilno odlaganje istrošenih baterija.
- \* Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja.
- \* Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koja se pominju u ovom uputstvu.
- \* Ne postoje delovi za zamenu u TV-u; ne otvarajte kućište TV-a.

### VAŽNA INFORMACIJA

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada. Mnoge povrede, posebno na deci, mogu se izbegti primenom jednostavnih mera opreza kao što su:

- \* Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.
- \* Korišćenje samo onog nameštaja koji može da sigurno podrže uređaj.
- \* Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.
- \* Nepostavljanje TV-a na visok nameštaj (na primer, ormare ili police) bez prethodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.
- \* Ne pokrivanje televizora krom i nestavljanje drugih materijala između televizora i nameštaja na kom stoji.
- \* Edukacija dece o opasnostima od penjanja na nameštaj da bi dohvatali televizor ili njegove kontrole..



### Sigurna instalacija

Koristite pojaz za fiksiranje televizora kako bi sprečili uređaj od pada unapred.



## **BEZBEDNOSNA UPUTSTVA**

---

1. Pročitajte uputstva - Sve napomene o sigurnosti i operativni treba pročitati pre aparata radi.
2. Sačuvajte uputstva - Upustva za sigurnost i uputstvo za upotrebu treba da se sačuvaju za buduće potrebe.
3. Imajte u vidu Upozorenja - Svi upozorenja na aparatu i u uputstvu za upotrebu treba se pridržavati.
4. Pratite uputstva - Treba pratiti sva uputstva.



5. Voda i vlažnost - Aparat ne treba koristiti u blizini vode.
6. Nosač i postolja - Aparat treba koristiti samo sa nosačem ili postoljem koji preporučuje proizvođač.
7. Montaža na zid ili plafon - Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača
8. Ventilacija - Aparat treba da bude dobro postavljen, tako da njegova lokacija ili pozicija ne ometaju njegovo dobro provetranje.
9. Toplota - Ovaj aparat treba postaviti dalje od izvora toploće kao što su radijatori i peći.
10. Napajanje - Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
11. Uzemljenje ili polarizacija - Treba preduzeti mere predostrožnosti.
12. Zaštita kabla za napajanje - Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, priklesiti stvarima na njemu ili njegovom kraju.
13. Čišćenje - Aparat bi trebalo čistiti samo po preporuci proizvođača:
14. Napajanje spoljne antene treba da se nalazi daleko od dalekovoda.
15. Uzemljenje spoljne antene - Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
16. Kada ga dugo ne koristite - napajanje uređaja trebalo bi da bude isključeno iz utičnice kada se ne koristi duži vremenski period.
17. Upad predmeta i tečnosti - Treba paziti da se predmeti ne upadnu, a tečnost ne prospere u kućište kroz otvore.
18. Kada je potreban servis - Aparat treba da servisira kvalifikovano servisno osoblje kada su:
  - kabl za struju ili utikač oštećeni.
  - kada predmeti upadnu ili kada je tečnost prolivena u uređaj.
  - kada je aparat izložen kiši.
  - kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
19. Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao što su novine, tkanine, zavese, itd.
20. Izvore otvorenog plamena, kao što su upaljene sveće, ne bi trebalo da stoje na aparatu.
21. Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.

# BEZBEDNOSNA UPUTSTVA



## Upozorenje

Visok napon se koristi u funkcionisanju ovog proizvoda. Ne uklanjajte zadnji poklopac. Obratite se se kvalifikovanoj osobi za obavljanje servisa.




## Upozorenje

Da biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlaži.



## Upozorenje

Nemojte ispuštati ili gurati predmete u televizorsko kućište ili u otvore. Nikada nemojte prosipati bilo kakvu tečnost na televizorski prijemnik.

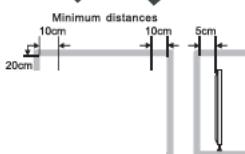

## Oprez

Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati delu uputstva o minimalnim udaljenostima. Toplota može smanjiti životni vek vašeg televizora, a takođe može biti opasno.



 
## Oprez

Nikada nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak. Treba da obratite posebnu pažnju na decu..




## Oprez

Ne stavljamte glavnu jedinicu na nestabilno postolje, policu ili sto. Usled pada može doći do ozbiljne povrede lica ili štete na na televizoru.



## Oprez

Kada se proizvod ne koristi za duži vremenski period, preporučljivo je da isključite mrežni kabl iz utičnice.

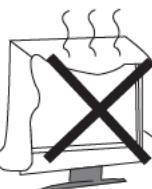

## Oprez

Izbegavajte izlaganje glavne jedinice direktnom suncu i drugim izvorima topline. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaji, audio pojačala. Ne blokirajte otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova. Ne savijajte kabl za napajanje ispod glavne jedinice.



## Oprez

Panel (ekran) koji se koristi u ovom proizvodu je napravljen od stakla. Može se slomiti padom uređaja ili nasilnim udarom. Pojedinci treba oprezno da rade sa razbijenim stakлом ekrana.



## **SADRŽAJ**

---

### **BEZBEDNOSNA UPUTSTVA**

---

----- 1 - 3

### **OPIS KONTROLNIH DUGMIĆA I KONEKTORA**

---

----- 5 - 6

### **OPERACIJE DALJINSKOG UPRAVLJAČA**

---

----- 7 - 8

### **PRIKLJUČCI**

---

----- 9

### **RAD MENU FUNKCIJE**

---

----- 10 - 19

### **REŠAVANJE PROBLEMA ZA**

---

----- 20

### **SPECIFIKACIJE**

---

----- 21

# OPIS KLJUČNIKA KONTROLA I KONEKTORA

## KONTROLNI DUGMIĆI

NAZIV DUGMIĆA	VRSTA DUGMIĆA				INSTRUKCIJE ZA UPOTREBU
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	PRIKAZIVANJE GLAVNOG MENIJA ZA ODABIR FUNKCIJA TV UREĐAJA ( DIGITALNI, ANTENSKI,SMART OPCIJA, MEDIA – USB, HDMI.. )
MENU BUTTON	MENU			MENU	PRIKAZIVANJE MENIJA TV UREĐAJA
VOLUME UP BUTTON	VOL+				POJAČAVANJE ZVUKA
VOLUME DOWN BUTTON	VOL-				UTIŠAVANJE ZVUKA
PROGRAM UP BUTTON	CH+		C/P ▲		PREBACIVANJE NA VIŠI KANAL
PROGRAM DOWN BUTTON	CH-		C/P V		PREBACIVANJE NA NIŽI KANAL
STANDBY BUTTON	POWER			STANDBY	UKLJUČIVANJE/ISKLJUČIVANJE TV UREĐAJA DOK JE U REŽIMU MIROVANJA

### NAPOMENA

- 1.Kontrolni dugmići su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
- 2.Broj i raspored kontrolnih dugmića može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom.


## OPIS KONTROLNIH DUGMIĆA I KONEKTORA

NAZIV ULAZA/IZLAZA	VRSTA IKONICE ZA ULAZ/IZLAZ	INSTRUKCIJE ZA UPOTREBU	
	1 2 3		
AV IN		VIDEO / Y 	AUDIO/VIDEO ULAZ
COMPONENTIN		YPbPr 	YPBPR ULAZ, ZA POVEZIVANJE EKSTERNIH UREDAJA (DVD, PLAYER, KUĆNI BIOSKOP...)
AV OUT		AV OUT 	AUDIO/VIDEO IZLAZ
AUDIO OUT	AUDIO OUT 	L-EXTERNAL SPX-R 	AUDIO IZLAZ ZA POVEZIVANJE EKSTERNIH ZVUČNIKA
TERMINAL ANTENNA (75 OHM)	ANT 	RF 	POVEZIVANJE ANTENE ZA ZEMLJSKE KANALE (KROVNA/SOBNA ANTENA)
TERMINAL ANTENNA (75 OHM)		RF(S2) 	POVEZIVANJE SATELITSKE ANTENE
VGA		AUDIO IN 	AUDIO ULAZ
VGA/AUDIO IN		VIDEO OUT 	VIDEO IZLAZ
HDMI		COAXIAL 	DIGITALNI IZLAZ ZA EKSTERNE ZVUČNIKE
USB IN		VGA 	VGA ULAZ ZA POVEZIVANJE RAČUNARA I TV UREDAJA
EARPHONE OUT		VGA AUDIO IN 	VGA IZLAZ ZA AUDIO POVEZIVANJE
AUDIO IN		HDMI 	HDMI ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREDAJA
VIDEO OUT		USB 	USB ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREDAJA I MEMORIJA
COAXIAL OUT			IZLAZ ZA POVEZIVANJE SLUŠALICA
OPTICAL		SCART 	SCART ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREDAJA
SCART		OPTICAL 	OPTIČKI IZLAZ ZA POVEZIVANJE UREDAJA KOJI KORISTE OPTIČKI KABL
PCM CIA		RJ45 	ZA POVEZIVANJE TV UREDAJA NA INTERNET (LAN MREŽA)
RJ45 IN		DC IN 	OPCIONO ULAZ ZA POVEZIVANJE NA ADAPTER OD 12V
DC IN		TF IN 	ULAZ ZA OČITAVANJE MEMORIJSKE KARTICE
TF IN		PCM CIA 	ULAZ ZA CI (CI+)

1. Svi ulazi / izlazi su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.  
 2. Broj ulaza/izlaza može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem I njihovom namenom

# OPERACIJE DALJINSKOG UPRAVLJAČA

Daljinski upravljač se može koristiti samo na udaljenosti na kojoj postoji prijem signala. Pre upotrebe, uverite se da nema prepreka između daljinskog upravljača i TV uređaja.

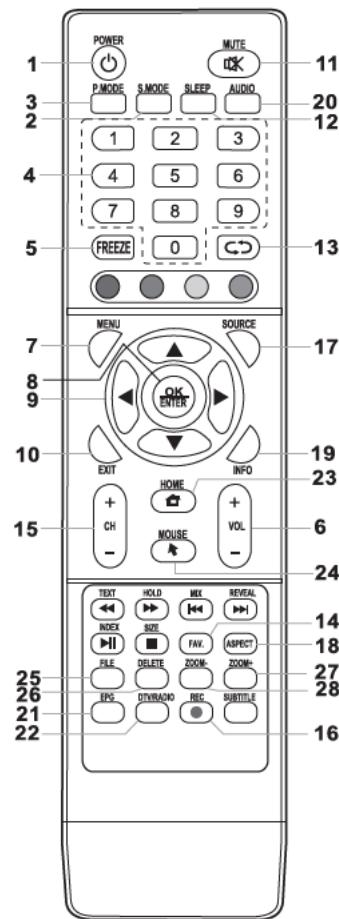

## 1. POWER BUTTON

isključenje/isključenje TV uređaja

## 2. S.MODE BUTTON

dugme za podešavanje zvuka nih efekata

## 3. P.MODE BUTTON

dugme za odabir efekata slike

## 4. NUMBER BUTTONS

pritisnite određeno dugme za odabir programa koji želite ili kako biste uneli lozinku

## 5. FREEZE BUTTON

zamrznuti slike

## 6. VOL+/VOL- BUTTON

pojaavanje/utišavanje zvuka

## 7. MENU BUTTON

pritisnite "MENU" dugme za ulazak u glavni meni. Za izlaz, pritisnite ponovo ili koristite dugme "EXIT"

## 8. OK/ENTER BUTTON

pritisnite O d - a potvrdite ili u ete u pod-meniju

## 9. UP, DOWN, LEFT, RIGHT ARROW BUTTON

pritisnite kako biste odabrali ili podesili željenu ikonu na meniju TV uređaja

## 10. EXIT BUTTON

pritisnite za izlaz

## 11. MUTE BUTTON

pritisnite za isključenje zvuka. Pritisnite ponovo za uključenje zvuka

## 12. SLEEP BUTTON

pritisnite za podešavanje automatskog isključenja TV uređaja u određeno vreme

## 13. RETURN BUTTON

pritisnite za prebacivanje na prethodni kanal koji ste gledali

## 14. FAV.BUTTON

prikazivanje omiljene programske liste

## 15. CH+/CH- BUTTON

promena TV kanala

## 16. REC BUTTON

Snimanje sadržaja na USB

## 17. SOURCE BUTTON

prikazivanje menija za odabir funkcije TV uređaja (digitalni, antenski, smart opcija, media - USB, HDMI...)

## 18. ASPECT BUTTON

pritisnite dugme za odabir rezolucije slike

## 19. INFO BUTTON

prikazivanje informacija o trenutnom statusu signala, kvaliteti slike, programa...

## 20. AUDIO BUTTON (Optional)

OPCIONO - odabir zvuka sa eksternih zvučnika

## 21. EPG BUTTON

OPCIONO - otvaranje/zatvaranje elektronskog programskog vodiča

## 22. DTV/RADIO BUTTON - OPCIONO

prelazak sa DTV na radio program

## 23. HOME BUTTON

Direktni ulazak u Smart, Media, USB itd...

## 24. MOUSE BUTTON

Opcija prebacivanja kursora sa mišem na tastaturu i obrnuto

## 25. FILE BUTON

Pritisnite dugme za direktni pregled nacina USB

## 26. DELETE BUTTON

Brisanje datoteke u smart i USB modu.

## 27. ZOOM + BUTTON

Zumiranje slike u Smart modu

## 28. ZOOM - BUTTON

Pritisnite dugme za smanjenje slike u Smart modu

**Napomena:** EPG, DTV/RADIO, REC funkcije imaju efekat samo u DTV modu.

# OPERACIJE DALJINSKOG UPRAVLJAČA

## TELETEXT FUNKCIJA (Opciono)

**1)TEXT BUTTON** Pritisnite dugme za prelazak sa TV slike na Teletext, ukoliko TV stanica podržava isti.

**2)REVEAL BUTTON** Za prikazivanje skrivenih karaktera

**3)MIX BUTTON** Dugme za prikazivanje Teletext i TV slike zajedno ili samo Teletext slike. Ovo dugme omoguava korisniku da unese digitalne pod-strane za trenutnu stranu. Ukoliko sledeće digitalne strane nisu unešene za 5 sekundi, prethodni broj strane će biti ponovo pozvan i prikazan na ekranu.

### 4)RED/GREEN/YELLOW/BLUE BUTTONS

Ova dugmeta u Teletext modu služe za brzo prebacivanje (zumiranje, prebacivanje na sledeću stranu...)

**5.UP/DOWN BUTTON** Pomeranje stranice gore/dole u teletext modu

**6)0,1,2 9 BUTTON** Odabir određene teletext stranice uz pomoć numerisanih dugmadi a.

**7)HOLD BUTTON** Neke teletext informacije se nalaze na više koje se automatski menjaju nakon određenog vremena. Pritisnite dugme "HO D" da zaustavite promenu strana. Za nastavak promene strana, pritisnite ponovo "HO D"

**8)SIZE BUTTON** Dugme za povećanje dimenzije karaktera i prikazivanje pola teletext strane. Svaki pritisak će prikazivati više i više do normalne strane.

**9)INDEX BUTTON** Pritisnite ovo dugme kako biste videli Index stranu u teletext modu. Prikaz teletext vremena.

## USB FUNKCIJA (Opciono)

### 1)◀/▶BUTTON

Premotajte scenu ili muziku

### 2)◀◀/▶▶BUTTON

Vraćanje na prethodni ili prelazak na naredni fajl

### 3)▶▶ BUTTON

po etak/pauza

### 4)■■ BUTTON

Zaustavljanje. Pritisnite da potvrdite akciju (Na primer: kopiraj, nalepi itd.). Ponavljanje scene ili muzike u reprodukciji filmova na USB-u.

### 5)SUBTITLE BUTTON

Otvara ili zatvara funkciju titla (titl mora biti preuzet sa interneta i mora biti identičan kao na fajlu, kao i kompatibilan sa fajlom koji podržava.)

**Note:** A USB device must already be connected  
**Napomena:** USB uređaj je već povezan.


## INSTALACIJA BATERIJA U DALJINSKI UPRAVLJAČ

1.Otvorite poklopac odeljka za baterije.

2.Stavite dve AAA baterije (uske) od 1,5V. Budite sigurni da se polaritet baterija (+ i -) podudara sa polaritetom unutar odeljka.


### Napomena

- Preporučujemo upotrebu alkalnih baterija
- Rok trajanja baterija može biti i duži od jedne godine, u zavisnosti od toga koliko često se daljinski upravlja koristi. Za najbolje performanse, baterije treba menjati bar jednom godišnje ili onda kada počnu da ometaju rad daljinskog upravljača.
- Budite sigurni da su baterije okrenute u dobrom pravcu, kao na slici.
- nemojte mešati stare i nove baterije ili različite vrste baterija
- stare baterije mogu iscoristiti i oštetiti daljinski upravljač. Uvek uklonite oslabljene baterije.

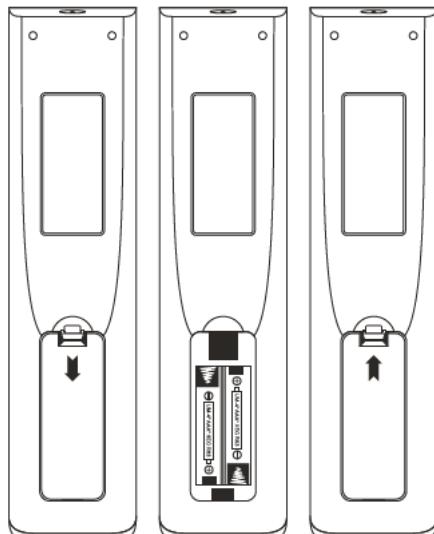

## PRIKLJUČCI

### INSTALACIJA ANTENE

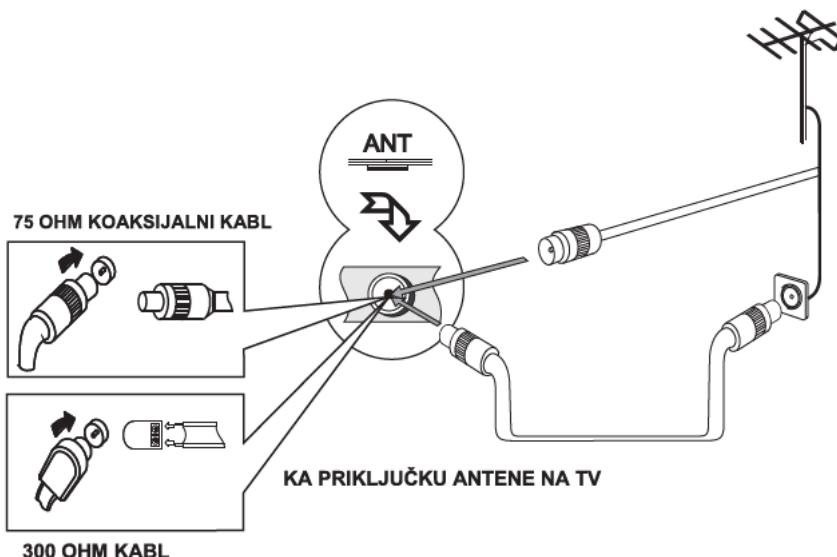

Povežite 75 OHM koaksijalni kabl od antene do antenskog priključka na zadnjem delu televizora kao što je prikazano na slici.

#### Obaveštenje:

- Za bolji prijem, naročito u ruralnim oblastima, gde ima puno smetnji, preporučljivo je korišćenje spoljne antene na krovu.
- Za UHF TV prijem, koristite posebnu UHF antenu. Konsultujte se sa lokalnim prodavačem.
- Pri korišćenju 300 OHM kabla, koristite 300 OHM - 75 OHM adapter za pravilnu konekciju sa antenskim priključkom televizora.

#### PRIKLJUČAK ZA NAPAJANJE

- Priklučite kabl za napajanje uređaja u odgovarajuću utičnicu.
- Pritisnite dugme POWER na daljinskom upravljaču da uključite/isključite TV.

#### Obaveštenje:

- Ovaj uređaj radi sa neizmeničnim napajanjem od 100-240V~ 50/60Hz.
- Kada isključujete kabl za napajanja uradite to pomoću utikača, a ne samog kabla.


#### UPOZORENJE:

Prilikom nestanka struje isključite uređaj iz napajanja. Kako bi uštedeli struju isključite TV iz napajanja ako ga ne koristite duži vremenski period.


## **RAD MENU FUNKCIJE**

---

### **1. LAUNCHER (POKRETAČ)**

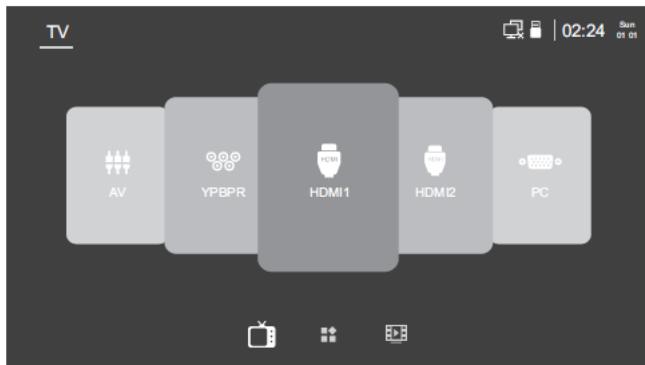

- 1.1) Glavni meni pokretača, pritisnite **◀/▶** da promenite kanal, **<OK>** da pristupite odabranom kanalu, i pritisnite **<HOME>** da izadete iz pokretača.

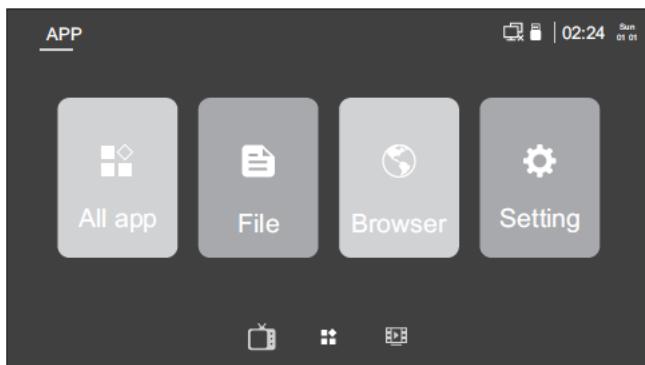


- 1.2) Pritisnite **▼** da pomerite fokus na male ikone u dnu ekrana i pritisnite **▶** da se prebacite na drugi ekran.  
Pritisnite **▲** da pomerite fokus na prve četire velike ikone i pritisnite **◀/▶ + OK** da pristupite određenim stavkama.

## RAD MENU FUNKCIJE

---




- 1.2.1) Pritisnite „All app“ da pristupite strani sa aplikacijama, pritisnite ◀/▶ + OK da pristupite određenoj aplikaciji.

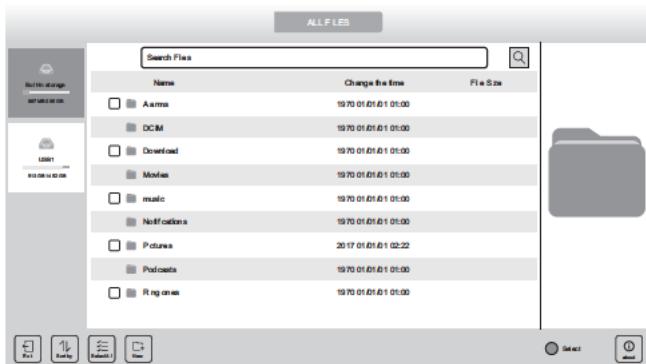


- 1.2.2) 1.1.1Pritisnite „File“ da pristupite strani za pregled fajla.

## RAD MENU FUNKCIJE

---

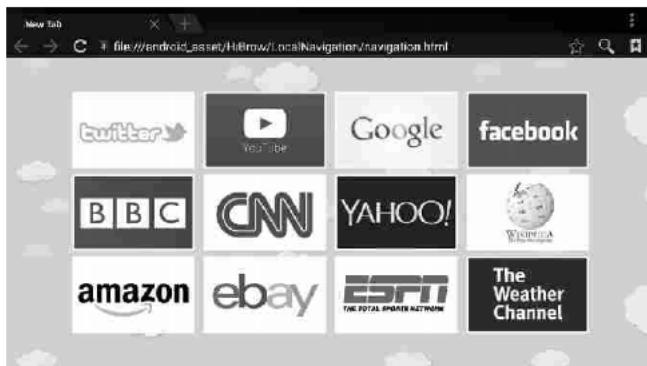


1.2.3) Pritisnite „Browser“ da pristupite pretraživaču.

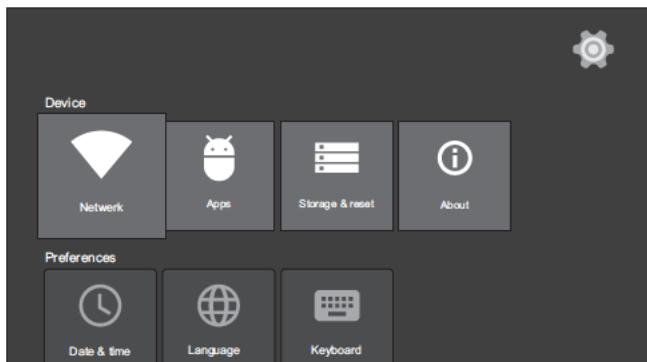

1.2.4) Pritisnite „Settings“ da pristupite strani sa podešavanjima, ovde možete podesiti mrežu, jezik i sl.

## RAD MENU FUNKCIJE

---

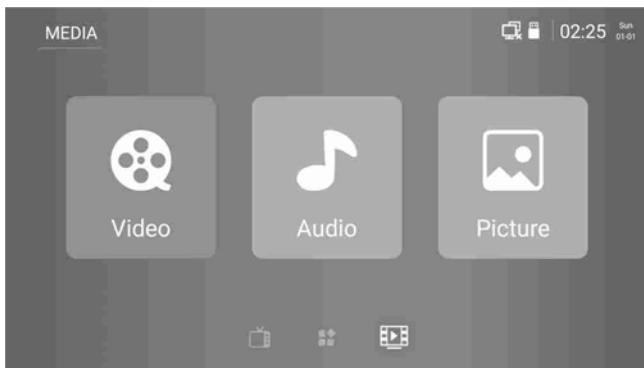

1.3)Na drugom ekranu, pritisnite▼ da pomerite fokus na malu ikonu u dnu strane, a pritisnite► da pređete na treći ekran.  
Pritisnite▲ da pomerite fokus na vrh tri velike ikone, pritisnite◀/▶ + OK da pristupite određenoj stavci, možete da pretražujete klasifikovane video snimke, audio snimke, slike.

## RAD MENU FUNKCIJE

---

### 2.1. ULAZNI IZVOR (BINPUT SOURCE)

Pritisnite <SOURCE> da prikažete meni izvora. Pritisnite ▲/▼ da odaberete odgovarajući ulazni izvor, a potom pritisnite <OK> da potrdite svoj izbor.

### 3. TV PODEŠAVANJA (TV SETTING)

#### 3.1 Podešavanje slike.



Pritisnite <MENU> da pristupite glavnom meniju, potom pritisnite ◀/▶ da odaberete Picture (Slika), pritisnite ▼/▲ da odaberete odaberete opciju, pritisnite <EXIT> da izadete iz menija.

**Picture mode:** Odaberite režim slike; kada pristupite korisničkom režimu, možete da prilagodite osvetljenje, kontrast, nijanse, izoštrenost i ostale parametre.

**Color temperature:** koristi se kako bi korisnik odabrao temperaturu boja koja mu najviše odgovara, uključujući tri moda: standardni, topli i hladni.

**Aspect Ratio:** podesite razmeru koja vam najviše odgovara.


**Noise Reduction:** koristi se kako bi se smanjili šumovi, a poboljšala slika.

**MPEG NR:** koristi se kako bi se video ekran „ugladio“, smanjili šumovi, a poboljšao kvalitet slike.

## RAD MENU FUNKCIJE

---

### 3.2. PODEŠAVANJE ZVUKA (SOUND SETUP)

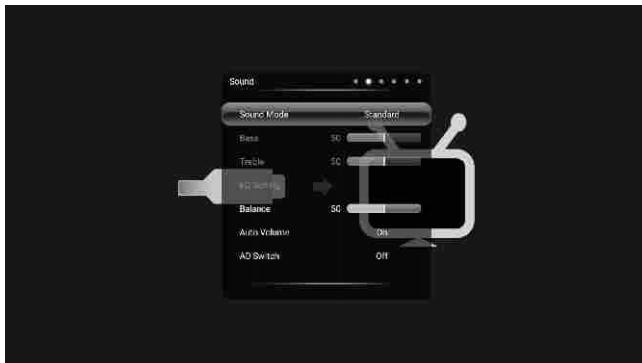

Pritisnite <MENU> da pristupite glavnom meniju, potom pritisnite ◀/▶ da odaberete Sound (Zvuk), pritisnite ▼/▲ da odaberete određenu opciju, a potom pritisnite <EXIT> da izadete iz menija.

**Sound Mode:** Odaberite režim zvuka, kada pristupite korisničkom režimu, možete da prilagodite bas i treble Vašim potrebama.

**EQ settings:** Pritisnite EQ setting (EQ podešavanja) da pristupite podmeniju u kome možete da podesite frekvenciju zvuka (od 0 do 100; optionalno u korističkom modu).

**Balance:** podesite stabilnost izlaznog zvuka, od 0 do 100.

**Auto Volume:** Uključite/Isključite automatsku kontrolu jačine zvuka, kada zvuk prevaziđa podešenu vrednost, automatski će se amplituda smanjiti; zaštite pojачalo.

**AD Switch:** napravljen za ljude sa oštećenjem vida, nadoknadite ono što Vam nedostaje u vidu zvukom, AD jačina takođe može biti podešena.

**Hearing Impaired:** napravljen za ljude sa oštećenjem sluha, otvaranjem ovog segmenta, televizor će automatski znati da li da pojača ton naracije, zvuk vode, otvaranja vrata, smeja itd.


**Surround:** Odaberite mod pozadinskog zvuka (uključen/isključen).

**SPDIF Mode:** Odaberite koaksijalni/optički izlazni mod.

## RAD MENU FUNKCIJE

---

### 3.3 PODEŠAVANJE KANALA

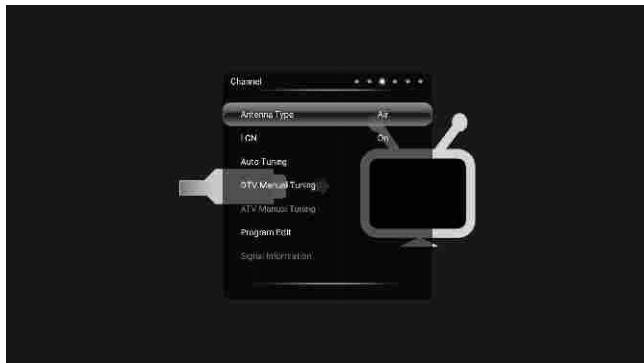

Pritisnite <MENU> da pristupite glavnom meniju, potom pritisnite ▲/▼ da odaberete kanal, pritisnite ▶/◀ da odaberete određenu opciju, pritisnite <EXIT> da izadete iz menija.

**Antenna Type:** Odaberite tip antene.

**LCN:** Odaberite da li želite da kanali budu postavljeni po logičkom numeričkom rasporedu.

**Auto Tuning:** Odaberite automatsku pretragu u podmeniju; možete da odaberete automatski tip pretraživanja, pritiskom na određenu zemlju automatski će ta strana biti pretražena.

**DTV/ATV Manual Tuning:** Pristupite podmeniju, ručna pretraga programa kanala može biti zasnovana na ličnim podešavanjima.


**Program Edit:** Pristupite podmeniju, postoje 4 prečice, pritiskom na ▲/▼ odaberite određeni kanal, možete ga obrisati, pomeriti, preskočiti i dodati ili obrisati kanal sa liste omiljenih.

**Signal Information:** Prikazivanje informacija o signalu.

## RAD MENU FUNKCIJE

---

### 3.4. PODEŠAVANJA

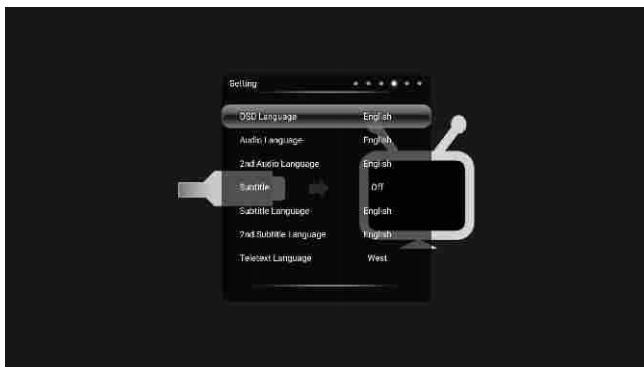

Pritisnite <MENU> da pristupite glavnom meniju, potom pritisnite ◀/▶ da odaberete Setting (Podešavanja), pritisnite ▼/▲ da odaberete određenu opciju, pritisnite <EXIT> da napustite meni.

**Audio Language:** Odaberite jezik zvuka.

**2nd Audio Language:** Odaberite drugi jezik zvuka.

**Subtitle:** Uključite/isključite titlove.

**Subtitle Language:** Odaberite jezik titlova.

**2nd Subtitle Language:** Odaberite drugi jezik titlova.

**Teletext Language:** Odaberite jezik teleteksta.

**PRV File System:** Pristupite podmeniju, možete da odaberete odgovarajući disk, vremensku dužinu, format i test brzine.


**Blue Screen:** Uključite/isključite plavi ekran.

**Reset:** Odabirom ove opcije, pojaviće se prozor, možete odlučiti želite li da sve stavke iz podešavanja vratite u prvobitno stanje.

## RAD MENU FUNKCIJE

---

### 3.5 VREME

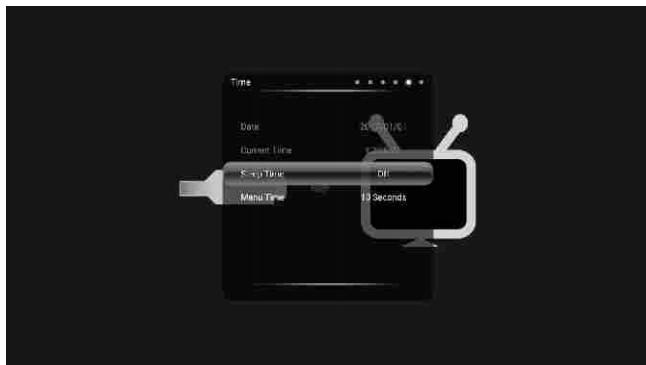

Pritisnite <MENU> da pristupite glavnom meniju, potom pritisnite ▲/▼ da odaberete Time (Vreme), pritisnite ▶/◀ da odaberete određenu opciju, pritisnite <EXIT> da napustite meni.

- **Sleep Time:** Odredite vreme isključivanja uređaja.
- **Menu Time:** Odaberite vreme prikazano u meniju.

## RAD MENU FUNKCIJE

---

### 3.6 ZAKLJUČAVANJE



Pritisnite <MENU> da pristupite glavnom meniju, potom pritisnite ◀/▶ da odaberete Lock (Zaključavanje), pritisnite ▼/▲ da odaberete određenu opciju, pritisnite <EXIT> da napustite meni.

**Lock System:** otvorite/zatvorite zaključavanje sistema, prvobitna lozinka je „0000“.

**Change Password:** Odabirom ove opcije, otvorice se prozor u kome cete moći da promenite lozinku.

**Block Program:** Ulaskom u podmeni, možete odabrati koje programe želite da zaključate.

**Parental Guidance:** Ulaskom u podmeni, možete podesiti nivo.

## REŠAVANJE PROBLEMA

---

Mnogi problemi koji se javlaju uglavnom su izazvani neispravnim podešavanjima ili sličnim neispravnostima koje je uglavnom lako rešiti.

Ukoliko nađete na neke poteškoće prilikom upotrebe uređaja, proverite da li se pominju na listi prikazanoj ispod.

Ako je problem učestao, isključite uređaj iz struje i kontaktirajte prodavca.

SIMPTOM	METODE PROVERE ILI PRILAGOĐAVANJA (REŠENJA, jednostavnije)
Nema slike ni zvuka	Proverite da li je AC utikač pravilno namešten. Proverite da li je kućni prekidač uključen.
Slika je dobra, ali nema zvuka	Proverite da jačina zvuka nije postavljena na minimum ili MUTE.
Daljinski upravljač ne radi	• Proverite da li je TV uključen. Proverite da li baterije i dalje radi i da li su pravilno postavljene. Proverite da primač signala na TV nije izložen jakom svetlu ili blokiran na neki način.
Nema signala	• Proverite da li je SOURCE postavljen na TV. Proverite antenu i povezanost. Proverite podešavanja.
Nema izlaznog signala sa vanjskom izlaza	Proverite SOURCE dugme, osigurajte se da je pravilno podešeno u odnosu na eksterni izvor.
Problemi kontasta i jačine osvetljenja	Napravite neophodne promene odgovarajućih podešavanja.
Povremeni loš kontrast i nestajanje boje na svim kanalima	Proverite antenu.
Isprekidane ili obične linije se pojavljuju na ekranu	Moguće je da postoji smetnja izazvana drugim električnim uređajem. Pomerite uređaj ako je smetnja stalna.
„Sneg“ na ekranu	Proverite strujno kolo antene, povezanost i da li postoji bilo kakva vidljiva oštećenja.
Dupla slika	Proverite lokaciju antene i način na koji je postavljenja – jaki vetrovi mogu da je pomere. Takođe proverite da li su planine i visoke zgrade problem. Manja prilagođavanja položaje Vaše antene trebalo bi da smanje problem na minimum.

**Beleška:** Podešavanja antene na krovu trebalo bi da izvrši stručno, kvalifikovano lice.

## SPECIFICATIONS

---

Raspon dijagonale	16:9
Sistem	PAL/SECAM BG/DK/I,DVB T/T2+C,NTSC Playback
Osnovno napajanje	75 (Naizmenične)
Prijem TV kanala	All Channels Receiveable
Napajanje, voltaža	100-240V- 50/60Hz

Napomena : delovi i specifikacije mogu da budu promenjene bez prethodne najave.

## INFRACRVENI DALJINSKI UPRAVLJAČ

Osobenost: Potpuno funkcionalan daljinski upravljač sa efektivnom pokrivenošću od 8 metara

Napajanje: DC 3V (Dve baterije , veličine AAA, sa preporukom da se koriste samo alkalne)



