



HDMI[®]
HIGH DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model:32DLE30

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

REGULATORY INFORMATION

This equipment generates and uses can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or experienced radio/TV technician for help.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

DO not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.

It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

WARNING

To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.

Don't use the apparatus in tropical climates.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.

Keep minimum distances (5cm) around the apparatus for sufficient ventilation; (Minimum distance around the apparatus for sufficient ventilation.)

No naked flame sources, such as lighted candles, should be placed on the apparatus;

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Safety instructions

The device may malfunction when under electrostatic discharge. It can be manually resumed by power off and power on again.

CAUTION

Connecting the Power Cord

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and its if appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

The MAINS plug is used as the disconnect device, and the disconnect device shall remain readily operable.

BOMARE COMPANY SARL declare that the product BM4392 complies with the essential health and safety requirements of the R&TTE directive 1999/5/CE.

Power source of this TV : 100-240V 50/60HZ.

This TV complies with CE standard.

 
Alternating current:

To indicate on the rating plate that the equipment is suitable for alternating current only, to identify the relevant terminals.


Safety instructions

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.

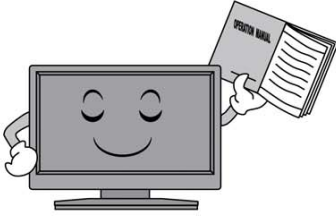


 7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.

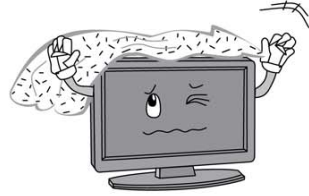


5. Do not use this apparatus near water.

 8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

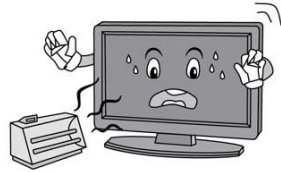


6. Clean only with a dry cloth.

 9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

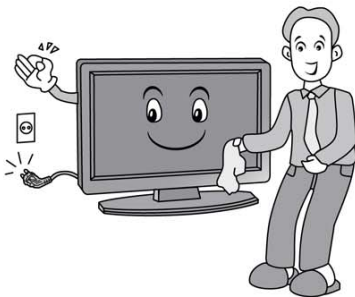


Safety instructions

 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

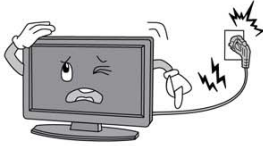

 13. Unplug power cord and antenna during lightning storms or when unused for long periods of time.

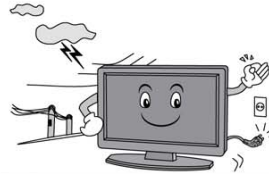

11. Only use the attachments/ accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



ON DISPOSAL

- The fluorescent lamp used in this product contain a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

NOTE

- If the TV feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with TV.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However these have no adverse effect on the monitor's performance.
- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effect on the screen.

Getting Started

Using the remote control

When using the remote control, aim it at remote sensor on the television. If there is an object between the remote control and the remote sensor on the unit, the unit may not operate.

- ◆ Point the remote control at the REMOTE SENSOR located on the television.
- ◆ When using this television in a very brightly lit area, the infrared REMOTE CONTROL SENSOR may not work properly.
- ◆ The recommended effective distance for using the remote control is about 7 metres.

Installing Batteries in the Remote Control

1. Open the cover at the back of the remote control.
2. Install two AAA size batteries. Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.
3. Replace the cover.



Battery replacement

You will need to install the batteries into the remote control to make it operate following the instruction below.

When the batteries become weak, the operating distance of the remote control will be greatly reduced and you will need to replace the batteries.

Notes on Using Batteries:

The use of the wrong type of batteries may cause chemical leakage and/or explosion. Please note the following:

- ◆ Always ensure that the batteries are inserted with the + and - terminals in the correct direction as shown in the battery compartment.
- ◆ Different types of batteries have different characteristics. Do not mix different types.
- ◆ Do not mix old and new batteries. Mixing old and new batteries will shorten battery life and/or cause chemical leakage.
- ◆ Replace batteries as soon as they do not work.
- ◆ Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately with a dry cloth.
- ◆ The batteries may have a shorter life expectancy due to storage conditions. Remove the batteries whenever you anticipate that the remote control will not be used for an extended period.
- ◆ The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION:

- ◆ It may result in an explosion if batteries are replaced incorrectly.
- ◆ Only replace batteries with the same or equivalent type.

Cable Installation

Please read the relevant content in "Notice for Maintenance and Safety" carefully before the installation and use.

1. Take out the TV from the package and put it in a drafty and flat place.

NOTE:

◆ When you plug or unplug the TV, computer or other equipments, you must make sure that the AC power has been already shut down; when unplugging the power cable or signal cable, please hold the plug (the insulated part), do not draw the body of the cable.

2. The RF output terminal can be connected with the RF input port of the TV.
3. The output AV terminal of DVD can be connected with the AV input port of the TV through AV cable.
4. Connect one end of the VGA cable with the VGA port on computer, connect the other end of the VGA cable with the VGA port on the TV, and tighten the bolts clockwise on the each end of VGA cable.

NOTE:

◆ While connecting the 15-pin VGA, please do not insert the plug overexertedly, for fear the pin might be broken.

5. Connect one end of the HDMI cable with HDMI output port, connect the other end of the HDMI cable with the HDMI port on the TV.

NOTE:

◆ While connecting the HDMI, please aim at carefully, do not insert overexertedly, for fear the pin might be broken.

6. Check and make sure that all AV cables are connected with the corresponding ports correctly.
7. Connect the AC power cable with 100-240V~ power supply.


NOTE:

◆ The range of power input for the TV is 100-240V~ 50/60Hz, do not connect the TV power input port with the AC power out of the above range.

◆ Please hold the insulated part of the plug when you are unplugging the power cable, do not touch directly the metallic part of the cable.









QUICK START GUIDE

- **Connection**

1. Connect the mains and antenna.
2. Press the  button on remote control to turn on TV from standby mode.

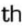
- **Initial Setup**

When the TV is initially powered on, a sequence of on-screen prompts will assist in configuring basic settings.


1. Select the desired OSD (On Screen Display) language.
Press the /// button, then press the **OK** button.
2. Select the appropriate country.
Press the /// button to select the country, then press the **OK** button to Start Channel Tuning.

Turning on and off the TV

- **Turn on the TV**

Connect the AC input cable. At this time the TV will enter standby mode.
Press the  button on remote control to turn on TV from standby mode.

- **Turn off the TV**

Press the  button on the remote control to enter standby mode.
Do not leave your set in standby mode for long periods of time. It is best to unplug the set from the mains and aerial.

- **No signal**

There is No Signal menu on screen when there is no input signal. In TV/DTV mode, if there is no signal in fifteen minutes, the TV will turn off automatically. In PC mode, the TV set will automatically turn off in five minutes if no input signal. When VGA cable is connected, the TV turns on automatically.

Programme Selection

- **Using the CH+/CH- on the panel of TV or on the remote control.**

Press CH+ to increase channel number.
Press CH- to decrease channel number.



- **Using 0-9 digital buttons.**

You can select the channel number by pressing 0 to 9. (In TV, DTV mode)



- **Using -/-- button**

Using -/-- button enables you to enter double digit channel numbers

Volume adjustment

- Press the VOL+/- button to adjust the volume.
- If you want to switch the sound OFF, press the .
- You can release mute by pressing the  or increase/decrease the volume.

Changing the Input Source

You can select the input source by pressing the **INPUT** button on the remote control.
Press the / button to cycle through the input source, and press the **OK** button to confirm your choice.

REMOTE CONTROL

The buttons of the original remote control are as following:



Definition of the buttons on remote control:

1. **STANDBY:** Enter or quit the stand by mode.
2. **MUTE:** Mute or restore sound.
3. **NUMBER BUTTONS:** Use to choose channels.
4. **-/- :** Change the channel bits want to input
5. **↶ :** Return to last viewed program
6. **P.MODE:** Press to cycle through the available video picture mode.
7. **S.MODE:** Press to cycle through the different sound settings.
8. **MENU:** Press to display/disappear the on screen menus or to quit some operations.
9. **SLEEP:** Set the sleep time r.
10. **INPUT:** Select signal source.
11. **AUDIO:** Switch between NICAM DUAL /NICAM DUAL /NICAM DUAL + /MONO and switch Audio language in DTV mode.
12. **OK:** Select or confirm menu item.
13. **▲/▼/◀/▶ :** Select direction.
14. **MENU:** Press to display/disappear the on screen menus or to quit some operations.
15. **EXIT:** Quit the current interface.
16. **VOL+/VOL-:** Increase/Decrease audio volume.
17. **CH+/CH-:** Scroll to next/previous channel.
18. **ASPECT:** Adjust displayable aspect ratio.
19. **INFO:** Show channel program information.
20. **LIST :** Channel List Key.
21. **COLOR BUTTONS:** Red/green/yellow/blue key navigation link.
 - ◀◀: Fastreverse (in MEDIA mode)
 - ▶▶: Fastforward (in MEDIA mode)
 - ◀◀: Previous (in MEDIA mode)
 - ▶▶: Next (in MEDIA mode)
 - ▶||: Play / Pause (in MEDIA mode)
 - : Stop (in MEDIA mode)
22. **FAV:** Display the favorites program .
23. **MIX:** Graphics function.
24. **TEXT:** Enter the Teletext, press again for MIX mode, press this button again to exit .
25. **HOLD:** Hold the teletext page on display press again to release .
26. **INDEX:** Go to index page/Enter the recorded list. (In PVR mode).
27. **REVEAL:** Reveal the hidden information of some teletext pages.
28. **SIZE:** Change the size of Teletext screen in display mode.

NOTE:

● All pictures in this manual are examples, only for reference, actual product may differ from the pictures.

● The buttons not mentioned here are not used.

 
OPERATION OF FUNCTION MENU

MAIN MENU OPERATION

Press the MENU button on the remote control to display main menu. Shown as below:

Note:

When an item in Menu is displayed as gray, it means that the item is not available or can not be adjusted with the current setup.

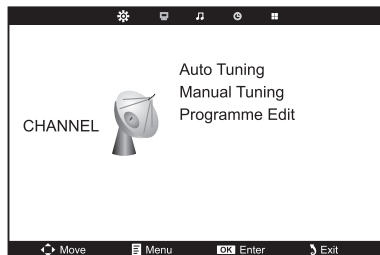

PICTURE MENU OPERATION

Press the Left or Right arrow button to select Picture menu. Shown as below:

1. Picture Mode Setting

Press the Up or Down arrow button to select Picture Mode item, then press the OK button to enter Picture Mode submenu, then press the Up or Down arrow button to select Standard, Mild, User or Dynamic, and press the OK button to confirm. Press the Menu button to return to the previous menu.

2. Contrast/Brightness/Color/Tint/Sharpness Adjustment

 
Press the Up or Down arrow button to select Contrast, Brightness, Color, Tint or Sharpness item, then press the Left or Right arrow button in order to decrease or increase Contrast, Brightness, Color, Tint or Sharpness. Press the Menu button to return to the previous menu.

3. Color Temperature Setting

Press the Up or Down arrow button to select Color Temperature item, then press the OK button to enter Color Temperature submenu, then press the Up or Down button to select Cool, Medium or Warm, and press the OK button to confirm. Press the Menu button to return to the previous menu.

4. Noise Reduction Setting

Press the Up or Down arrow button to select Noise Reduction item, then press the OK button to enter Noise Reduction submenu, then press the Up or Down button to select Off, Low, Middle or High, and press the OK button to confirm. Press the Menu button to return to the previous menu.

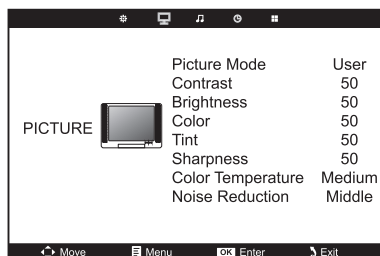


SOUND MENU OPERATION

Press the Left or Right arrow button to select Sound menu. Shown as Right:

1. Sound Mode Setting

 Press the Up or Down arrow button to select Sound Mode item, then press the OK button to enter Sound Mode submenu, then press the Up or Down arrow button to select Standard, Music, Movie, Sports or User, and press the OK button to confirm. Press the Menu button to return to the previous menu.

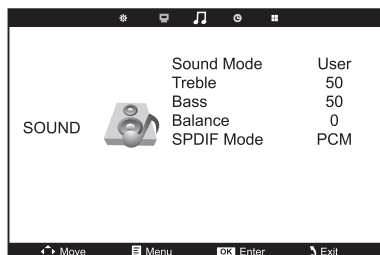

OPERATION OF FUNCTION MENU

2. Treble/Bass Adjustment

Press the Up or Down arrow button to select Treble or Bass item, then press the Left or Right arrow button in order to decrease or increase Treble or Bass. Press the Menu button to return to the previous menu.

3. Balance Adjustment

Press the Up or Down arrow button to select Balance item, then press the Left or Right arrow button in order to adjust left and right track. Press the Menu button to return to the previous menu.

4. SPDIF Mode

 
Press the Up or Down arrow button to select SPDIF Mode item, and press the Left or Right arrow button to select Auto, Off or PCM.

TIME MENU OPERATION

Press the Left or Right arrow button to select Time menu. Shown as below:

1. Clock Setting

Press the Up or Down arrow button to select Clock item, then press the OK button to enter Clock submenu, and press the Up or Down arrow button to select items, press the Left or Right arrow button to adjust. Press the Menu button to return to the previous menu.

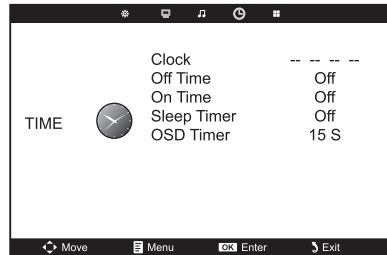

2. Off Time Setting

Press the Up or Down arrow button to select Off Time item, then press the OK button to enter Off Time submenu, and press the Up or Down arrow button to select items, press the Left or Right arrow button to adjust. Press the Menu button to return to the previous menu.

3. On Time Setting

Press the Up or Down arrow button to select On Time item, then press the OK button to enter On Time submenu, and press the Up or Down arrow button to select items, press the Left or Right arrow button to adjust. Press the Menu button to return to the previous menu.

4. Sleep Timer Setting

Press the Up or Down arrow button to select Sleep Timer item, then press the OK button to enter Sleep Timer submenu, and press the Up or Down arrow button to select Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min or 240min, and press the OK button to confirm. Press the Menu button to return to the previous menu.

5. OSD Timer Setting

 
Press the Up or Down arrow button to select OSD Timer item, then press the OK button to enter OSD Timer submenu, and press the Up or Down arrow button to select 5 S, 10 S, 15 S, 20 S, 25 S or 30 S, and press the OK button to confirm. Press the Menu button to return to the previous menu.

OPTION MENU OPERATION

Press the Left or Right arrow button to select Option menu. Shown as below:

1. OSD Language Setting

Press the Up or Down arrow button to select OSD Language item, then press the OK button to enter OSD Language submenu, and press the Left or Right arrow button to select different languages, press the OK button to confirm. Press the Menu button to return to the previous menu.

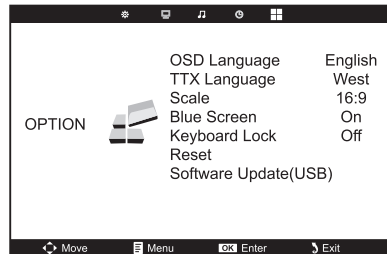

2. TTX Language Setting (Optional)

Press the Up or Down arrow button to select TTX Language item, then press the OK button to enter TTX Language submenu, and press the Up or Down arrow button to select West, East, Russian, Arabic or Farsi, press the OK button to confirm. Press the Menu button to return to the previous menu.

OPERATION OF FUNCTION MENU

4. Blue Screen/Keyboard Lock Setting

Press the Up or Down arrow button to select Blue Screen or Keyboard Lock items, and press the Left or Right arrow button to select On or Off. Press the Menu button to return to the previous menu.

5. Reset

Press the Up or Down arrow button to select Reset item, and press the OK button to display 'Are you sure? ◀ Yes No ▶', then press the Left or Right arrow button to Yes or No, press the Menu button to return to the previous menu.

6. Software Update(USB)

Press the Up or Down arrow button to select Software Update (USB) item, and press the OK button to confirm.

Note:User only on advice from Customer Support.

MENU OPERATION IN TV MODE

CHANNEL MENU OPERATION

Press the Left or Right arrow button to select Channel menu. Shown as below:

1. Auto Tuning

Press the Up or Down arrow button to select Auto Tuning item, then press OK button to begin searching and the TV will find all available channels. In the course of the auto searching, press 'MENU' button to display 'Do you want to exit tuning? ◀ Yes No ▶', then press Left arrow button to exit searching.

2. Manual Tuning

Press the Up or Down arrow button to select Manual Tuning item, then press the OK button to enter Manual Tuning submenu, and press the Up or Down arrow button Current CH, Color System, Sound System, Fine-Tune or AFC items, press the Left or Right arrow button to adjust. Press the Up or Down arrow button to select Search item, then press the Left arrow button to search through channels from high to low. Until found a channel to stop searching. Press the Right arrow button to search through channels from low to high, Until found a channel to stop searching. Press the Menu button to return to the previous menu.

3. Programme Edit

Press the Up or Down arrow button to select Programme Edit item, then press the OK button to enter Programme Edit submenu, and press the Up or Down arrow button to select items, press the Red button to delete the channel. Press the Green button to rename the channel. Press the Yellow button to move the channel. Press the Blue button to skip the channel. Press the FAV. button to set the favourite channel. Press the Menu button to return to the previous menu.



MENU OPERATION IN VGA MODE

VGA MENU OPERATION

Press the Left or Right arrow button to select Screen menu.

 
Shown as Right:

1. Auto Adjust

Press the Up or Down arrow button to select Auto Adjust item, then press the OK button to confirm.

2. Horizontal Pos./Vertical Pos./Clock/Phase Adjustment


Press the Up or Down arrow button to select Horizontal Pos., Vertical Pos., Clock or Phase items. Press the Left or Right arrow button to adjust Horizontal Pos., Vertical Pos., Clock or Phase. Press the Menu button to return to the previous menu.

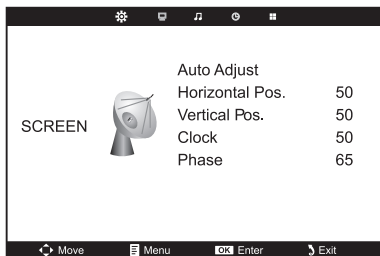


OPERATION OF FUNCTION MENU

OPERATION OF USB FUNCTION

 Press the Source button to display Source menu, and press the Up or Down arrow button to select Media item, then press the OK button to enter the interface, Shown as right:

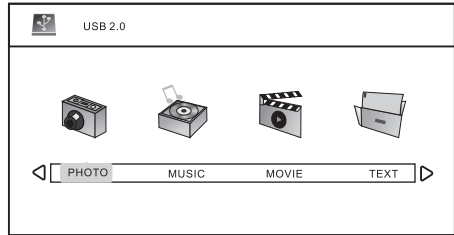


 Press the Left or Right arrow button to select PHOTO, MUSIC, MOVIE or TEXT icons, then press the OK button to confirm and enter the next menu. Shown as right:

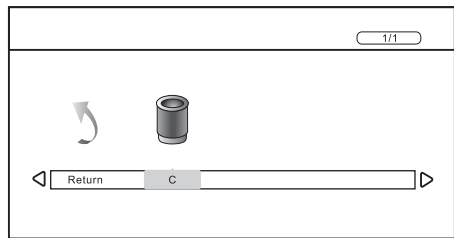


I. Photo

 - 1) Press the Left or Right button to select the 'PHOTO' icons.
- 2) Press the OK button to enter the disk selection menu.
- 3) Press the Left or Right button to select disk to enter the submenu. Press the ↩ button to return to the previous menu.
- 4) Press the Up, Down, Left or Right arrow button to highlight files. Press the OK button to select files (indicated with a checkmark) for selective playback. Press the Red button, you will enter the submenu to delete the file.
- 5) Press the Up, Down, Left or Right button to preview the file, shown as below:
- 6) Press the Play button to play photo slideshow (of checkmarked files; if no files are ticked, all pictures will play), press the OK button to display menu.

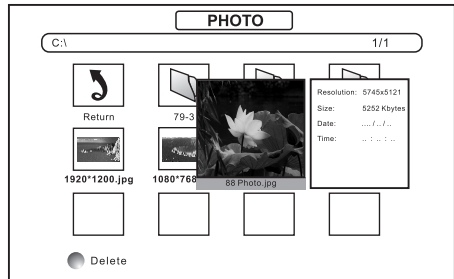

 According to menu display, press the Left or Right arrow button to function items, then press the OK button to confirm. Press the Exit button to exit.

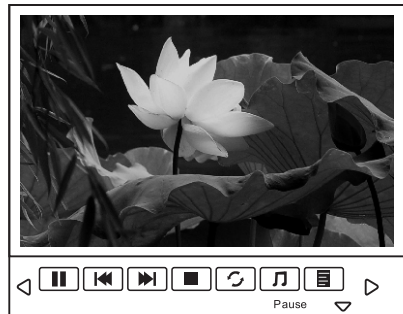

OPERATION OF FUNCTION MENU

2. Music

- 1) Press the Left or Right button to select the 'MUSIC' icons.
- 2) Press the OK button to enter the music interface, press the Up, Down, Left or Right arrow button to preview the music. Shown as right:
- 3) Press the Play button into music player and playing the selected music, Shown as right:

Pause

Press the Pause button to pause the playing music.

Play

Press the Play button to play the music.

FB

Press the FB button to fast reverse among 2X, 4X, 8X and 16X modes.

FF

Press the FF button to fast forward among 2X, 4X, 8X and 16X modes.

PREV.

Press the Prev. button to skip to previous track.

NEXT

Press the Next button to skip to next track.


Stop

Press the Stop button to stop and return.

Repeat All

Press the  button to repeat play music ( Repeat 1,  Repeat All,  Repeat None).

Mute

Press the  button to turn off the sound.

Playlist

 
 
Press the Playlist button to display play list.

Info.

Press the Info. button to display the music information.


Goto Time

Press the Goto Time button to setup play time.

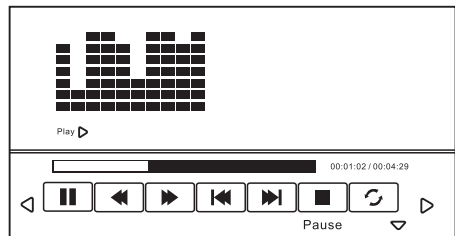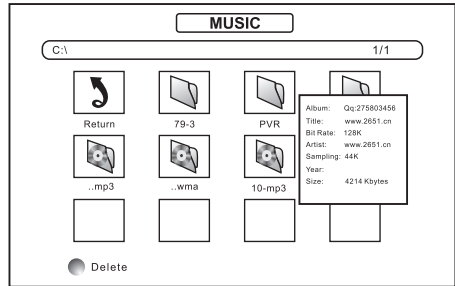

3. Movie

 
- 1) Press the Left or Right button to select the 'MOVIE' icons.
- 2) Press the OK button to enter the movie interface, press the Up, Down, Left or Right arrow button to preview the files. Shown as right:
- 3) Press the Play button to play the movie. Press the OK button to display menu. Press the Play button once more to play the movie full-screen. Press the Pause button to pause the playing movie. Press the Prev. or Next button to skip the backward or forward. Press the FB or FF button to fast reverse or fast forward. Press the Stop or Exit button to return.

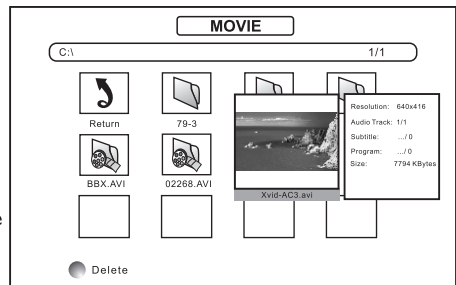


OPERATION OF FUNCTION MENU

4. Text

 - 1) Press the Left or Right button to select the 'TEXT' icons.
- 2) Press the OK button to enter the text interface, press the Up, Down, Left or Right arrow button to preview the files. Shown as right:
- 3) Press the Play button to open and play the file, press the OK button to display menu. Shown as right:

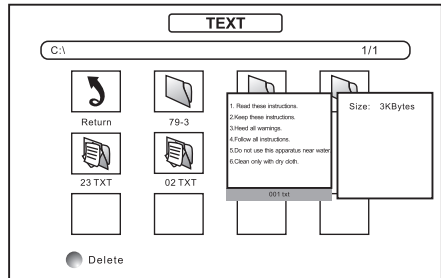

 According to menu display, press the Left or Right arrow button to function items, then press the OK button to confirm. Press the Exit button to exit.

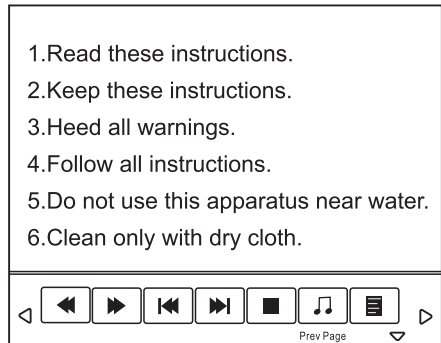

NOTE: The data in the picture is reference only, and the actual goods shall prevail.

Troubleshooting Guide

Troubleshooting

Before contrast the service technician, perform the following simple checks. If any program still persists, unplug the TV and calling for serving.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> - Check whether the main plug has been connected to a wall let. - Check whether you have pressed the POWER button on the front of TV set. - Check the picture contrast and brightness settings.
Normal picture but no sound	<ul style="list-style-type: none"> - Check the volume. - Sound muted? Press the MUTE button. - Try another channel, the problem may be with the broadcast. - Are the audio cables installed properly?
The remote control does not work	<ul style="list-style-type: none"> - Check to see if there any object between the product and remote control Causing obstruction. - Are batteries installed with correct polarity (+ to +, - to -)? - Correct remote operating mode set: TV, VCR etc.? - Install new batteries
Power is suddenly turned off	<ul style="list-style-type: none"> - Is the sleep timer set? - Check the power control settings. Power interrupted. - No broadcast on station tuned with auto activated.
Picture appears slowly after switching on	<ul style="list-style-type: none"> - This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.
No or poor color or poor picture	<ul style="list-style-type: none"> - Adjust the color in menu option. - Keep a sufficient distance between the product and the VCR. - Try another channel, the problem may be with the broadcast. - Are the VIDEO cables installed properly? - Activate the any function to restore the brightness of the picture.
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> - Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	<ul style="list-style-type: none"> - Station or cable product experiencing problems. Tune to another station. - Station signal is weak, reorient antenna to receive weaker station. - Check for sources of possible interference.
Lines or streaks in pictures	<ul style="list-style-type: none"> - Check the antenna (Change the direction of the antenna).
No output from one of the speakers	<ul style="list-style-type: none"> - Adjust balance in menu option.

NOTE: There is a problem in VGA mode (Only VGA mode applied).

Troubleshooting Guide

PROBLEM	POSSIBLE SOLUTION
The signal is out of range.	<ul style="list-style-type: none">- Adjust resolution, horizontal frequency, or vertical frequency.- Check it whether the signal cable is connected or loose.- Check the input source.
Vertical bar or stripe on back ground & Horizontal Noise & Incorrect position.	<ul style="list-style-type: none">- Work the auto configure or adjust clock, phase, or H/V position.
Screen color is unstable or single color.	<ul style="list-style-type: none">- Check the signal cable.- Reinstall the PC video card.

Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

Disposal of old electrical appliances

 
 
 
 
 


The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

STAND INSTALLATION

Stand Installation

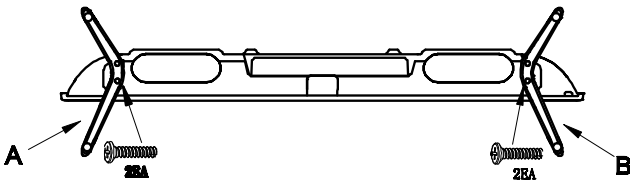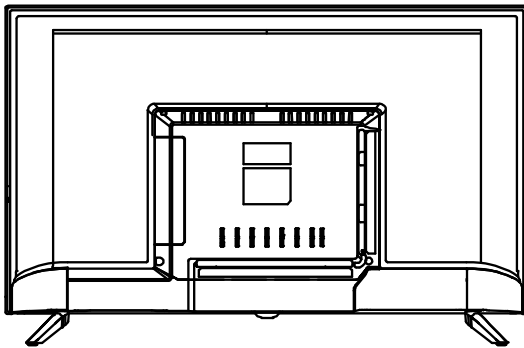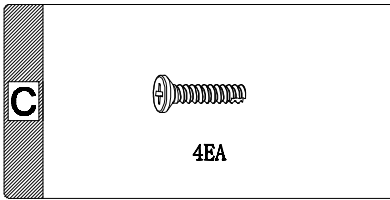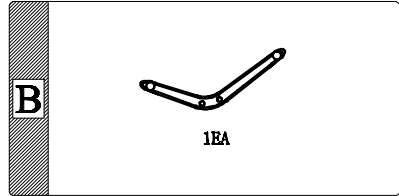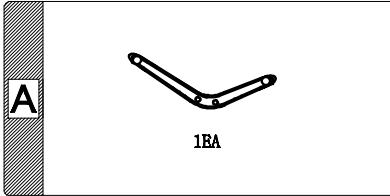



HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model:32DLE30

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR



FOX[®]
be smart

FOX LED televizori
- stvoreni za uživanje.

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.



UPOZORENJE:
KAKO BI SMANJILI RIZIK OD STRUJNOG UDARA NE UKLANJAJTE POKLOPAC (ILI ZADNJI DEO). UNUTAR UREĐAJA NEMA DELOVA KOJE SAMI MOŽETE ZAMENITI. OBRATITE SE KVALIFIKOVANIM SERVISERIMA.



Simbol munje u jednakostraničnom trouglu upozorava korisnika na neizolovane opasne delove pod naponom unutar uređaja, koji može biti dovoljne jačine da predstavlja rizik od električnog udara.



Znak uzvika u jednakostraničnom trouglu obaveštava korisnika na postojanje važnih operacionih instrukcija kao i instrukcija za održavanje u literaturi koja prati proizvod.

INFORMACIJE O PROPISIMA:

Ova oprema stvara, koristi i zrači radiofrekvenciju i ako nije instalirana i korišćena u skladu sa uputstvom, može izazvati štetne smetnje u radio komunikaciji. Ipak, ne postoji garancija da se smetnje neće pojaviti prilikom određenih instalacija. Ako ova oprema ipak izazove štetne smetnje pri radio ili TV prijemu signala, što se može utvrditi tako što se oprema isključi pa ponovo uključi, korisnik se savetuje da ukloni smetnje pomoću jedne ili više ponuđenih mera:

- Premestite prijemnu antenu.
 - Povećajte razdaljinu između opreme i prijemnika.
 - Opremu i prijemnik uključite u različite strujne utičnice.
 - Posavetujte se sa prodavcem ili sa iskusnim radio/TV serviserom.
- Sve izmene ili modifikacije koje nisu izričito odobrene od strane koja je ovlašćena da izda saglasnost, mogu da ponište korisnikovo punomoćje da koristi aparat.

OPREZ:

NE pokušavajte da modifikujete ovaj proizvod u bilo kom smislu bez pismenog odobrenja prodavca. Neovlašćena modifikacija proizvoda može da poništi korisnikovo punomoćje da koristi aparat.

Nije preporučljivo da određena statična slika bude stalno prikazana na ekranu duže vreme ili da prikazujete ekstremno svetle slike.

Ilustracije u ovom uputstvu su obezbeđene samo kao preporuke i mogu se razlikovati od stvarnog izgleda proizvoda. Dizajn i specifikacije proizvoda mogu se promeniti bez prethodnog upozorenja.

UPOZORENJE:

Kako bi umanjili rizik od požara i strujnog udara NE izlažite ovaj proizvod kiši ili vlazi. Ne koristite ovaj proizvod u tropskoj klimi.

Ventilacija ne bi trebala da bude blokirana pokrivanjem ventilacionih otvora sa predmetima kao što su novine, krpe, zavese i slično.

Proizvod ne bi trebalo da bude izložen kapljanju ili prskanju. Takođe ni jedan predmet napunjen tečnošću, kao što je na primer vaza za cveće, ne bi trebalo da bude stavljen na njega.

Treba obratiti pažnju na ekološke aspekte prilikom odlaganja baterija. Ne bacajte baterije u kantu za otpatke. Molimo vas da kontaktirate vašeg prodavca kako bi očuvali životnu okolinu.

Održavajte minimalnu razdaljinu (5cm) oko proizvoda kako bi aparat imao dovoljnu ventilaciju i hlađenje.

Na proizvod ne stavljati izvore otvorenog plamena.

Da bi sprečili širenje vatre, držite sveće i ostale izvore otvorenog plamena dalje od ovog proizvoda u svakom trenutku.

Moguć je zastoj rada proizvoda prilikom elektrostatičkog pražnjenja. Može se ponovo pokrenuti ručnim gašenjem pa ponovnim paljenjem.

OPREZ

Povezivanje na strujnu mrežu.

Preporučljivo je da se proizvod uključi u samostalnu strujnu utičnicu, odnosno na strujni kabl na koji nije priključen nijedan drugi potrošač ili produžni kabl.

Ne preopterećujte strujne utičnice. Preopterećene, labave ili oštećene strujne utičnice i produžni kablovi, spaljeni strujni kablovi sa oštećenom izolacijom su opasni. Bilo koji od ovih uslova može dovesti do strujnog udara ili požara. Periodično proveravajte kablove vašeg proizvoda i ako primetite oštećenje ili propadanje istih, isključite aparat i prestanite da ga koristite sve dok ovlašćeni serviser ne otkloni kvar. Štitite naponski kabl od fizičkog i mehaničkog oštećenja, kao na primer od uvrtanja, prignječenja, priklještenja i gaženja po njemu. Obratite posebnu pažnju na utičnice, utikače naročito u delu gde kablovi izlaze iz aparata.

Mrežni (naponski) utikač se koristi i kao deo za isključivanje aparata i tako isključen aparat je spreman za ponovno uključivanje.

 
VAŽNE INFORMACIJE

Ako TV nije postavljen na dovoljno stabilnu podlogu može predstavljati opasnost ako padne. Mnoge ozlede, naročito kod dece, mogu biti izbegnute ako primenite sledeće jednostavne mere:


- Koristite kabinete i stalke preporučene od strane proizvođača.
- Koristite nameštaj koji može da izdrži TV.
- Postarajte se na TV ne visi sa iverice nameštaja.
- Ne postavljajte TV u visoki nameštaj (kao što su na primer šifonjeri i ormani za knjige), a da ga prethodno niste sigurno pričvrstili za odgovarajuću podlogu.
- Ne postavljajte tekstil ili neki drugi materijal između TV-a i nameštaja na kom se on nalazi.
- Podučite decu o opasnostima kod pokušaja da dohvate TV ili njegove komande.

VAŽNE MERE OPREZA:


1. Pročitajte ovo uputstvo.
2. Sačuvajte ovo uputstvo.
3. Poslušajte sva upozorenja.
4. Pratite sve instrukcije.

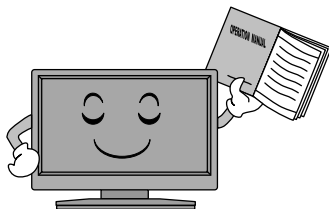

 
7. Ne blokirajte bilo koji ventilacioni otvor. Montirajte TV u skladu sa uputstvom proizvođača.

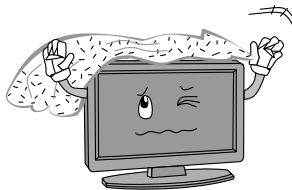

 
5. Ne koristiti proizvod u blizini vode.

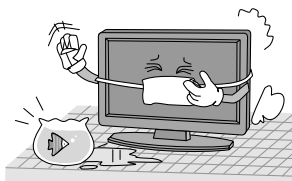

 8. Ne postavljati u blizini izvora toplote kao što su radijatori, peći ili drugi objekti (uključujući i pojačavače) koji emituju toplotu.

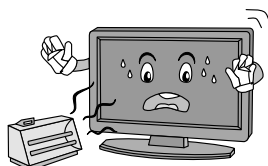

 
6. Brisati samo sa suvom krpom.

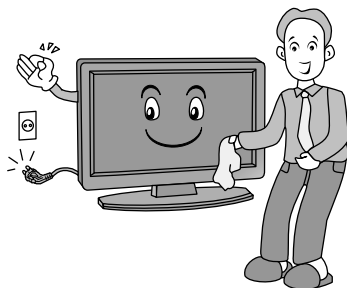

9. Utikač aparata priključite u odgovarajuću utičnicu, odnosno voditi računa da li je utikač sa polarizovanim viljuškama ili sa uzemljenjem pa shodno tome odabrati i utičnicu.

Mere opreza:

 10. Čuvajte mrežni kabl od gaženja ili od priklještenja naročito kod utikača, razvodne kutije i izlaza iz aparata.

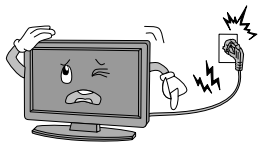


11. Koristite samo one dodatke navedene od strane proizvođača.


12. Koristiti samo sa kolicima, stalkom, tronožcem, podupiračem ili stolom naznačenim od strane proizvođača ili sa onim dobijenim uz aparat. Kada koristite kolica obratite pažnju kada ih pomerate da bi izbegli ozledu ako dođe do prevrtanja.



 13. Isključite iz struje ovaj aparat za vreme oluja sa munjama ili ako ga duže vreme ne koristite.

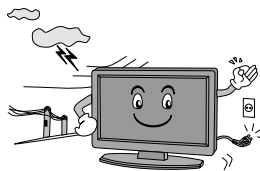

 14. Prepustite servisiranje kvalifikovanim osobama. Servis je potreban kad je aparat oštećen u bilo kom smislu, kao na primer oštećenje utikača ili naponskog kabla, ako je po njemu prosuta tečnost ili je neki predmet upao u njega, ako je bio izložen kiši ili vlazi, ako ne radi normalno ili ako je ispušten.

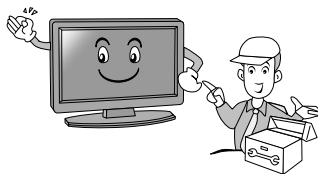

PRILIKOM ODLAGANJA (BACANJA):

- Fluorescentna lampa koja se koristi u ovom proizvodu sadrži male količine žive.
- Ne bacajte ovaj proizvod sa ostalim kućnim smećem.
- Odlaganje (bacanje) ovog proizvoda mora da se uradi u skladu sa regulativama zemlje u kojoj živite.

OBRATITI PAŽNJU:

- Ako je aparat hladan na dodir, može doći do malog treperenja prilikom paljenja. Ovo je normalno, nema ničeg nepravilnog u radu vašeg TV-a.
- Nekoliko minuta mogu biti vidljive tačkaste nepravilnosti na ekranu, pojavljujući se kao sićušne crvene, zelene ili plave tačke. Ova pojava nema štetan uticaj na performanse vašeg TV-a.
- Izbegavajte dodirivanje ili držanje vašeg prsta duže vreme na ekranu. Ako to uradite može doći do privremene iskrivljenosti vašeg ekrana.

 
Upotreba daljinskog upravljača:

Kada koristite daljinski upravljač usmerite ga ka senzoru na TV-u. Ako postoji predmet između daljinskog i senzora, aparat možda neće reagovati.

- Uperite daljinski upravljač ka senzoru na TV-u.
- Kada koristite TV u veoma osetljivoj prostoriji infra crveni senzor možda neće raditi kako treba.
- Preporučena daljina za nesmetan rad daljinskog upravljača je oko 7 metara.

Postavljanje baterija u daljinski upravljač:

1. Otvorite poklopac na zadnjem delu daljinskog upravljača.
2. Postavite dve baterije veličine AAA. Budite sigurni da ste ih postavili pravilno tako da + i - baterija odgovaraju dijagramu unutar upravljača.
3. Vratite poklopac.

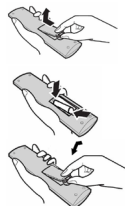

Zamena baterija:

Potrebno je da postavite baterije u daljinski upravljač tako što ćete pratiti sledeće instrukcije. Kada baterije oslabe operativna razdaljina daljinskog upravljača će drastično opasti i moraćete ih zameniti.

Preporuka kako koristiti baterije:

Korišćenjem pogrešnih vrsta baterija može dovesti do hemijskog curenja ili eksplozije. Molimo vas obratite pažnju na sledeće:

- Budite sigurni da ste polove + i - baterija postavili kako je prikazano na dijagramu u odeljku za baterije daljinskog upravljača.
- Različite vrste baterije imaju drugačije karakteristike. Ne mešajte različite vrste baterija.
- Ne mešajte nove i stare baterije. Ako to uradite smanjujete životni vek baterije i može doći do curenja iste.
- Promenite baterije istog trenutka kada prestanu da rade.
- Hemikalije koje cure iz baterije mogu izazvati iritaciju kože. Ako hemikalije počnu da cure iz baterije odmah ih obrišite sa suvom krpom.
- Baterije mogu da imaju kraći životni vek zbog stanja prilikom skladištenja. Izvadite baterije kad znate da nećete koristiti daljinski upravljač duže vreme.
- Baterije ne izlažite prekomernoj toploti kao što su sunčeva svetlost, vatra ili slično.

Oprez:

- Može doći do eksplozije ako baterije nisu zamenjene pravilno.
- Zamenite baterije sa istom ili sličnom vrstom baterija.

Povezivanje kablova:

Molimo vas da pročitate pažljivo važne stavke u delu "Održavanje i bezbednost" pre povezivanja i korišćenja proizvoda.

1. Izvadite TV iz pakovanja i stavite ga na ravnu podlogu.

Obratiti pažnju:

- Kada uključujete ili isključujete TV, kompjuter ili drugi uređaj budite sigurni da je neizmehnična struja već isključena. Kada isključujete naponski ili signalni kabl, držite ga za utikač (izolovani deo), a ne za telo kablā.

2. RF izlazni terminal može se povezati sa RF ulazom TV-a.

3. AV terminal DVD-a može se povezati sa AV ulazom TV-a putem AV kablā.

4. Povežite jedan kraj VGA kablā sa VGA portom kompjutera, a drugi kraj sa VGA portom TV-a, a zatim zategnite šrafove u smeru okretanja kazaljki sata na priključcima na oba kraja kablā.

Obratiti pažnju:

Pri priključivanju 15-to pinskog VGA kablā vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

5. Priključite jedan kraj HDMI kablā sa HDMI izlazom nekog uređaja, a drugi sa HDMI ulazom TV-a.

Obratiti pažnju:

Pri priključivanju HDMI kablā vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

6. Proverite da su odgovarajući AV kablovi spojeni sa odgovarajućim AV ulazima na TV-u.

7. Povežite naponski kabl sa izvorom struje od 100-240V.

Obratiti pažnju:


-Opseg izvora napajanja TV-a je 100-240V, 50/60Hz. Ne priključivati ga na izvor napajanja koji nije u tom opsegu.

-Molimo vas da držite izolovani deo utikača naponskog kablā kada ga isključujete i nemojte da dodirujete direktno njegove metalne delove.

Osnovne operacije:

Vodič za brz start

-Povezivanje:





1. Priključite napajanje i antenu.
2. Pritisnite dugme  na daljinskom upravljaču da uključite TV.

-Početno podešavanje:

Kada je TV uključen po prvi put pojaviće se niz uputstava na ekranu koji će vam pomoći u podešavanju osnovnih parametara.

1. Izaberite željeni jezik.
Pritisnite dugmiće ///, a zatim dugme OK.


2. Izaberite odgovarajuću zemlju.

Pritisnite dugmiće ///, a zatim dugme OK da bi izabrali zemlju posle čega će početi traženje kanala.

Upaliti/ ugasiti TV

-Upaliti TV

Priključite kabl za napajanje. U tom trenutku TV će preći u stanje čekanja (standby).

Pritisnite dugme  na daljinskom upravljaču kako bi iz stanja pripravnosti upalili TV.

-Ugasiti TV

Pritisnite dugme  na daljinskom upravljaču kako bi ga prebacili u stanje pripravnosti (standby).

Ne ostavljajte vaš TV u stanju čekanja duže vreme. Najbolje je da TV isključite iz napajanja i da ga odvojite od kabla za antenu.

-Nema signala

Ako nema ulaznog signala pojaviće se poruka koja vas na to upozorava. U TV/DTV modu ako nema signala 15 minuta, TV će se sam ugasiti. U PC modu TV će se sam ugasiti ako ulaznog signala nema 5 minuta. Kada spojite VGA kabl, TV će se sam upaliti.

Biranje programa

- Korišćenje CH+/CH- dugmića na TV u i na daljinskom upravljaču

Pritisnite dugme CH+ da bi prešli na viši kanal.

Pritisnite dugme CH- da bi prešli na niži kanal.

-Korišćenje dugmića sa brojevima (0-9)


Birajte željeni kanal pritiskanjem odgovarajućih brojeva od 0 do 9 (u TV i DTV modu)


-Korišćenje dugmića -/--

Možete da izaberete deo broja kanala pritiskanjem dugmeta -/--

Podešavanje zvuka



-Pritisnite dugme VOL +/- da podesite jačinu zvuka

-Ako želite da isključite zvuk pritisnite dugme 

-Ako želite da ponovo uključite zvuk pritisnite dugme  ili VOL +/-

Promena izvora ulaznog signala

Možete da birate izvor ulaznog signala tako što ćete pritisnuti dugme INPUT na daljinskom upravljaču.

Zatim pomoću dugmića / se krećite između datih izvora ulaznih signala i pritisnite dugme OK da potvrdite izbor.

Daljinski upravljač

Dugmići daljinskog upravljača izgledaju kao što je prikazano:



BELEŠKA:

- Sve slike u ovom priručniku su primeri, samo za referencu, stvarni proizvod se može razlikovati od slika.
- Tasteri koji ovde nisu pomenuti se ne koriste.

Definicija tastera na daljinskom upravljaču

1. **STANDBY:** Udjite ili izadjite iz stanja pripravnosti.
2. **MUTE:** Isključivanje ili uključivanje zvuka.
3. **NUMBER BUTTONS:** Koristite za izbor kanala.
4. **-/- :** Promenite cifre kalana koje želite da unesete.
5. **↶ :** Povatak na poslednji gledani program.
6. **P.MODE:** Pritisnite da biste prešli na raspoloživi režim video slike.
7. **S.MODE:** Pritisnite za kretanje kroz različite postavke zvuka.
8. **MENU:** Pritisnite za prikaz/nestajanje menija na ekranu ili za prekid nekih operacija.
9. **SLEEP:** Podesite za automatsko isključivanje TV.
10. **INPUT:** Izaberite izvor signala.
11. **AUDIO:** Prelazite između: NICAM DUAL /NICAM DUAL /NICAM DUAL+ /MONO I prebacite Audio jezik u DTV režimu.
12. **OK:** Izaberite ili potvrdite MENU.
13. **▲/▼/◀/▶ :** Izaberite pravac
14. **MENU** Pritisni da bi prikazao glavni meni/da bi nestao prikaz menija/da bi završili neke operacije.
15. **EXIT:** Zatvorite trenutni prikaz.
16. **VOL+/VOL-:** Povećajte / smanjite jačinu zvuka.
17. **CH+/CH-:** Dodajte do sledećeg / predhodnog kanala.
18. **ASPECT:** Podesite prikazani odnos strane ekrana.
19. **INFO:** Prikaži informacije o programu.
20. **LIST :** Lista kanala.
21. **COLOR BUTTONS:** Crveno/Zeleno/Žuto/Plavo tasteri za navigaciju.
 - ◀◀: Brzo vraćanje (u MEDIA režimu)
 - ▶▶: Ubzraj(u MEDIA režimu)
 - ◀◀: Predhodna(u MEDIA režimu)
 - ▶▶: Sledeći (u MEDIA režimu)
 - ▶|: Pusti / Pauziraj (u MEDIA režimu)
 - : Zaustavi (u MEDIA režimu)
22. **FAV:** Prikažite omiljeni program.
23. **MIX:** Grafička funkcija
24. **TEXT:** Udjite u Teletekst, ponovo pritisnite za MIKS režim, ponovo pritisnite taster da biste izašli
25. **HOLD:** Držite stranicu teleteksta na ekranu, ponovo pritisnite da biste je zatvorili.
26. **INDEX:**Idite na indeks stranicu/unestite snimljenu listu (u PVR režimu).
27. **REVEAL:** Otkrijte skrivene informacije nekih stranica teleteksta.
28. **SIZE:**Promenite veličinu ekrana teletska u režimu prikaza.

 
FUNKCIJE MENIJA

MAIN MENI FUNKCIJE

Pritisnite dugme MENU kako bi prikazali opcije glavnog menija. Kako je prikazano niže :

Obaveštenje:

Ako je opcija prikazana u sivoj boji to znači da ona nije dostupna ili da se ne može menjati sa trenutnim podešavanjima uređaja.

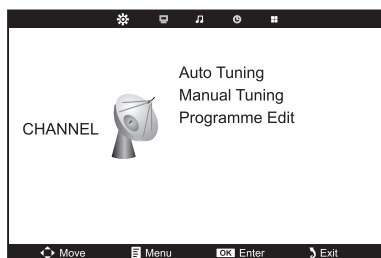

PICTURE MENI FUNKCIJE

Pritisnite dugme strelica levo/desno kako bi izabrali Picture meni. Kako je prikazano niže:

1. Podešavanja slike

Pritisnite strelicu gore/dole u Picture Mode, opcijama, a zatim OK dugme kako bi izabrali Picture Mode podmeni, zatim strelice gore/dole kako bi izabrali Standard, Mild, User ili Dynamic opciju. Pritisnite OK dugme da potvrdite izbor. Pritisnite dugme Menu za povratak.

2. Kontrast/Osvetljenost/Boja/Senka/Oštrina podešavanja

 
Pritisnite strelice gore/dole kako bi izabrali Contrast, Brightness, Color, Tint ili Sharpness opciju, zatim strelicu levo/desno kako bi smanjili/povećali vrednost opcija Contrast, Brightness, Color, Tint ili Sharpness. Pritisnite dugme MENU za povratak.

3. Podešavanje inteziteta boja

Pritisnite strelice gore/dole kako bi izabrali Color Temperature opciju, a zatim dugme OK kako bi izabrali Color Temperature podmeni, zatim strelicu levo/desno i izaberite opciju Cool, Medium ili Warm, na kraju pritisnite OK dugme za potvrdu izbora. Pritisnite dugme MENU za povratak.

4. Smanjivanje šuma slike

Pritisnite strelice gore/dole kako bi izabrali Noise Reduction opciju, zatim OK dugme kako bi izabrali Noise Reduction podmeni, zatim strelicu levo/desno kako bi izabrali Off, Low, Middle ili High, na kraju pritisnite OK dugme za potvrdu izbora. Pritisnite dugme MENU za povratak.

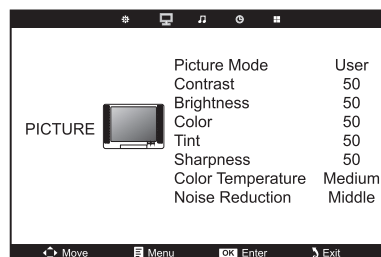


SOUND MENI FUNKCIJE

Pritisnite dugme strelica levo/desno kako bi izabrali Sound meni. Kako je prikazano desno:

1. Podešavanje zvuka

 Pritisnite strelicu gore/dole i izaberite Sound Mode opciju, zatim dugme OK kako bi izabrali Sound Mode podmeni, zatim strelicu levo/desno i izaberite opciju Standard, Music, Movie, Sports ili User, na kraju pritisnite OK dugme za potvrdu izbora. Pritisnite dugme MENU za povratak.

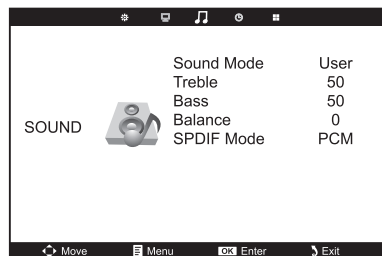

FUNKCIJE MENIJA

2. Treble/Bass podešavanja

Pritisnite strelicu gore/dole i izaberite Treble ili Bass opciju, zatim strelicu levo/desno i ikako bi pojačali/smanjili Treble ili Bass. Pritisnite dugme MENU za povratak.

3. Podešavanje balansa

Pritisnite strelicu gore/dole i izaberite Balance opciju, zatim strelicu levo/desno i ikako bi podesili jačinu levog/desnog zvučnika. Pritisnite dugme MENU za povratak.

4. Pritisnite strelicu gore

dole za odabir SPDIF moda (koaksijalni izlaz za podešavanje digitalnog zvuka za eksterne zvučnike) ili pritisnite strelicu levo/desno za odabir Auto, Off ili PCM

PODEŠAVANJE VREMENA

Pritisnite strelicu levo/desno i izaberite Time opciju. Kao što je prikazano dole:

1. Podešavanje sata

Pritisnite strelicu gore/dole i izaberite Clock opciju, zatim dugme OK kako bi izabrali Clock podmeni.

Pritisnite gore/dole kako bi izabrali željenu opciju, zatim dugme levo/desno kako bi je podesili.

Pritisnite dugme MENU za povratak,

2. Podešavanje vremena gašenja TV-a

Pritisnite strelicu gore/dole i izaberite Off Time opciju, zatim dugme OK kako bi izabrali Off Time podmeni.

Zatim strelicu gore/dole kako bi izabrali željenu opciju i strelicu levo/desno kako bi je podesili

Pritisnite dugme MENU za povratak.

3. Podešavanje vremena paljenja TV-a

Pritisnite strelicu gore/dole i izaberite Time opciju, zatim dugme OK kako bi izabrali On Time podmeni. Pritisnite strelicu gore/dole kako bi izabrali željenu opciju, zatim strelicu levo/desno kako bi je podesili. Pritisnite dugme MENU za povratak.

4. Podešavanje vremena gašenja TV-a (u minutima)

Pritisnite strelicu gore/dole i izaberite Sleep Timer opciju, zatim dugme OK kako bi izabrali Sleep Timer podmeni. Pritisnite strelicu gore/dole i izaberite vrednost: Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min ili 240min, na kraju pritisnite OK dugme da potvrdite izbor. Pritisnite dugme MENU za povratak.

5. Podešavanje vremena prikaza menija

Pritisnite strelicu gore/dole i izaberite OSD Timer opciju, zatim pritisnite OK dugme kako bi izabrali OSD Timer podmeni. Pritisnite strelicu gore/dole i izaberite vrednost: 5 S, 10 S, 15 S, 20 S, 25 S ili 30 S, na kraju pritisnite OK dugme da potvrdite izbor. Pritisnite dugme MENU za povratak.



Funkcije menija OPTION

Pritisnite strelicu levo/desno i izaberite Option opciju. Kao što je prikazano dole:

1. Podešavanje jezika menija

Pritisnite strelicu gore/ dole i izaberite OSD Language opciju, zatim dugme OK kao bi izabrali OSD Language podmeni. Pritisnite strelicu levo/desno kako bi izabrali željeni jezik, na kraju pritisnite dugme OK da potvrdite izbor. Pritisnite dugme MENU za povratak.

 
2. Podešavanje jezika teleteksta (Opciono)

Pritisnite strelicu gore/ dole i izaberite TTX Language opciju, zatim dugme OK kao bi izabrali TTX Language podmeni. Pritisnite strelicu gore/dole

i izaberite opciju: West, East, Russian, Arabic ili Farsi, pritisnite dugme OK da potvrdite izbor. Pritisnite dugme MENU za povratak.

3. Podešavanje veličine slike

Pritisnite strelicu gore/ dole i izaberite Scale opciju, zatim pritisnite OK dugme kako bi izabrali Scale podmeni. Pritisnite strelicu gore/dole kako bi izabrali željenu vrednost. Pritisnite dugme MENU za povratak.

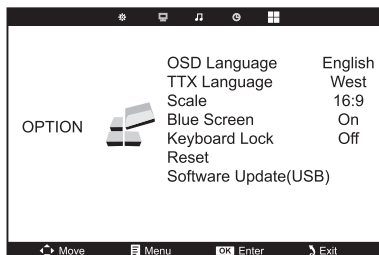

FUNKCIJE MENIJA

4. Plavi ekran/zaključavanje tastature

Pritisnite strelicu gore/ dole i izaberite Blue Screen ili Keyboard Lock opciju, pritisnite zatim strelicu levo/ desno kako bi uključili/isključili ovu opciju. Pritisnite dugme MENU za povratak.

5. Resetovanje

Pritisnite strelicu gore/ dole i izaberite Reset opciju, zatim pritisnite OK kako bi prikazali 'Are you sure ? ◀ Yes No ▶', Pritisnite strelicu levo za DA odnosno strelicu desno za NE. Pritisnite dugme MENU za povratak.

6. Software Update(USB)

Pritisnite strelicu gore/ dole i izaberite Software Update (USB) opciju, pritisnite dugme OK da potvrdite izbor.

Obaveštenje: Koristiti samo po savetu korisničkog servisa.

FUNKCIJE MENIJA U TV MODU

FUNKCIJE CHANNEL MENIJA

Pritisnite strelicu levo/desno i izaberite Channel opciju. Kao što je prikazano dole:

1. Automatsko podešavanje kanala

Pritisnite strelicu gore/ dole i izaberite Auto Tuning opciju, zatim OK dugme kako bi otpočeli pretragu. TV će pronaći sve raspoložive kanale. Tokom automatske pretrage pritisnite MENU kako bi prikazali: 'Do you want to exit tuning? ◀ Yes No ▶', zatim pritisnite strelicu levo kako bi zaustavili pretragu.

2. Ručno podešavanje kanala

Pritisnite strelicu gore/ dole i izaberite Manual Tuning opciju, zatim pritisnite OK dugme kako bi izabrali Manual

Tuning podmeni. Pritisnite strelicu gore/dole i izaberite Current CH, Color System, Sound System, Fine-Tune ili AFC opciju, zatim pritisnite strelicu levo/desno kako bi je podesili. Pritisnite strelicu gore/dole i izaberite Search opciju, zatim pritisnite strelicu levo za pretraživanje kroz kanale od viših do nižih. Pritisnite strelicu desno za pretraživanje kroz kanale od nižih do viših. Zaustavite pretragu kad nađete željene kanale. Pritisnite dugme MENU za povratak.

3. Uređivanje programa

Pritisnite strelicu gore/ dole i izaberite Programme Edit opciju, zatim pritisnite OK dugme kako bi izabrali Programme Edit podmeni, Pritisnite strelicu gore/dole i izaberite željenu kanal, zatim pritisnite CRVENO dugme za brisanje kanala. Pritisnite ZELENO dugme kako bi preimenovali kanal. Pritisnite ŽUTO dugme da premestite kanal. Pritisnite PLAVO dugme da preskočite kanal. Pritisnite FAV dugme da ga označite kao omiljeni kanal. Pritisnite dugme MENU za povratak.



FUNKCIJE MENIJA U VGA MODU

FUNKCIJE VGA MENIJA

 
Pritisnite strelicu levo/desno i izaberite Screen opciju. Kao što je prikazano desno:

1. Automatsko podešavanje

Pritisnite strelicu gore/dole i izaberite Auto Adjust opciju, zatim pritisnite dugme OK kako bi potvrdili izbor.

2. Horizontal Pos./Vertical Pos./Clock/Phase podešavanja

Pritisnite strelicu gore/dole i izaberite Horizontal Pos., Vertical Pos., Clock ili Phase opciju. Pritisnite strelicu levo/desno kako bi podesili željenu opciju. Pritisnite dugme MENU za povratak.


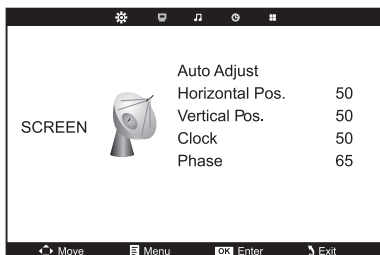


FUNKCIJE MENIJA

FUNKCIJE USB MENIJA


Pritisnite dugme Source kako bi prikazali Source meni, a zatim strelicu gore/dole i izaberite Media (Media1 ili Media2) opciju, zatim pritisnite dugme OK kako bi otvorili prikaz kao što je prikazano desno:

  Pritisnite strelicu levo/desno i izaberite PHOTO, MUSIC, MOVIE ili TEXT opciju, zatim pritisnite dugme OK kako bi potvrdili izbor i otvorili novi meni kao što je prikazano desno:

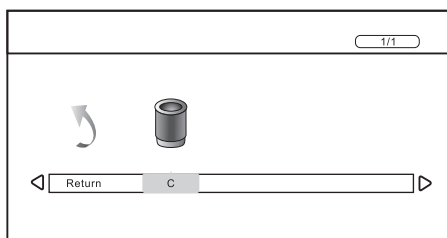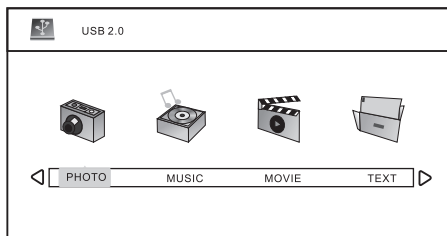

1. Photo

 - 1) Pritisnite strelicu levo/desno i izaberite 'PHOTO' opciju.
- 2) Pritisnite dugme OK kako bi izabrali meni za odabir diskova.
- 3) Pritisnite strelicu levo/desno kako bi izabrali željeni disk i otvorili podmeni. Pritisnite dugme ↻ kako bi se vratili na prethodni meni.
- 4) Pritisnite strelicu gore/dole/levo/desno kako bi odabrali fajlove. Pritisnite dugme OK kako bi označili željene fajlove (označene sa znakom štikliranja) za selektivnu reprodukciju. Pritiskom na CRVENO dugme, odabracete podmeni u kojem možete brisati fajlove.
- 5) Pritisnite strelice levo/desno/gore/dole kako bi videli prikaz fajla, kao što je prikazano dole:
- 6) Pritisnite dugme Play kako bi videli izabrane slike u vidu slajdova (prikazuje štiklirane slike; ako nijedan fajl nije štikliran prikazaće sve slike), Pritisnite dugme OK kako bi prikazali meni.

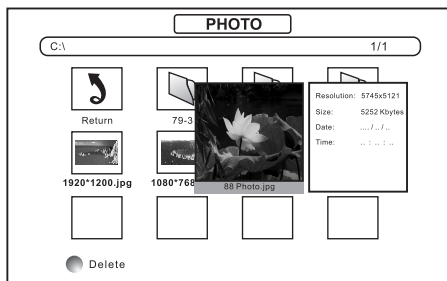

Prema prikazanom meniju, pritisnite strelice levo/desno kako bi izabrali ponuđene opcije, zatim pritisnite dugme OK kako bi potvrdili izbor. Pritisnite dugme EXIT za izlazak.



FUNKCIJE MENIJA

2. Music

- 1) Pritisnite strelicu levo/desno i izaberite 'MUSIC' opciju.
- 2) Pritisnite dugme OK kako bi prikazali Music opciju, zatim strelicu gore/dole/levo/desno kako bi prikazali informacije o muzičkom fajlu. Kao što je prikazano desno:
- 3) Pritisnite dugme Play kako bi slušali izabranu muziku. Kao što je prikazano desno:

Pause

Pritisnite dugme Pause za pauzu.

Play

Pritisnite dugme Play kako bi slušali muziku.

FB

Pritisnite dugme FB kako bi usporili muziku 2X, 4X, 8X ili 16X.

FF

Pritisnite dugme FF kako bi ubrzali muziku 2X, 4X, 8X ili 16X.

PREV.

Pritisnite dugme Prev. za prethodnu pesmu.





NEXT

Pritisnite dugme Next za sledeću pesmu.

Stop

Pritisnite dugme Stop kako bi zaustavili muziku.

Repeat All

Pritisnite dugme  kako bi ponovili pesmu ( Repeat 1,  Repeat All,  Repeat None).

Mute

Pritisnite dugme  kako bi isključili zvuk.

Playlist

 
 
Pritisnite dugme Playlist kako bi prikazali listu pesama.

Info.

Pritisnite dugme Info. kako bi prikazali informacije o pesmi.


Goto Time

Pritisnite dugme Goto Time kako bi označili određeno vreme pesme.

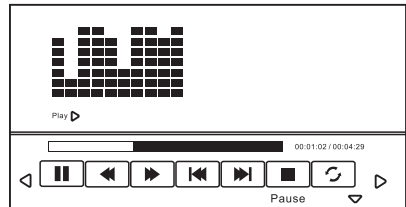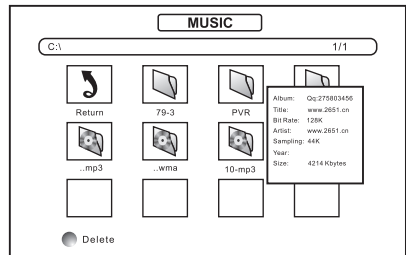

3. Movie

 
- 1) Pritisnite dugme levo/desno i izaberite 'MOVIE' opciju.
- 2) Pritisnite dugme OK kako bi prikazali Movie opciju, zatim strelicu gore/dole/levo/desno kako bi videli prikaz fajla. Kao što je prikazano desno:
- 3) Pritisnite dugme Play kako bi izabrali film. Pritisnite dugme OK kako bi prikazali meni. Pritisnite dugme Play ponovo kako bi prikazali film preko celog ekrana. Pritisnite dugme Pause kako bi pauzirali film. Pritisnite dugme Prev. ili Next za prethodni/naredni film. Pritisnite dugme FB ili FF za usporenje/ ubrzanje reprodukcije filma. Pritisnite dugme Stop ili za povratak.

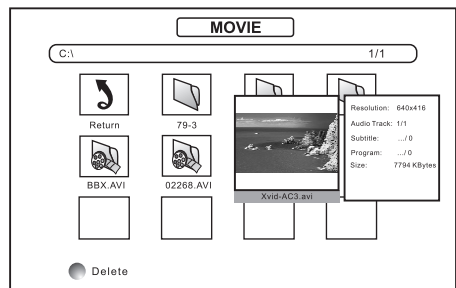

FUNKCIJE MENIJA

4. Text

 - 1) Pritisnite strelicu levo/desno i izaberite 'TEXT' opciju.
- 2) Pritisnite dugme OK kako bi prikazali Text meni, zatim strelicu gore/ dole/ levo/desno kako bi videli prikaz fajla. Kao što je prikazano desno:
- 3) Pritisnite dugme Play da prikazete izabrani fajl, a dugme OK da prikazete meni. Kao što je prikazano desno:

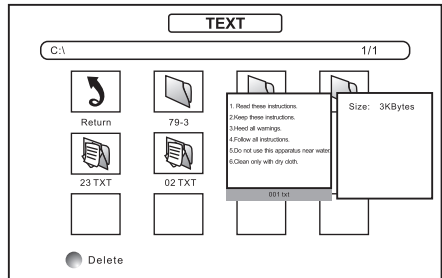

Prema prikazanom meniju pritisnite strelice levo/desno kako bi izabrali ponuđene opcije, zatim pritisnite dugme OK kako bi potvrdili izbor. Pritisnite dugme EXIT za izlazak.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.



BELEŠKA: Postoji problem u VGA modu (primenjeno samo u VGA modu)

REŠAVANJE PROBLEMA

REŠAVANJE PROBLEMA

Pre nego što pozovete servis, sprovedite dole navedene provere. Ako ne uspete da rešite problem na ovaj način, isključite TV iz struje i pozovite servis.

PROBLEM	MOGUĆA REŠENJA
Nema zvuka ni slike	<ul style="list-style-type: none"> - Proverite da li je glavni kabl uključen u struju - Proverite da li ste pritisnuli POWER dugme - Proverite podešavanje kontrasta i jačine svetla
Normalna slika, ali nema zvuka	<ul style="list-style-type: none"> - Proverite jačinu zvuka - Proverite da li je MUTE opcija uključena - Promenite kanal, problem može da bude u emitovanju - Da li su svi kablovi vezani za zvuk priključeni kako treba?
Daljinsko upravljanje ne radi	<ul style="list-style-type: none"> - Proverite da li je neki objekat između daljinskog upravljača i proizvoda - Da li su baterije postavljene ispravno? Proverite polove + i - - Da li je postavljen ispravan mod upravljanja: TV, VCR itd.? - Promenite baterije
TV se iznenada isključio	<ul style="list-style-type: none"> - Da li je postavljen Sleep Timer? - Proverite podešavanja uključivanja i isključivanja. - Nema emitovanja na određenom kanalu, automatsko gašenje posle nekog vremena
Slika se pojavljuje postepeno nakon uključivanja uređaja	<ul style="list-style-type: none"> - Ovo je normalno, slika je isključena tokom uključivanja proizvoda. Molimo Vas da se obratite serviserima u slučaju da se slika ne pojavi nakon 5 minuta.
Slika ili boje su loše ili ih uopšte nema	<ul style="list-style-type: none"> - Podesite boju u meniju - Napravite značajan razmak između proizvoda i VCR-a - Promenite kanal, problem može biti u emitovanju - Da li su svi kablovi vezani za VIDEO priključeni ispravno? - Aktivirajte bilo koju funkciju kako bi povratili normalnu jačinu svetlosti slike
Pojava horizontalnih ili vertikalnih linija, slika se tresu	<ul style="list-style-type: none"> - Proverite da li postoje lokalne smetnje kao što su električni aparati i slično.
Loš signal kod nekih kanala	<ul style="list-style-type: none"> - Televizijska stanica ima nekih problema. Promenite kanal - Signal je slab, promenite položaj antene - Proverite da li postoje neki izvori mogućih smetnji
Linije ili pruge na slikama	<ul style="list-style-type: none"> - Proverite antenu (Promenite njen položaj)
Nema zvuka u jednom zvučniku	<ul style="list-style-type: none"> - Podesite ravnotežu u meniju

REŠAVANJE PROBLEMA

PROBLEM	MOGUĆE REŠENJE
Signal je van dometa	- Podesite rezoluciju, horizontalnu frekvenciju ili vertikalnu frekvenciju - Proverite da li je kabl vezan za signal povezan ispravno ili labavo - Proverite izvor
Vertikalna linija ili pruga u pozadini / horizontalna buka / nepravilna pozicija	- Odradite autokonfiguraciju ili podesite sat, fazu ili H/V poziciju
Boja ekrana je nestabilna / jedna boje je nestabilna	- Proverite kabl za signal - Ponovo instalirajte PC video karticu

ODRŽAVANJE

- Rani kvarovi mogu biti sprečeni. Psžljivo i redovno čišćenje može da produži vreme Vašeg posedovanja televizora. Isključite televizor i izvadite kabl iz struje pre nego što započnete čišćenje.

Čišćenje ekrana

1. Evo jednog sjajnog načina da očistite Vaš ekran od prašine na duže vreme. Meku krpu pokvasite u mekoj vodi pomešanoj sa malo omekšivača ili deterđenta. Prosušite krpu dok ne bude skoro potpuno suva, a zatim obrišite ekran.
2. Višak vode ne sme biti na ekranu. Budite sigurni da ga nema pre nego što ponovo uključite televizor.

Čišćenje okvira

Prilikom čišćenja koristite meku, suhu krpu bez vlakana. Molimo Vas, proverite da krpa nije mokra.

Produženo odsustvo



Ako planirate da ostavite svoj TV isključen na duži vremenski period (npr. tokom odmora), trebalo bi da isključite kabl za napajanje iz struje kako bi izbegli moguću štetu koja može nastati usled udara groma ili izliva struje.

Odlaganje starih električnih uređaja



 
 
 
 
 
Evropska direktiva 2002/96/EC o električnoj i elektronskoj opremi za otpad (WEEE) kaže da se stari električni uređaji za domaćinstvo ne smeju odlagati sa normalnim, nesortiranim komunalnim otpadom. Stari električni uređaji moraju se sakupljati odvojeno kako bi se optimizovao oporavak i recikliranje okoline.

Simbol precrtane kante za smeće tu je kako bi Vas podsetio da odložite ovaj uređaj zasebno. Potrošači bi trebalo da kontaktiraju lokalnu vlast ili prodavača kako bi dobili sve potrebne informacije o odlaganju aparata.

Beleška: Podaci na slici su samo reference.

Uputstvo za instalaciju postolja

Stand Installation

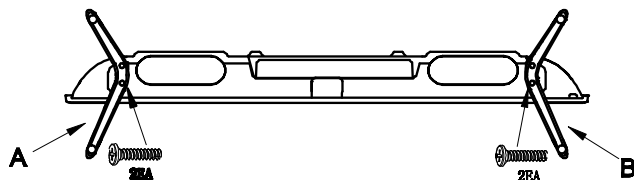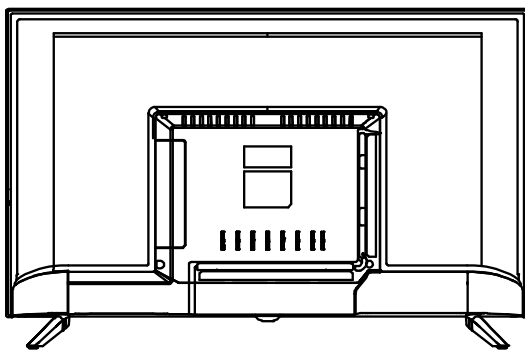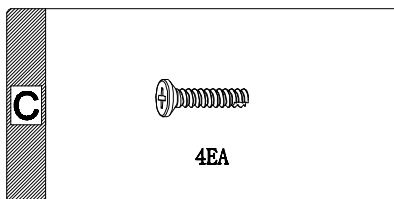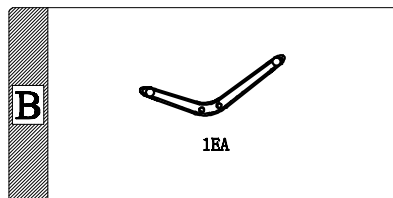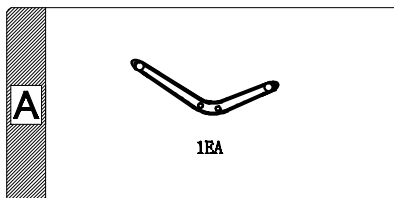



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs