



FOX[®]

be smart

HDMI[®]
HIGH DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model:32DLE308



Android™ OS

EN

SR

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.



U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SAFETY INSTRUCTION

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<h3>CAUTION</h3> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	--

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



SAFETY INSTRUCTION

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.

 


5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. **The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.**

No naked flame sources, such as lighted candles, should be placed on the apparatus.
The apparatus shall be connected to mains socket outlet with a protective earthing connection.
The appliance coupler regarded as disconnection device, the disconnect device shall remain readily operable.
20. The equipment may be used in tropical and moderate climates.




SAFETY INSTRUCTION



Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

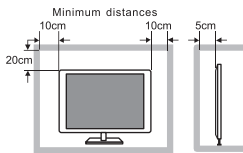

Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

Heat built up can reduce the service life of your television, and can also be dangerous.



Caution

Never stand on, lean on, push suddenly the product or its stand.

 
You should pay special attention to children.



Caution


Do not place the main unit on an unstable cart stand, shelf or table.

Serious injury to an individual, and damage to the television, may result should it fall.



Caution

 When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

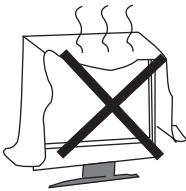

Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force. Individuals should execute caution when dealing with broken glass should the panel break.



















CONTENTS

SAFETY INSTRUCTIONS	
.....	1 - 3
DESCRIPTION OF CONTROL KEYS & CONNECTORS	
.....	5 - 6
OPERATION OF REMOTE CONTROL	
.....	7 - 8
CONNECTIONS	
.....	9
OPERATION OF FUNCTION MENU	
.....	10 - 26
TROUBLE SHOOTING GUIDE	
.....	27
SPECIFICATIONS	
.....	27

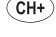CONTROL BUTTON AND TERMINAL

























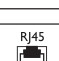


CONTROL KEYS:

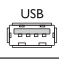BUTTON NAME	BUTTON ICON TYPE				BUTTON INSTRUCTION
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	To display source menu.
MENU BUTTON	MENU			MENU	To select menu.
VOLUME UP BUTTON	VOL+				To increase the sound volume level
VOLUME DOWN BUTTON	VOL-				To decrease the sound volume level
PROGRAM UP BUTTON	CH+		C/P ▲		To select the next higher programme number.
PROGRAM DOWN BUTTON	CH-		C/P ▼		To select the next lower programme number.
STANDBY BUTTON	POWER			STANDBY	Switch ON/OFF the TV when at standby mode.

NOTE:

1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.

CONTROL BUTTON AND TERMINAL

PORT NAME	PORTS ICON TYPE			PORT INSTRUCTION
	1	2	3	
AV IN				AV input port
COMPONENT IN				YPbPr signal input port
AV OUT			/	AV output port
AUDIO OUT			/	AUDIO output port
TERMINAL ANTENNA (75 OHM)				TV signal input port
TERMINAL ANTENNA (75 OHM)				Satellite signal input port
VGA				RGB signal input port
VGA AUDIO IN				VGA audio input port
HDMI				HDMI signal input port
USB IN				USB input port
EARPHONE OUT				Earphone output port
AUDIO IN				AUDIO input port
VIDEO OUT				VIDEO output port
COAXIAL OUT				Coaxial output port
OPTICAL				Optical output port
SCART				SCART signal input port
PCMCIA				PCMCIA input port
RJ45 IN				RJ45 input port
DC IN				DC+12V input port
TF IN				TF input port

NOTE:

 
1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.

NOTE:

IF YOUR PROGRAM ON TV WILL BE INCLUDED BY CABLE TELEVISIONS,
PLEASE CHECK YOUR EARNING AND POTENTIAL EVALUATION ON THE CABLE OF YOUR CABLE OPERATOR.
FOR THESE INFORMATION CONTACT YOUR CABLE OPERATOR.

OPERATION OF REMOTE CONTROL

The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

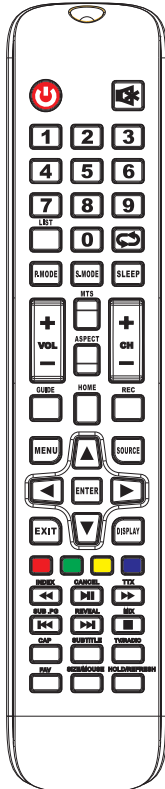

1. **POWER:** Turn on the TV or enter standby mode.
2. **MUTE:** Turn off the sound and turn on when press again.
3. **0-9:** Figures "0-9" are used to directly input channel number.
4. **LIST:** Press to open the channels list.
5. **↔:** Press this button to toggle between the current and the previous programme you were you were viewing
6. **S.MODE:** Select the different sound mode directly.
7. **SLEEP:** Set the sleep time.
8. **MTS:** Press to select the MTS mode.(for example, Nicam , BTSC, MONO, STEREO .eg)
9. **P.MODE:** Select the different picture mode directly.
10. **MENU:** Start system menu and return to upper menu.
11. **SOURCE:** Input source selection button.

12. **▲▼◀▶:** Press ▲▼ button to select items.
Press ▶ button to adjust it.

13. **ENTER:** To confirm the choice with the highlighted menu item.

14. **EXIT:** Press to exit the OSD menu.

15. **DISPLA Y:** Press to display the source and channel's display.

16. **VOL+:** Increase the volume.

17. **REFRESH:** Refresh page.

HOLD: HOLD On or Off for current page display .

18. **VOL-:** Decrease the volume.

19. **CAP:** A key to the current image is saved to the disk.

20. **PLAY/PAUSE:** Press to PLAY/PAUSE in the USB mode. start play and PAUSE , in USB mode.

CANCEL: When a page is selected in the mode of text, it may take some time before it becomes available, pressing the CANCEL key will return to the TV mode. When the required page is found , the page number will appear at the top of the TV picture, press the CANCEL key to return to the mode of text for you to browse this page.

21. **TV/RADIO :** When watching channel, allows you to switch between TV and Radio modes.

22. **STOP:** Press to STOP in the USB mode.

MIX: TV and TXT pictures are mixed together (transparent background)

23. **GREEN/RED/YELLOW/CYAN button**

24. **CH+:** Increase the program.

25. **HOME:** A key back to the android home page.

26. **CH-:** Decrease the program.

27. **ASPECT:** Aspect function.

28. **MOUSE:** Mouse switch.

SIZE: Change the size of display in Teletext mode.

29. **SUBTITLE:** To display subtitle in USB mode.

30. **REC:** Record begin in PVR mode.

31. **GUIDE:** Launches the EPG (Electronic Program Guide)

32. **FAV:** Press to add or remove your favorite channels under tv menu.

33. **FF:** Press to fast forward in USB mode.

TXT: Switch the teletext on and off.

34. **PREV:** Press to skip backwards in USB mode

SUB. PG: Press to access sub page.

35. **FR:** Press to fast reverse in USB mode.

INDEX: Request the Index page in Teletext mode.

36. **NEXT:** Press to skip forward in USB mode.

REVEAL: Reveal or Hide the hidden words.



OPERATION OF REMOTE CONTROL

TELETEXT FUNCTION(optional)

1)TEXT BUTTON

Press the TEXT button to change the viewing from TV to Teletext if TV stations in your local have teletext broadcasting.

2) REVEAL BUTTON

This is a toggle function key to display hidden characters.

3) MIX BUTTON

This is a toggle function button to display TV Picture and teletext together or teletext only.

4) RED/GREEN/YELLOW/BLUE BUTTONS

These 4 Colour keys in teletext mode can quickly enter the Pre-captured teletext pages.

5) ▲/▼ BUTTON

These keys can be used as a page up/down key in teletext mode.

6) 0, 1, 2, ..., 9 BUTTON

Using the 0, 1, 2, ..., 9 keys, the required Teletext Pages are selected.

7) HOLD BUTTON

Some Teletext information is contained on more than one page, the pages automatically changing after a given reading time. Press the HOLD key to stop the page changing. Press the HOLD key again to allow the page to change.

8) ININDEX BUTTON

Press the ININDEX key to view Index page in teletext mode.

9) SIZE BUTTON

This key is to expand character size and display half teletext page, Each press will display upper... towerNormal page.

USB FUNCTION (Optional)

1) ◀ / ▶▶ BUTTON

Skip a scene or music.

2) ◀◀ / ▶▶▶ BUTTON

Go back to the previous or skip to the next.

3) ▶|| BUTTON

Play / Pause.

4) ■ BUTTON

Stop playback.

5) SUBTITLE BUTTON

In the USB playback movies, open or closed subtitle function(Need streaming support).

Note:

A USB device must already be connected.

BATTERY INSTALLATION OF REMOTE CONTROL UNIT

 
1. Open the battery compartment cover.

2. Insert two 'AAA' (pencil size) 1.5V batteries. Make sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.

3. Close the battery compartment cover.


Note:

- Recommend use alkaline type batteries.
- The life time of the batteries may last up to one year, depending on how often the remote control is used. For the best performance, the batteries should be replaced on a yearly basis, or when remote operation becomes erratic.
- Be sure to place the batteries in the correct direction, as shown left.
- Do not mix old and new batteries, or different types.
- Old batteries may leak chemical and damage the remote control. Always remove batteries as soon as they become weak.

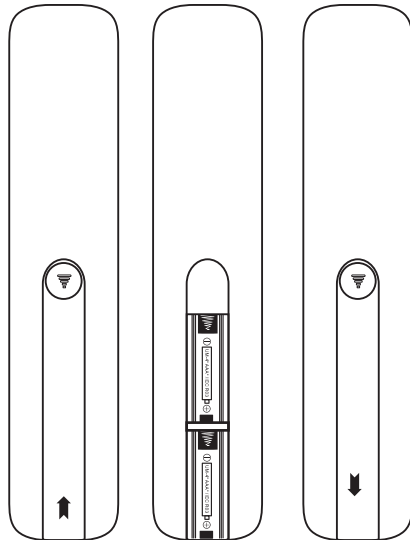

CONNECTIONS

 INSTALLATION OF ANTENNA

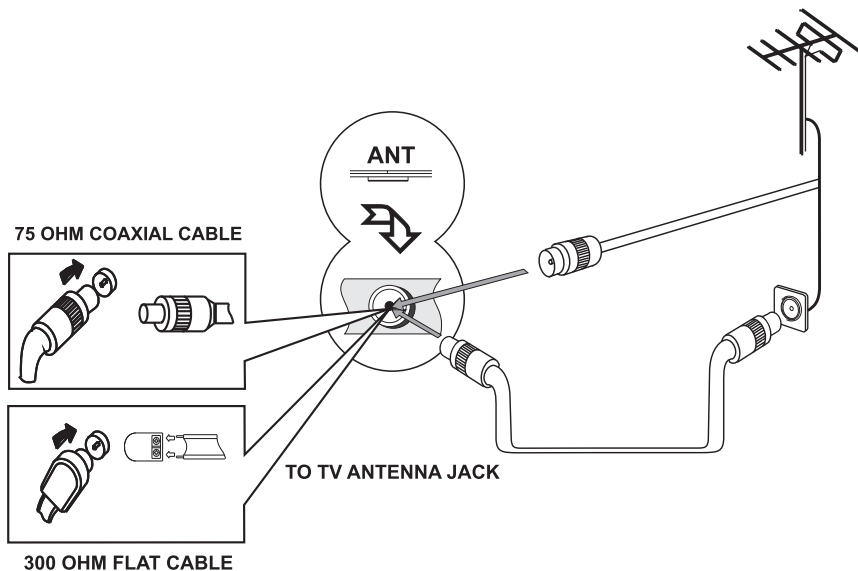

Connect the 75 OHM coaxial cable from the antenna to the antenna jack on the rear panel, as shown above.

Note:

- For better reception, especially in outlying area or where ghost or interference happens, an external roof-mounted antenna is recommended.
- For UHF TV reception, use the specified UHF antenna. Consult the local sale dealer.
- When using 300 OHM flat cable, a 300 OHM - 75 OHM adapter should be adopted for a proper connection to the antenna jack.

POWER CONNECTION

- Plug the AC cord into an AC outlet.
- Press the Power button on the remote control to turn on, press the Power button again to standby.

Note:

- This unit should be operated from a household AC100-240V~ 50/60Hz.
- When you disconnect the power supply cord, pull it out by the plug. Never pull the cord itself.

CAUTIONS:

 
During a power outage, the TV should be unplugged from the AC outlet. To conserve energy the TV should be unplugged from the AC outlet if not being used for a prolonged period of time.

OPERATION OF FUNCTION MENU


Note:The above pictures are for reference only, there may be differences in kind.

FTI

Connect an RF cable from the TV's input called "RF-In" and to your TV Aerial socket.
Press OK button to select the Start the setup.

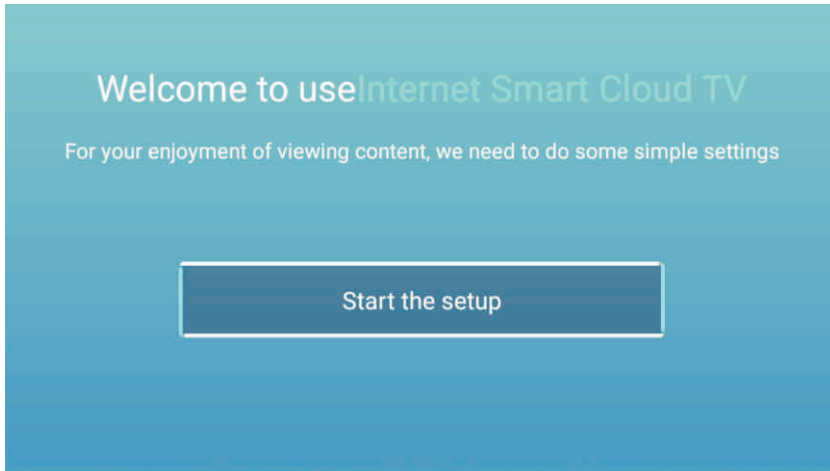

 
Press **【▼】 / 【▲】** button to select the language.
Press OK button to sure, and press **【▶】** button to setup country.

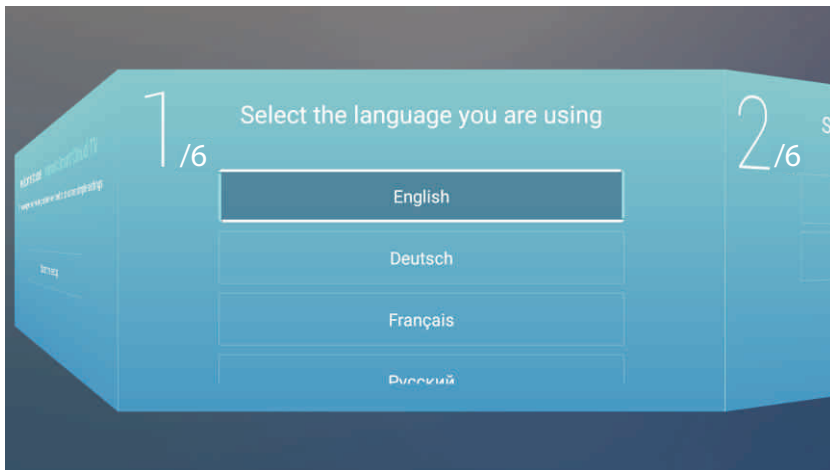

OPERATION OF FUNCTION MENU


Press **▼** / **▲** button to select the country.

 Press OK button to sure, and press **▶** button to select the time zone.

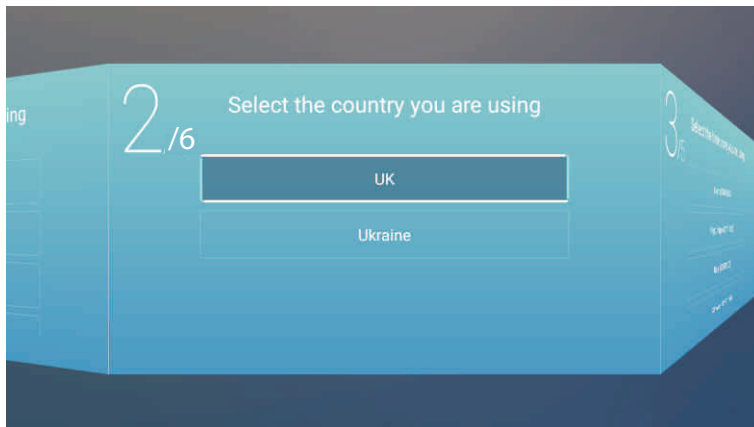

Press **▼** / **▲** button to select the time zone.

 Press **▶** button to connect the WIFI/network.

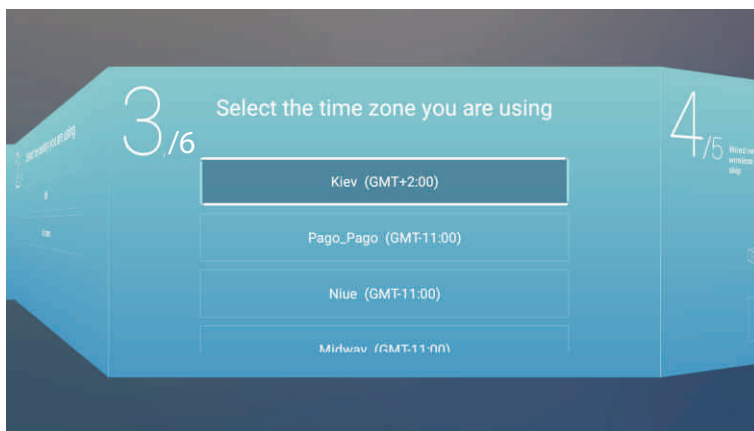

OPERATION OF FUNCTION MENU

 
Press OK button to connect the WIFI/network.

Press **▶** button to select the input source.




Use your mobile phone to scan the 2D code to connect the TV Assistant. (Refer to Eshare document for details)

Press **▶** button to select the input source.

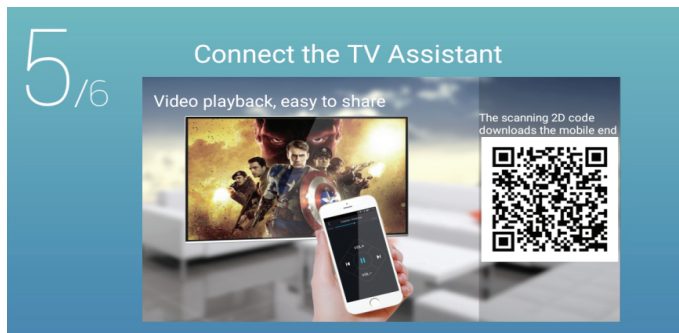

 Press **▼** / **▲** button to select the input source.

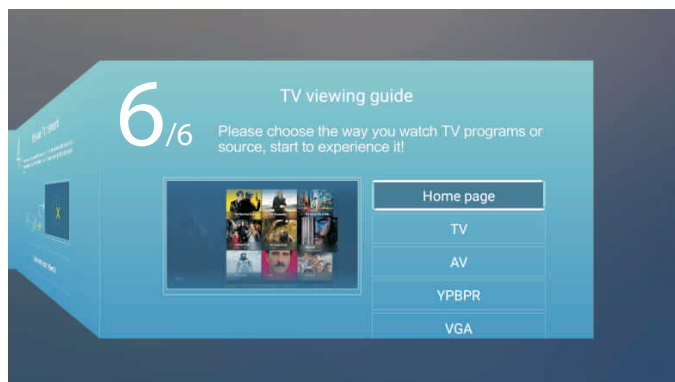

OPERATION OF FUNCTION MENU

INPUT SOURCE

Press SOURCE button to enter Input Source menu.

Press **▼** / **▲** button to select.

Press ENTER to select source.

MAIN MENU

HOME

Press **◀** / **▶** button to select HOME menu.

 
Press **▼** / **▲** / **◀** / **▶** button to select.




OPERATION OF FUNCTION MENU

APPS/LIKE_APPS

Press **▼** / **▲** button to select APPS/LIKE_APPS to add app.

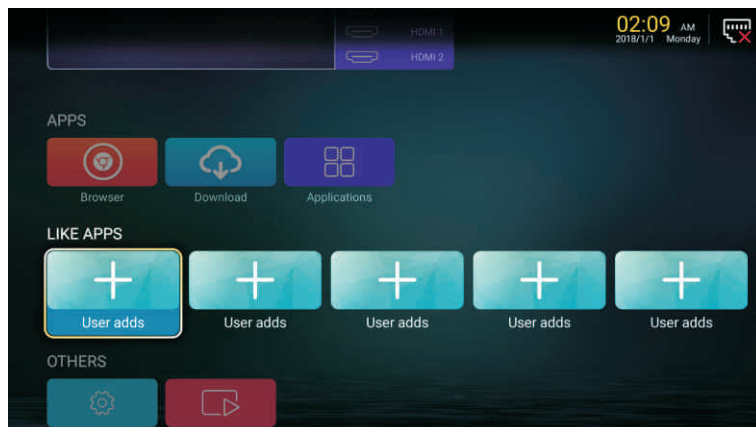

 
Press **▼** / **▲** / **◀** / **▶** to select App to install.

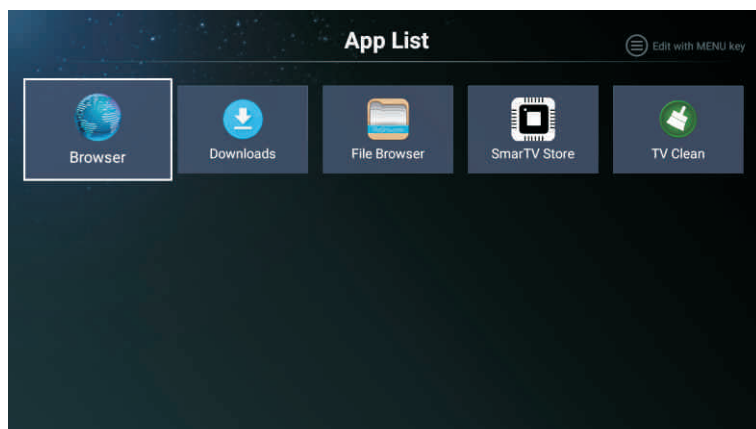

OPERATION OF FUNCTION MENU

SETTINGS

 Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to enter Settings.

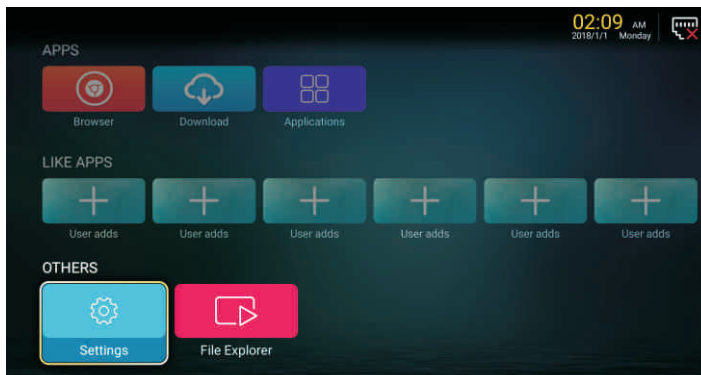


PICTURE

Press MENU button to enter main menu.

Press **【◀】 / 【▶】** button to select Picture.

 Press ENTER to enter setting.



1. Press **【▼】 / 【▲】** to select: Picture Mode/Contrast/Brightness/Color/Sharpness/Backlight/Noise Reduction/Color Temp/More Settings.

2. Press **【◀】 / 【▶】** to adjust or select.



OPERATION OF FUNCTION MENU

Picture Mode

Press **【▼】** / **【▲】** button to select Picture Mode, then press **【◀】** / **【▶】** button to select.

(Optional: Standard, Movie, Vivid, Soft, User).

Standard	The default mode, to make users experience high-quality images under normal light.
Movie	This mode is more suitable for watching movies.
Vivid	Image colors more beautiful, more vivid picture.
Soft	Produces a highly defined image in a soft lit room.
User	User-defined picture settings.

Contrast / Brightness / Colour / Sharpness / Backlight

Press **【▼】** / **【▲】** to select, and press **【◀】** / **【▶】** to adjust.

Contrast	Adjust image contrast.
Brightness	Adjust image brightness.
Color	Adjust image color density.
Sharpness	Adjust the image edge sharpness.
Backlight	Adjust the screen backlight brightness.

Noise Reduction

Setting the option to eliminate image noise intensity.

Press **【▼】** / **【▲】** to select Noise Reduction, and press **【◀】** / **【▶】** to select.

(Optional: Off, Low, Middle, High, Auto).

Color Temp

Adjust the overall color of the image.


Press **【▼】** / **【▲】** to select Colour Temperature. press **【◀】** / **【▶】** to select.

(Optional: Cool, Normal, Warm).

Cool	Produces a gentle blue-hued image.
Normal	Produces a vivid image.
Warm	Produces a red-hued image.

More Settings

 Press **【▼】** / **【▲】** to select More Settings

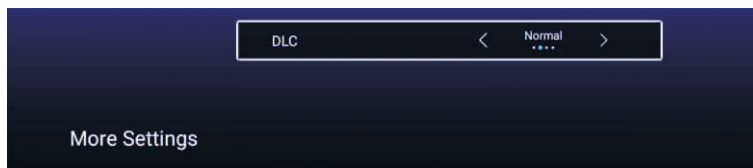

DLC

 
Press **【▼】** / **【▲】** to select DLC, press **【◀】** / **【▶】** to select Dark/Normal/Bright/Off.

OPERATION OF FUNCTION MENU

Sound


Press MENU button to display the main menu.

Press [◀] / [▶] button to select Sound in the main menu.



Press [▼] / [▲] to select: Sound Mode/Bass/Treble/Balance/AVC/More settings.

 Press ENTER / [◀] / [▶] to select or adjust.

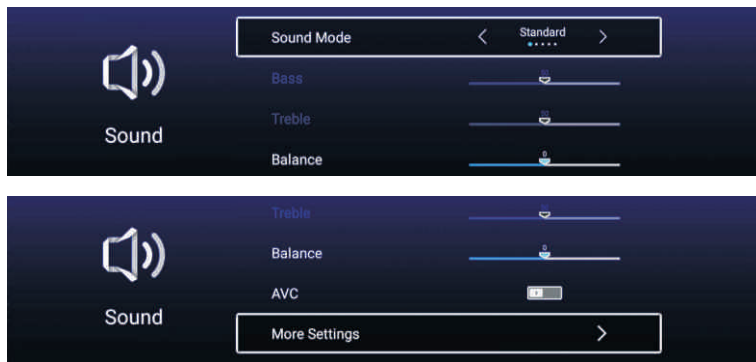

Sound Mode

Press [▼] / [▲] button to select Sound Mode, then press [◀] / [▶] button to select. (Optional: Standard, Music, Theater, News, User).

- | | |
|----------|---|
| Standard | Produces a balanced sound in all environments. |
| Music | Preserves the original sound.Good for musical programs. |
| Theater | Enhances treble and bass for a rich sound experience. |
| News | Enhanced voice. |
| User | Select to customize picture settings. |

- | | |
|---------|---|
| Bass | Adjust the bass. |
| Treble | Adjust the treble. |
| Balance | Adjust the left and right channel output balance. |

 
Press [▼] / [▲] button to select Balance, then press [◀] / [▶] button to adjust.

AVC

Press [▼] / [▲] button to select AVC, then press [◀] / [▶] button to choose ON/OFF. After opening the AVC,Once the volume is set, regardless of any difference TV Version printed on each channel, it can make the speaker volume remained stable.

OPERATION OF FUNCTION MENU

More Settings

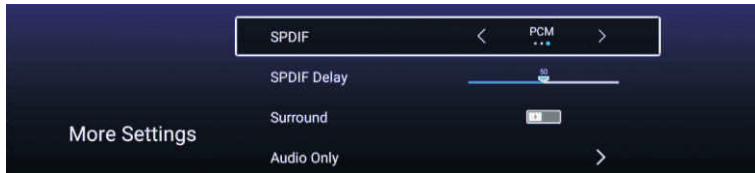

SPDIF

Press **▼** / **▲** button to select SPDIF, then press **◀** / **▶** button to choose OFF / RAW / PCM.

SPDIF Delay

Press **▼** / **▲** button to select SPDIF Delay, then press **◀** / **▶** button to adjust.

Surround

 
Achieve better surround sound effect.

Press **▼** / **▲** button to select Surround, then press **◀** / **▶** button to choose ON/OFF.

Audio Only

After the opening screen is not displayed only plays sound

Press **▼** / **▲** button to select Audio Only, then press **▶** button to choose ON/OFF.

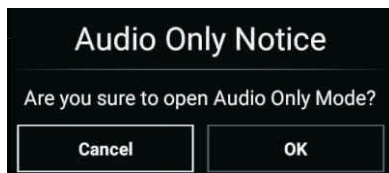


OPERATION OF FUNCTION MENU

Channel


Press MENU button to display the main menu. Press [◀] / [▶] button to select Channel in the main menu.

 Press [▼] / [▲] button to select. Press ENTER / [◀] / [▶] to enter.




Antenna Type-Air

 Select the Air/Cable to tune.

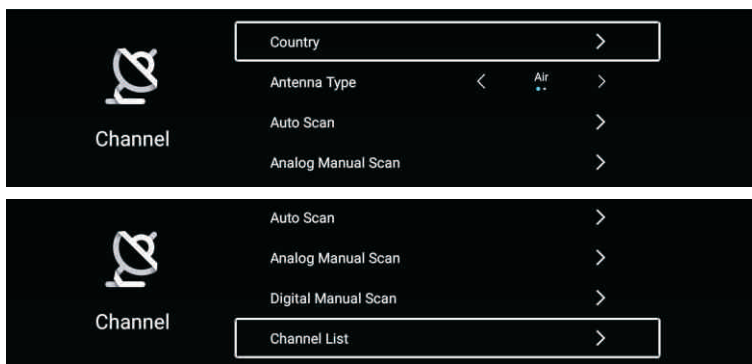


Auto Scan

 Press [▼] / [▲] button to select Auto Scan, press ENTER to start Auto Scan.

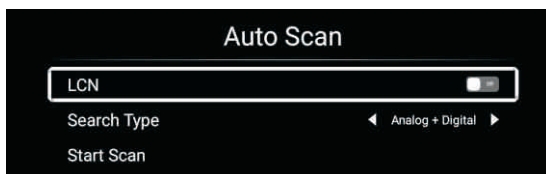

Analog Manual Scan

 
Press [▼] / [▲] button to select Analog Manual Scan, press ENTER to start Scan.

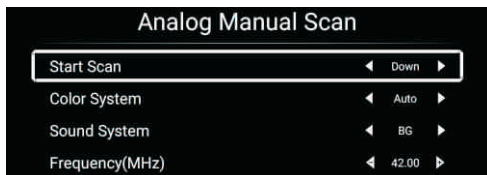

OPERATION OF FUNCTION MENU


Digital Manual Scan

 Press [▼] / [▲] button to select Digital Manual Scan, press ENTER to start Scan.

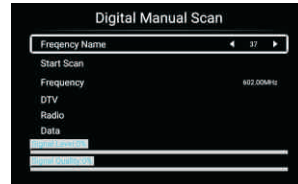

Channel List

 Press [▼] / [▲] button to select Channel List to list, press MENU button edit the channel (Skip /Delete /Fav).

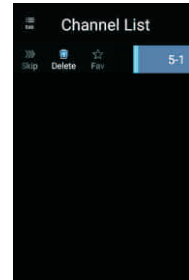



EPG

Press [▼] / [▲] button to select EPG.



Antenna Type-Cable

  
Select the Air/Cable to tune.

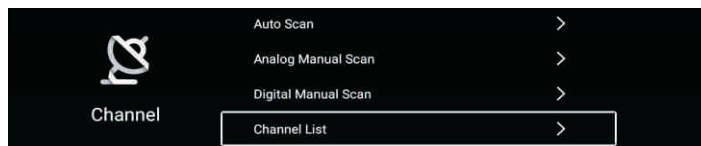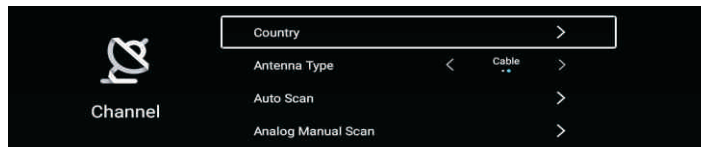

OPERATION OF FUNCTION MENU


Auto Scan

 Press **[▼]** / **[▲]** button to select Auto Scan, press ENTER to start Auto Scan.

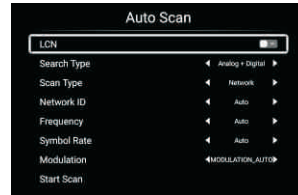


Analog Manual Scan

 Press **[▼]** / **[▲]** button to select Analog Manual Scan, press ENTER to start Scan.

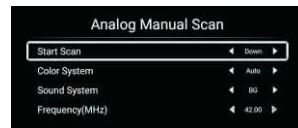

Digital Manual Scan

 Press **[▼]** / **[▲]** button to select Digital Manual Scan, press ENTER to start Scan.

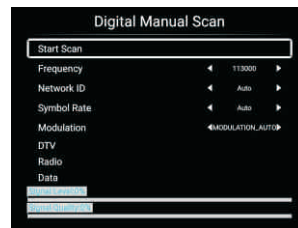

Channel List

Press **[▼]** / **[▲]** button to select Channel List to list, press MENU button edit the channel (Skip /Delete /Fav).

EPG

 
Press **[▼]** / **[▲]** button to select EPG.



OPERATION OF FUNCTION MENU


System Lock

Press MENU button to display the main menu. Press [◀] / [▶] button to select System Lock.



Press [▼] / [▲] button to select Change Password/System Lock.

 Press ENTER / [◀] / [▶] to enter.

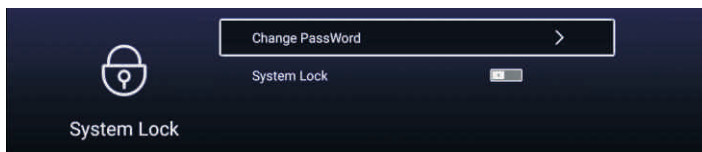

Change Password

Press [▼] / [▲] button to select Change Password.

System Lock

Press [▼] / [▲] button to select System Lock.


A screenshot of the 'Change Password' form. It has three input fields: 'Old Password', 'New Password', and 'Confirm Password'. At the bottom are 'Cancel' and 'OK' buttons.

OPERATION OF FUNCTION MENU

Keypad Lock

Press [▼] / [▲] button to lock the keypad.

 (NOTE: This function is available when the System Lock is on.)

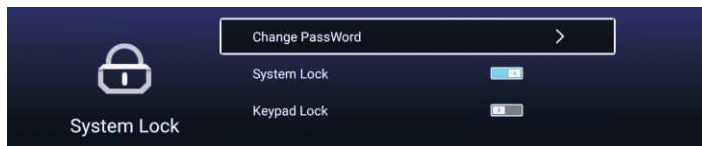

Time Setting

 
Press MENU button to display the main menu.

Press [◀] / [▶] button to select Time Setting in the main menu.



Press [▼] / [▲] button to select: OSD Timer/Sleep Timer/Autostandby Timer.

Press [◀] / [▶] to enter.

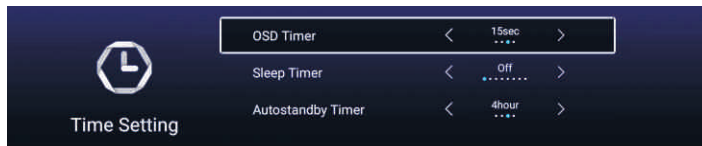

OSD Timer

Press [▼] / [▲] button to select OSD Timer, Press [◀] / [▶] to select.

(Optional: off, 5sec, 15sec, 30sec).

Sleep Timer

Press [▼] / [▲] button to select Sleep Timer, Press [◀] / [▶] to select.

(Optional: off, 15min, 30min, 45min, 60min, 90min, 120min, 240min).

Autostandby Timer

Press [▼] / [▲] button to select Autostandby Timer, (Optional: off, 3hour, 4hour, 5hour).

OPERATION OF FUNCTION MENU

Common

 
 
Press MENU button to display the main menu.

Press [◀] / [▶] button to select Common in the main menu,



Press [▼] / [▲] button to select: Blue Screen / HDMI CEC / Menu Reset and so on.


Press ENTER / [◀] / [▶] to enter.

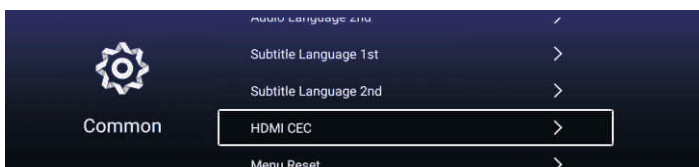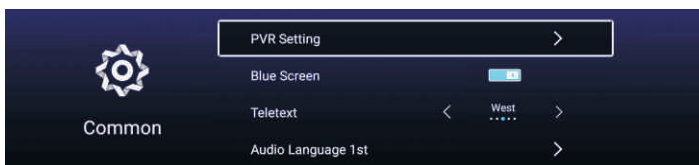

PVR Setting

Press [▼] / [▲] button to select PVR Setting.

 Press [◀] / [▶] to select Disk/Record List.

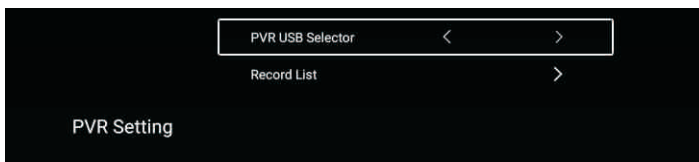

Blue Screen

Press [▼] / [▲] button to select Blue Screen.

Press [◀] / [▶] to select ON/OFF.

HDMI CEC

Press [▼] / [▲] button to select HDMI CEC.

Press [◀] / [▶] to select ON/OFF.

Menu Reset

Press [▼] / [▲] button to select Menu Reset.

Press [◀] / [▶] to select Cancel/ok to reset the previous setting.

OPERATION OF FUNCTION MENU

 
Media

Press HOME button to enter Home Page, and press ▼ / ▲ button to select File Explorer.



Video

Press ◀ / ▶ to select video.

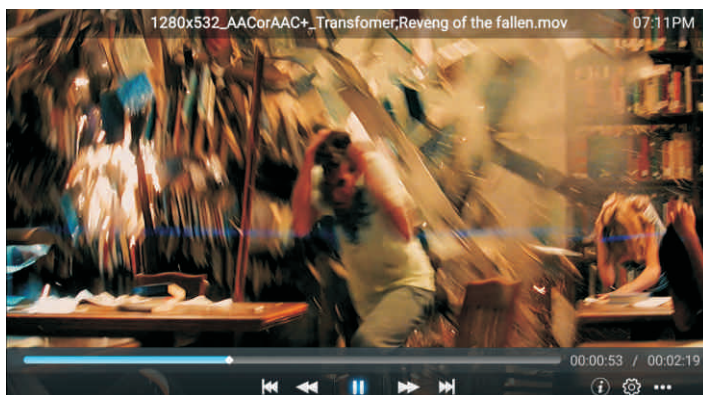

⏮ Press to play previous movie.

⏭ Press to play next movie.

⏪ Press to play fast backward.

ⓘ Press to view the information of the movie.
(Resolution/Size/Duration/Bitrate)

⏸ Press to stop/play the movie.

⚙ Press to set the Audio Track/Select Subtitle/
Region Language/Play Mode/Aspect Ratio.

 
⏩ Press to play fast forward.

⋮ Press to select the movie to play.

OPERATION OF FUNCTION MENU

Music

Press ◀ / ▶ to select music.

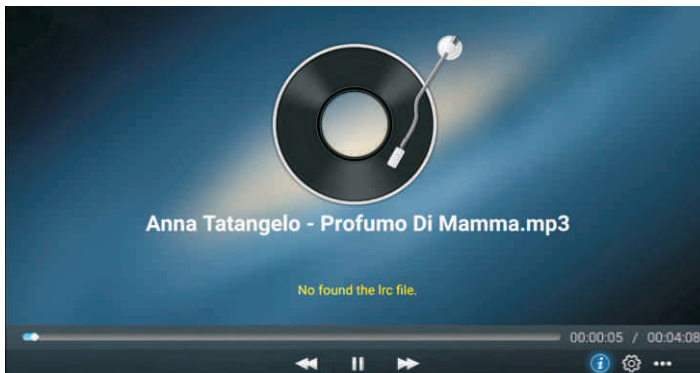

Press to play fast backward.



Press to view the information of themusic.
(Mine Type / Size / Bittrate)



Press to stop/play the music.



Press to set the Play Mode(Repeat All /
Repeat One / Random / None).



 
Press to play fast forward.



Press to select the music to play.

Photo

Press ◀ / ▶ to select photo.

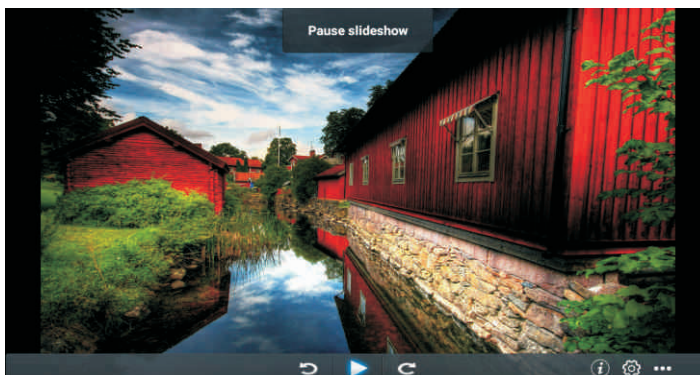

Press to rotate anticlockwise
the picture.



Press to view the information of the picture.
(Size/Resolution)



Press to stop/play the picture.



Press to set the Play Mode(Aspect Ratio/
Playback duration/Play Mode).



Press to rotate clockwise the
picture.



Press to select the photo to play.

TROUBLE SHOOTING GUIDE

Many apparent malfunctions are caused slight misadjustments of the regular controls of your unit or equally simple causes. If any difficulty arises through normal use of your unit, check the list of common problems in the list below. **If the problem persists, unplug your unit and contact your dealer.**

SYMPTOM	METHODS OF CHECKING OR ADJUSTING
No picture or sound	Check the AC plug is in the socket. Check house circuit breaker is in the ON position.
Picture normal but no sound	Check that the volume is not at its minimum setting or on MUTE.
Remote control not working	<ul style="list-style-type: none"> • Check that TV set power is ON. • Check batteries are operational and inserted correctly. • Make sure infrared receiving window on TV is not exposed to strong lighting or blocked in any way.
Cannot receive any TV signal	<ul style="list-style-type: none"> • Ensure SOURCE switch is set to TV. • Check aerial location and connection. • Re-check your tuning method.
No program signals output from external source	Check SOURCE button to make sure it is in the correct position for reception.
Contrast and brightness problems	Make necessary adjustments to relevant settings.
Intermittent poor contrast and colour fading on all channels	Check aerial positioning
Dotted lines or stripes appear on screen	There may be Interference from another electrical product. Move appliance if it persists.
Snow on screen	Check aerial for broken circuit, loose connection or any visible damage.
Double images or 'ghosting'	Check aerial location and direction - strong winds may cause it to move. Also check whether mountains or tall buildings may be the problem. Minor adjustment of the direction of your antenna should keep the ghosting to a minimum.

Note: External rooftop/antenna adjustment should be left to a suitably qualified person.

SPECIFICATIONS

Aspect Ratio	16:9
System	PAL/SECAM BG / DK / I, DVB-T/T2
Base impedance	75Ω (Unbalance)
Receiving TV Band	All Channels Receiveable
AC Supply Voltage	100-240V~ 50/60Hz

Note: Part of the design and the specification may be changed without prior notice.

INFRA-RED REMOTE CONTROL

Features: Full function remote control

Effective Distance Power: 8 metres

Power Supply: DC 3V (Two batteries, size AAA, recommend use alkaline type batteries)

 **DOLBY AUDIO™**

Manufactured under license from Dolby laboratories.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby laboratories.

Note:

DO NOT SUPPORT ALL MOBILE DEVICES THE TV FUNCTION WIRELESS DISPLAY.
PLEASE KEEP YOUR OWN MOBILE DEVICE SUPPORT TO THIS FUNCTION.



FOX[®]

be smart

HDMI[®]
HIGH DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model:32DLE308



Android[™]OS

EN

SR

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

BEZBEDNOSNE INFORMACIJE

VAŽNA BEZBEDONOSNA UPUTSTVA

UPOZORENJE

KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽNI KABL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIČNICI OSIM ONIH KOJI BI MOGLI DA SPREČE IZAZIVANJE STRUJNOG UDARA. KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREĐAJ VLAZI ILI KIŠI.



Ovaj simbol munje u jednakostraničnom trouglu upozorava korisnike na prisustvo opasnog i ne izolovanog napona unutar kućišta proizvoda koji može biti dovoljan da stvori rizik STRUJNOG UDARA

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

Upozorenje: Da biste smanjili rizik od strujnog udara nemojte skidati poklopac (ili zadnju stranu). Unutra nema delova koje korisnik može sam da zameni. Za obavljanje servisa zatražite pomoć kvalifikovanog osoblja



Znak uzvika unutar jedna-kostraničnog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instrukcija za rad i održavanje (servisiranje) uređaja.

Ovaj aparat ne treba izlagati vodi, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

OPREZ

- Postoji opasnost od eksplozije ako se baterija nepropisno zameni.
- Zamenite postojeću sa samo odgovarajućom vrstom baterije.
- Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote.
- Obezbedite pravilno odlaganje istrošenih baterija.
- Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja.
- Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koje se pominju u ovom uputstvu.

VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada.

Mnoge povrede, posebno dečije, mogu se izbeći primenom jednostavnih mera opreza kao što su:

- Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.
- Korišćenje samo onog nameštaja koji može sigurno izdržati uređaj.
- Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.
- Nemojte postavljati TV-a na visok nameštaj (na primer, ormare ili police) bez prethodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.
- Ne pokrivajte televizora krpom i ne stavljajte drugi materijal između televizora i nameštaja na kom stoji.



Sigurna Instalacija

Koristite pojas za fiksiranje televizora kako bi sprečili uređaj od pada unapred.



BEZBEDNOSNE INFORMACIJE

- 1. Pročitajte uputstva** – Sve napomene o sigurnosti i načinu rada treba pročitati pre uključivanja aparata.
- 2. Sačuvajte uputstva** – Uputstva za sigurnost i uputstvo za upotrebu treba da se sačuvaju za buduće potrebe.
- 3. Imajte u vidu Upozorenja** – Treba se pridržavati svih upozorenja na aparatu i svih uputstava za upotrebu.
- 4. Pratite uputstva** – Treba pratiti sva uputstva.



 
- 5. Voda i vlažnost** – Aparat ne treba koristiti u blizini vode.
- 6. Nosač i postolje** – Aparat treba koristiti samo sa nosačem ili postoljem koje preporučuje proizvođač.
- 7. Montaža na zid ili plafon** – Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača.
- 8. Ventilacija** – Aparat treba da bude dobro postavljen, tako da lokacija ili pozicija aparata ne ometaju njegovo provetravanje.
- 9. Toplota** – Ovaj aparat treba postaviti dalje od izvora toplote kao što su radijatori i peći.
- 10. Napajanje** – Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
- 11. Uzemljenje ili polarizacija** – Treba preduzeti mere predostrožnosti.
- 12. Zaštita kablja za napajanje** – Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, priklještitu stvarima na njemu i njegovom kraju.
- 13. Čišćenje** – Aparat bi trebalo čistiti samo po preporuci proizvođača.
- 14. Napajanje** – spoljne antene treba da se nalazi daleko od dalekovoda.
- 15. Uzemljenje** – spoljne antene – Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
- 16. Kada ga dugo ne koristite** – napajanje uređaja trebalo bi da bude isključeno iz utičnice kada se ne koristi duži vremenski period.
- 17. Upad predmeta i tečnosti** – Treba paziti da predmeti ne upadnu, a tečnost ne prospe u kućište kroz otvore.
- 18. Kada je potreban servis** – Aparat treba da servisira kvalifikovano servisno osoblje kada su:
 - Kabal za struju ili utikač oštećeni.
 - Kada predmeti upadnu ili kada se tečnost prolje po uređaju
 - Kada je aparat izložen kiši
 - Kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
- 19.** Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao što su novine, tkanine, zavese itd.
- 20.** Izvore otvorenog plamena, kao što su upaljene sveće, ne bi trebalo da stoje na aparatu
- 21.** Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.

BEZBEDNOSNE INFORMACIJE




Upozorenje

Visok napon se koristi u napajanju ovog proizvoda. Ne uklanjajte zadnjipoklopac. Obratite se kvalifikovanoj osobi za obavljanje servisa.




Upozorenje

 Da biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlazi.



Upozorenje

 Nemojte ispuštati i gurati predmete u kućište TV-a ili u otvore. Nikadanemojte prospati tečnost na TV prijemnik.

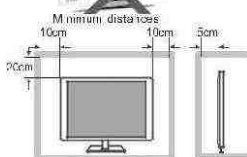


Oprez

Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati dela uputstva o minimalnim udaljenostima. Toplota može smanjiti životni vek televizora, a takođe može biti povećan rizik od požara.



Oprez

 Nikada nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak na kom se uređaj nalazi. Treba obratiti posebnu pažnju na decu.

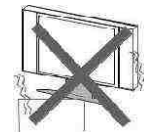


Oprez

Ne stavljajte glavnu jedinicu na nestabilno postolje, policu ili sto. Usledpada može doći do ozbiljne povrede lica ili štete na televizoru.



Oprez

 Kada se proizvod ne koristi duži vremenski period, preporučljivo je dasključite mrežni kabl iz utičnice.

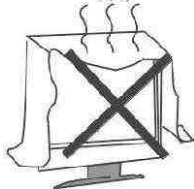

Oprez

Izbegavajte izlaganje glavne jedinice direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaj, audio pojačala. Ne blokiraj otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova. Ne stavljajte kabl za napajanje ispod glavne jedinice.



Oprez

Panel (ekran) koji se koristi u ovom proizvodu napravljen je od stakla. Može se slomiti padom uređaja ili nasilnim udarcem. Pojedinci trebaoprezno da rade sa razbijenim staklom ekrana.













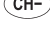





SADRŽAJ

BEZBEDNOSNE INFORMACIJE.....	1 - 3
OPIS KONTROLNIH TASTERA I KONEKTORA.....	5 - 6
DALJINSKI UPRAVLJAČ.....	7 - 8
KONEKCIJE.....	9
RAD MENIJA FUNKCIJA I GLAVNOG MENIJA.....	10 - 26
VODIČ ZA REŠAVANJE PROBLEMA.....	27
SPECIFIKACIJA.....	27

OPIS KONTROLNIH TASTERA I KONEKTORA

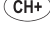NAZIV TASTERA

NAZIV TASTERA	VRSTA TASTERA				INSTRUKCIJE ZA UPOTREBU
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	PRIKAZIVANJE GLAVNOG MENIJA ZA IZBOR FUNKCIJA TV UREĐAJA (DIGITALNI, ANTENSKI, SMART, OPCIJA, MEDIA - USB, HDMI)
MENU BUTTON	MENU			MENU	PRIKAZIVANJE MENIJA TV UREĐAJA
VOLUME UP BUTTON	VOL+				POJAČAVANJE ZVUKA
VOLUME DOWN BUTTON	VOL-				UTIŠAVANJE ZVUKA
PROGRAM UP BUTTON	CH+		C/P ▲		PREBACIVANJE NA VIŠI KANAL
PROGRAM DOWN BUTTON	CH-		C/P ▼		PREBACIVANJE NA NIŽI KANAL
STANDBY BUTTON	POWER			STANDBY	UKLJUČIVANJE/ISKLJUČIVANJE TV UREĐAJA DOK JE U REŽIMU MIROVANJA

NAPOMENA

1. Kontrolni tasteri su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
2. Broj i raspored kontrolnih tastera može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom.

OPIS KONTROLNIH TASTERA I KONEKTORA

NAZIV ULAZA/IZLAZA	VRSTA IKONICE ZA ULAZ/IZLAZ			INSTRUKCIJE ZA UPOTREBU
	1	2	3	
AV IN				AUDIO/VIDEO ULAZ
COMPONENTIN			/	YPBPR ULAZ, ZA POVEZIVANJE EKSTERNIH UREĐAJA (DVD, PLAYER, KUĆNI BIOSKOP...)
AV OUT			/	AUDIO/VIDEO IZLAZ
AUDIO OUT			/	AUDIO IZLAZ ZA POVEZIVANJE EKSTERNIH ZVUČNIKA
TERMINAL ANTENNA (75OHM), TV SIGNAL INPUT PORT			/	POVEZIVANJE ANTENE ZA ZEMALJSKE KANALE (KROVNA/SOBNJA ANTENA)
TERMINAL ANTENNA (75OHM), SATELIT SIGNAL INPUT PORT				POVEZIVANJE SATELITSKE ANTENE
AUDIO IN				AUDIO ULAZ
VIDEO OUT				VIDEO IZLAZ
COAXIAL OUT				DIGITALNI IZLAZ ZA EKSTERNE ZVUČNIKE
VGA				VGA ULAZ ZA POVEZIVANJE RAČUNARA I TV UREĐAJA
VGA AUDIO IN				VGA ULAZ ZA AUDIO POVEZIVANJE
HDMI				HDMI ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
USB IN				USB ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA I MEMORIJA
EARPHONE OUT				IZLAZ ZA POVEZIVANJE SLUŠALICA
SCART				SCART ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
OPTICAL				OPTIČKI IZLAZ ZA POVEZIVANJE UREĐAJA KOJI KORISTE OPTIČKI KABL
RJ45 IN				ZA POVEZIVANJE TV UREĐAJA NA INTERNET (LAN MREŽA)
DC IN, OPTIONAL				OPCIONO – ULAZ ZA POVEZIVANJE NA ADAPTER OD 12V
TF IN				ULAZ ZA OČITAVANJE MEMORIJSKE KARTICE
PCMCIA				ULAZ ZA CI (CI+)

1.Svi ulazi / izlazi su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.

 
2.Broj ulaza/izlaza može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem I njihovom namenom

NAPOMENA





UKOLIKO PROGRAM PRATITE PUTEM KABLOVKE TELEVIZIJE PROVERITE DA LI JE PROPISNO IZVEDENO UZEMLJENJE I IZJEDNACAVANJE POTENCIJALA NA KABLU VAŠEG KABLOVSKOG OPERATERA. ZA OVE INFORMACIJE KONTAKTIRAJTE VAŠEG KABLOVSKOG OPERATERA.

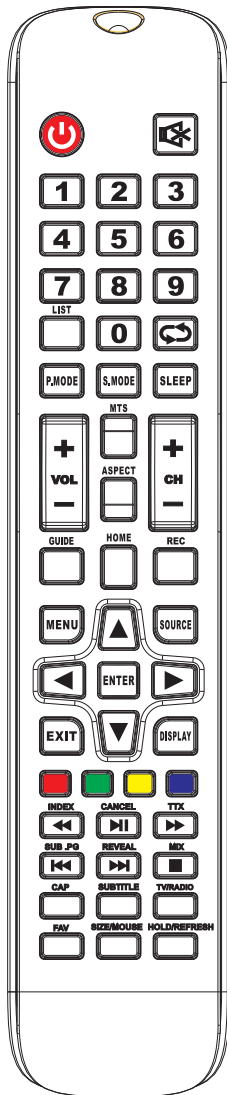DALJINSKI UPRAVLJAČ

Tasteri daljinskog upravljača



Opis daljinskog upravljača koji ide uz TV

- 1. POWER:**Uključite TV ili pristupite standbymodu.
- 2. MUTE:**Isključite/Uključite zvuk.
- 3. 0-9:Cifre "0-9"** se koriste za direktno pristupanje kanalima.
- 4. LIST:** Pristup listi kanala.
- 5.**  Pritisnite za menjanje između trenutnog I kanala koji ste prethodno gledali.
- 6. S.MODE:** Direktno odaberite mod zvuka.
- 7. SLEEP:** Podesite vreme isključenja.
- 8. MTS:** Pritisnite da odaberete MTS mod. (na primer, Nicam, BTSC MONO, STEREO, itd.)
- 9. P.MODE:** Direktno odaberite mod slike.
- 10. MENU:** Otvorite meni ili se vratite na glavni.
- 11. SOURCE:** Odaberite ulazni mod.
- 12.**  Pritisnite  za odabir stavke. Pritisnite dugme  da je podesite.
- 13. ENTER:** Potvrdite odabranu opciju.
- 14. EXIT:** Pritisnite da napustite OSD meni.
- 15. DISPLAY:** Pritisnite za prikaz izvora I informacija o kanalu.
- 16. VOL+:** Povećava jačinu zvuk.
- 17. REFRESH:** Osvežava stranu.
- 18. VOL-:** Smanjuje jačinu zvuka.
- 19. CAP:** Taster koji čuva trenutnu sliku na disku.
- 20. PLAY/PAUSE:** Pritisnite PLAY/PAUSE taster u USB modu, kada želite da pustite ili pauzirate sadržaj.
- 21. FREEZE:** Mirovanje slike (zamrznut kadar).
- 22. STOP:** Stopiranje sadržaja u USB modu.
- 23. ZELENI/ CRVENI/ ŽUTI/ PLAVI taster**
- 24. CH+:** Programi unapred.
- 25. HOME:** Taster za vraćanje na Android početnu stranicu.
- 26. CH-:** Programi unazad.
- 27. ASPECT:** Aspekt funkcija.
- 28. MOUSE:** Prelazak na funkciju miša.
- 29. SUBTITLE:** Prikazivanje titla u USB modu.
- 30. SET:** Otvaranje menija za podešavanje mreže.
- 31. BROWER:** Taster za brzo pristupanje Internet Pretraživaču.
- 32. FAV:** Pritisnite da dodate ili uklonite Vaš oniljeni kanal u okviru tv menija.
- 33. FF:** Pritisnite da premotate sadržaj unapred u USB modu.
- 34. PREV:** Pritisnite da se vratite unazad u USB modu.
- 35. FR:** Pritisnite da premotate sadržaj unazad u USB modu.
- 36. NEXT:** Pritisnite da idete unapred u USB modu.

DALJINSKI UPRAVLJAČ

TELETEXT FUNKCIJA (Opciono)

1) TEXT TASTER

pritisnite taster za prelazak sa TV slike na Teletext, ukoliko TV stanica podržava isti.

2) REVEAL TASTER Za

prikazivanje skrivenih karaktera.

3) MIX TASTER

Taster za prikazivanje Teletexta i TV slike zajedno ili samo Teletext slike. Ovaj taster omogućava korisniku da unese 4 digitalne podstrane za trenutnu stranu. Ukoliko sledeće digitalne strane nisu unešene za 5 sekundi, predhodni broj strane će biti ponovo pozvan i prikazan na ekranu.

4) RED/GREEN/YELLOW/BLUE TASTER

Ova 4 tastera u Teletext modu služe za brzo prebacivanje (zumiranje, prebacivanje na sledeću stranu...)

5) UP/DOWN TASTER

Pomeranje stranice gore/dole u teletext modu

6) 0,1,2...9 TASTER

Izbor određene stranice uz pomoć numerisanih tastera.

7) HOLD TASTER

Neke teletext informacije se nalaze na više stranica koje se automatski menjaju nakon određenog vremena. Pritisnite taster HOLD da zaustavite promenu strana. Za nastavak promene strane, pritisnite ponovo HOLD

INSTALACIJA BATERIJA U DALJINSKI UPRAVLJAČ

1. Otvorite poklopac odeljka za baterije
2. Stavite dve AAA baterije (uske) od 1.5V. Budite sigurni da se polaritet baterija (+ i -) podudara sa polaritetom unutar odeljka.

Napomena:

- Preporučujemo upotrebu alkalnih baterija
- Rok trajanja baterija može biti i duže od jedne godine, u zavisnosti od toga koliko često se daljinski upravljač koristi. Za najbolje performanse, baterij treba menjati bar jednom godišnje ili onda kada počnu da ometaju rad daljinskog upravljača.
- Budite sigurni da su baterije okrenute u dobrom pravcu, kao na slici.
- Nemojte mešati stare i nove baterije ili različite vrste baterija.
- Stare baterije mogu iscuriti i oštetiti daljinski upravljač. Uvek uklonite oslabljene baterije.
- Ne bacajte baterije u vatru, ne puniti i ne rasklapajte ih. Naročito nemojte puniti, sklupati i rasklapati, zagrevati ili sagorevati upotrebene baterije. poštujuće odgovarajuće propise o zaštiti okoline u vezi sa upotrebjenim baterijama.

8) SIZE TASTER

Taster za povećanje dimenzije karaktera i prikazivanje pola teletext strane. Svaki pritisak će prikazivati više i više do normalne strane

9) INDEX TASTER

Pritisnite ovaj taster kako biste videli index stranu u teletext modu. Prikaz teletext vremena.

USB FUNKCIJA (Opciono)

1) ◀/▶ TASTER

Premotajte scenu ili muziku

2) ◀◀/▶▶ TASTER

Vraćanje na predhodni ili prelazak na naredni fajl

3) ▶▶ TASTER

početak / pauza

 
4) ■ TASTER

Zaustavljanje. Pritisnite da potvrdite akciju (Na primer:kopiraj, nalepi itd.) Ponavljanje scene ili muzike u reprodukciji filmova na USB-u.

5) SUBTITLE TASTER


Otvara ili zatvara funkciju titla (titl mora biti preuzet sa interneta i mora biti identičan kao fajl, kao i kompatibilan sa fajlom koji podržava)

Napomena: USB uređaj već mora biti povezan.

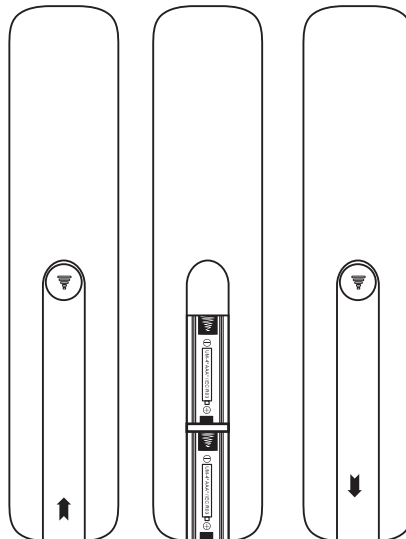

KONEKCIJE

 INSTALACIJA ANTENE

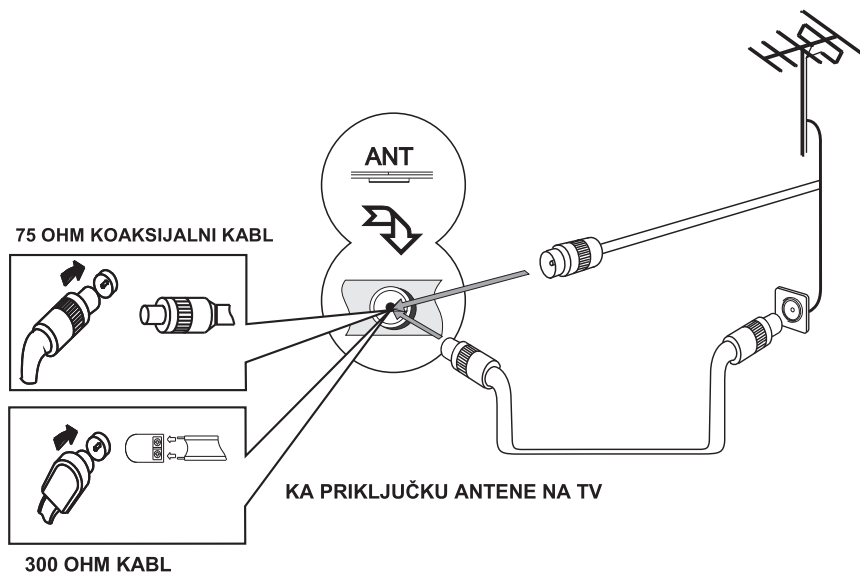

Povežite 75 OHM koaksijalni kabl od antene do antenskog priključka na zadnjem delu televizora kao što je prikazano na slici.

Obaveštenje:

- Za bolji prijem, gde ima puno smetnji, preporučljivo je korišćenje spoljne antene na krovu.
- Za UHF TV prijem, koristite posebnu UHF antenu. Konsultujte se sa lokalnim prodavcem.
- Pri korišćenju 300 OHM kabla, koristite 300 OHM - 75 OHM adapter za pravilnu konekciju sa antenskim priključkom televizora

PRIKLJUČAK ZA NAPAJANJE

- Priključite kabl za napajanje uređaja u odgovarajuću utičnicu.
- Pritisnite dugme POWER na daljinskom upravljaču da uključite/isključite TV.

Obaveštenje:

- Ovaj uređaj radi sa neizmjeničnim napajanjem od 100-240V~ 50/60Hz.
- Kada isključujete kabl za napajanje uradite to držeći utikač, a ne kabl.

UPOZORENJE:

 
Prilikom nestanka struje isključite uređaj iz napajanja. Kako bi uštedeli struju isključite TV iz napajanja ako ga ne koristite duži vremenski period.

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA


Napomena: Slike iznad su samo za referencu, u stvarnosti su moguće razlike.

FTI

Povezati RF kabl od TV ulaza po imenu "RF-In" do vaše TV Aerial utičnice Pritisnite OK taster kako biste izabrali Start za podešavanje.

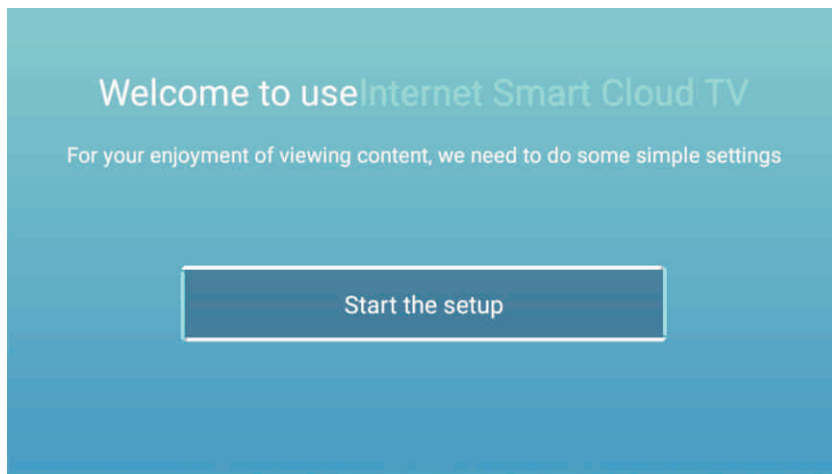

 
Pritisnite **▼** / **▲** taster kako biste izabrali jezik.
Pritisnite OK taster zatim pritisnite **▶** taster kako biste izabrali zemlju.

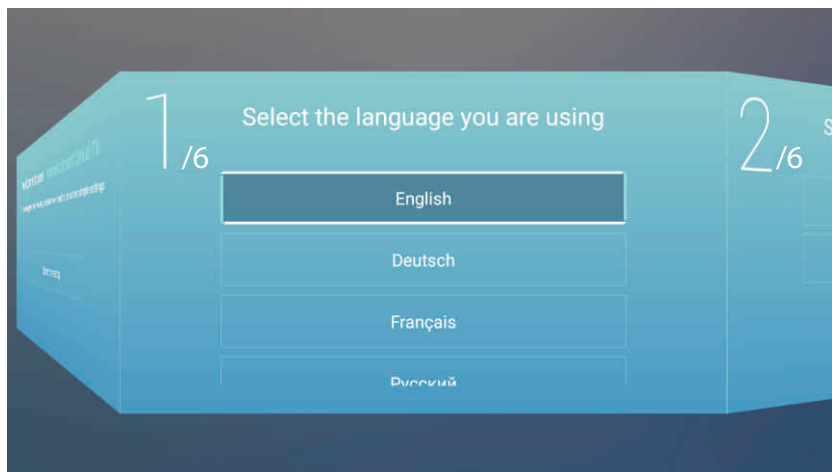

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA


Pritisnite **▼** / **▲** taster kako biste izabrali zemlju.

 Pritisnite OK taster i pritisnite **▶** taster kako biste izabrali vremensku zonu.

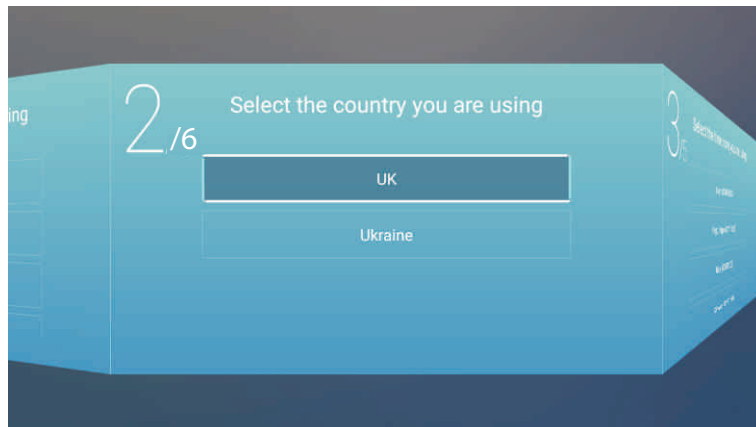

Pritisnite **▼** / **▲** taster kako biste izabrali vremensku zonu.

 Pritisnite **▶** taster kako biste se povezali na WIFI/network.

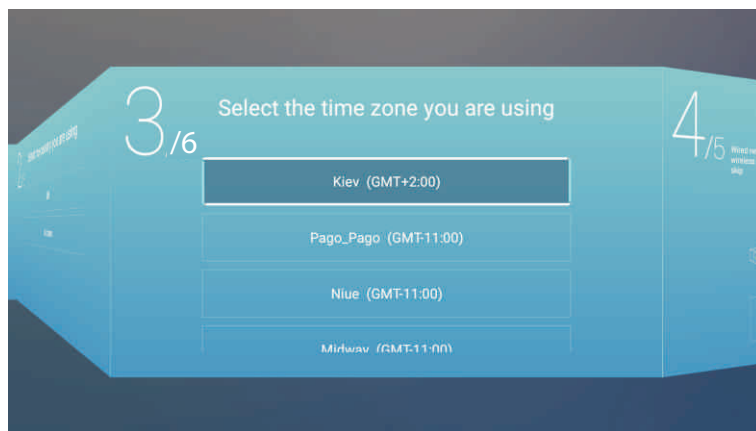

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

 
Pritisnite OK taster kako biste se povezali na WIFI/network.

Pritisnite **▶** taster da izaberete ulazni izvor.




Koristite svoj mobilni telefon da skenirate 2D kod kako biste se povezali na TV Assistant. (Pogledajte Eshare dokumenta za detalje)

Pritisnite **▶** taster za izbor signala.

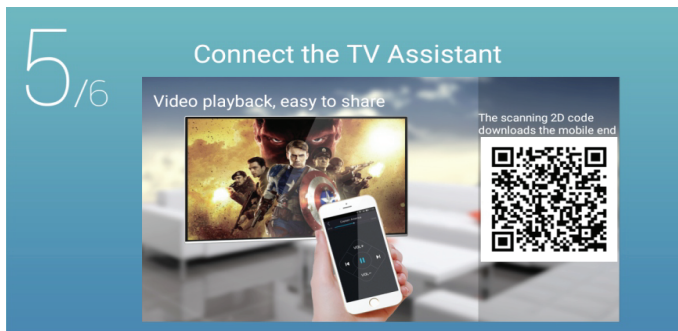

 Pritisnite **▼** / **▲** taster da izaberete ulazni izvor.

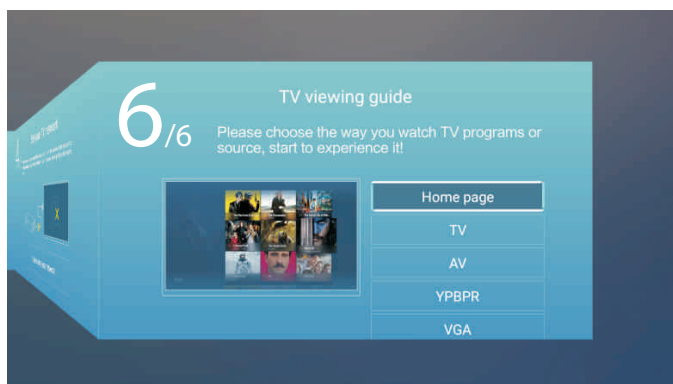

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

ULAZNI IZVOR

Pritisnite SOURCE taster kako biste izabrali Input Source meni.

Pritisnite **【▼】** / **【▲】** kako biste izabrali.

Pritisnite ENTER kako biste izabrali izvor.

GLAVNI MENI

HOME

Pritisnite **【◀】** / **【▶】** taster kako biste izabrali HOME meni.

 
Pritisnite **【▼】** / **【▲】** / **【◀】** / **【▶】** taster kako biste izvršili odabir.




RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

APPS/LIKE_APPS

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali APPS/LIKE_APPS da dodate aplikaciju.

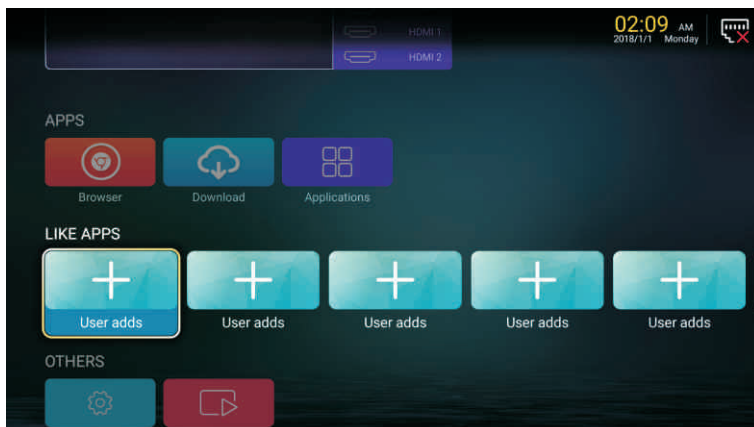

 
Pritisnite **【▼】 / 【▲】 / 【◀】 / 【▶】** kako biste izabrali App za instaliranje.

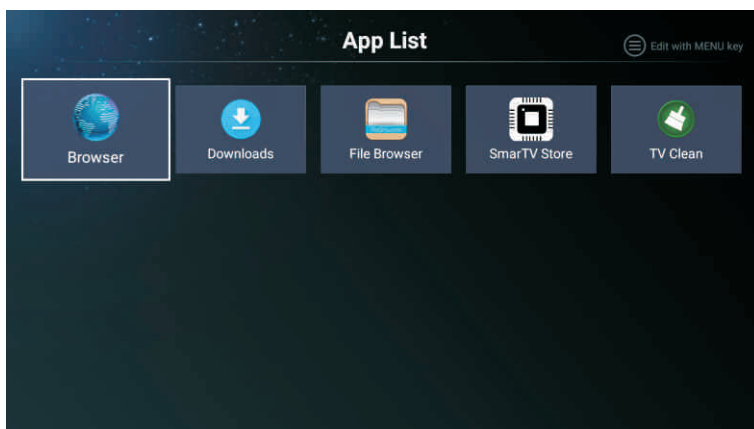

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

PODEŠAVANJA

 Pritisnite **【▼】 / 【▲】 / 【◀】 / 【▶】** taster kako biste ušli u Settings.

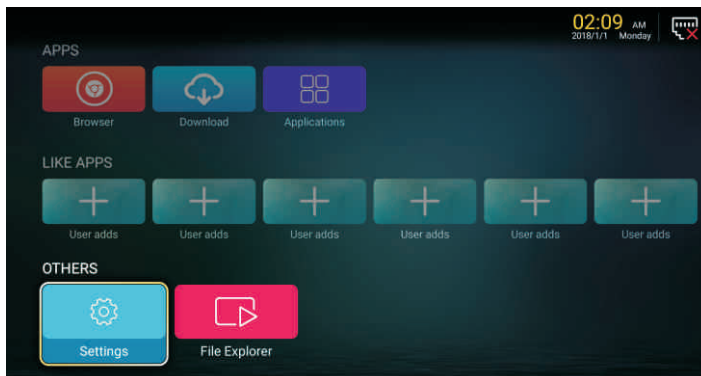


SLIKE

Pritisnite MENU taster kako biste izabrali glavni meni.

Pritisnite **【◀】 / 【▶】** taster kako biste izabrali Picture.

 Pritisnite ENTER kako biste ušli u podešavanja.



1. Pritisnite **【▼】 / 【▲】** kako biste izabrali: Picture Mode/Contrast/ Brightness Color/ Sharpness/Backlight/Noise Reduction/Color Temp/More Settings.

2. Pritisnite **【◀】 / 【▶】** da podesite ili izaberete.



RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Picture Mode

Pritisnite **【▼】** / **【▲】** taster kako biste izabrali Picture Mode, potom pritisnite **【◀】** / **【▶】** kako biste izabrali. (Opcionalno: Standard,Movie,Vivid,Soft,User).

Standard	Glavni mod, kako bi korisnici imali jako kvalitetnu sliku pod normalnim svetlom.
Movie	Ovaj mod je više pogodan za gledanje filmova.
Vivid	Slike boja su lepše, slike su živopisnije.
Soft	Stvara visoko kvalitetne slike u slabo osvetljenoj sobi.
User	Korisnik podešava sliku sam.

Kontrast/ Svetlost/Boja/Oštrina/Pozadinsko svetlo

Pritisnite **【▼】** / **【▲】** da izaberete, i pritisnite **【◀】** / **【▶】** da podesite.

Kontras	Podesite kontrast na slici.
Svetlost	Podesite oštrinu slike.
Boja	Podesite gustinu slike.
Oštrina	Podesite oštrinu slike.
Pozadinsko Svetlo	Podesite pozadinsko svetlo na ekranu.

Smanjenje Buke

Podešavanje opcije za eliminisanje intenziteta buke.

Pritisnite **【▼】** / **【▲】** kako biste izabrali Noise Reduction, i pritisnite **【◀】** / **【▶】** kako biste izabrali. (Opcije: Off,Low,Middle,High,Auto).

Color Temp


Podesite boju slike uopšteno.

Pritisnite **【▼】** / **【▲】** kako biste izabrali Colour Temperature.pritisnite **【◀】** / **【▶】** kako biste izabrali.(Opcije:Cool, Normal, Warm).

Cool	pravi slike nežno plave boje.
Normal	pravi živopisne slike.
Warm	pravi slike crvene boje.

Još podešavanja

 More settings Pritisnite **【▼】** / **【▲】** kako biste izabrali

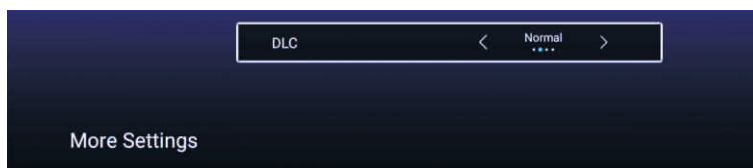

DLC

 
Pritisnite **【▼】** / **【▲】** kako biste DLC, Pritisnite **【◀】** / **【▶】** kako biste izabrali Dark/Normal/Bright/Off.

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Zvuk


Pritisnite MENU taster kako biste izabrali glavni meni.

Pritisnite [◀] / [▶] dugme kako biste izabrali Sound u glavnom meniju.



Pritisnite [▼] / [▲] kako biste izabrali: Sound Mode/Bass/Treble/Balance/AVC/More settings.

 Pritisnite ENTER / [◀] / [▶] da izaberete ili izmenite

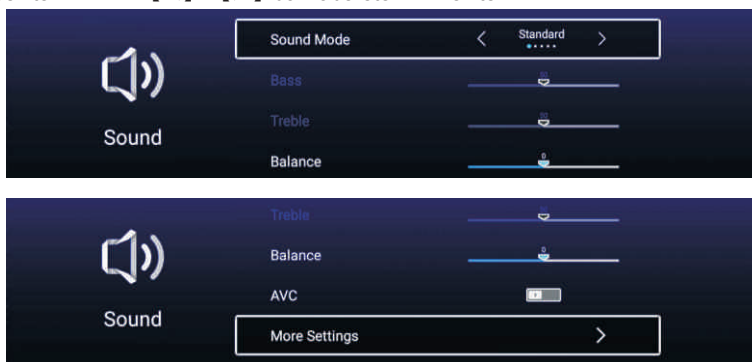

Mod Zvuka

Pritisnite [▼] / [▲] taster da izaberete Sound Mode, potom pritisnite [◀] / [▶] dugme da izaberete: (Opcije: Standard, Music, Theater, News, User).

Standard Reprodukuje balansiran zvuk u svim uslovima.

Music Zadržava originalni zvuk pogodan za muzičke programe.

Theater Pojačava trebl i bas za bogato zvučno iskustvo.

News Pojačan glas za slušanje vesti.

User Izabereti kako biste sami prilagodili zvuk.

Bass Podesite bas.

Treble Podesite treble.

Balance Prilagodite levi i desni balans.

Pritisnite [▼] / [▲] taster da izaberete Balance, potom pritisnite [◀] / [▶] taster radi podešavanja.

 
AVC

Pristisnite [▼] / [▲] taster kako biste izabrali AVC, potom pritisnite [◀] / [▶] taster kako biste izabrali ON/OFF.

Posle otvaranja AVC, Kada je jačina podešena, bez obzira na različite TV verzije štampane na svakom kanalu, može da održava jačinu zvučnika stabilnom.

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Još podešavanja

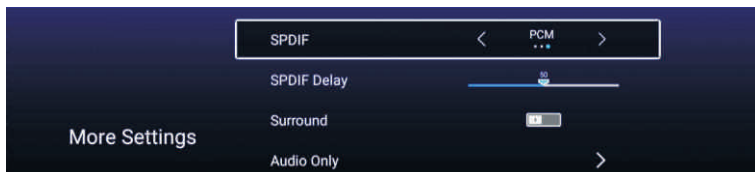

SPDIF

Pritisnite **▼** / **▲** taster da izaberete SPDIF, potom pritisnite **◀** / **▶** taster kako biste izabrali OFF/RAW/PCM

SPDIF Delay

Pritisnite **▼** / **▲** da izaberete SPDIF Delay, potom pritisnite **◀** / **▶** taster kako biste izvršili podešavanje.

Surround

 
Postiže bolji zvučni efekat u okruženju.

Pritisnite **▼** / **▲** taster kako biste izabrali Surround, potom pritisnite **◀** / **▶** taster kako biste izabrali ON/OFF.

Audio Only (Samo Zvuk)

Posle otvaranja ekran nije prikazan i samo pušta zvuk

Pritisnite **▼** / **▲** kako biste izabrali Audio Only, potom pritisnite **▶** taster kako bi izabrali ON/OFF.

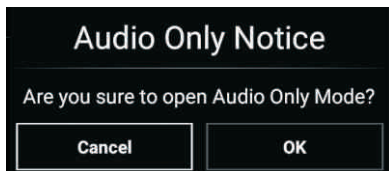


RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Channel


Pritisnite MENU dugme kako biste došli do glavnog menija. Pritisnite [◀] / [▶] taster kako biste izabrali Channel u glavnom meniju.

 Pritisnite [▼] / [▲] kako biste izabrali. Pritisnite ENTER/ [◀] / [▶] kako biste izvršili podešavanje.




Antenna Type-Air

 Izaberite Air/Cable kako biste izvršili podešavanje.

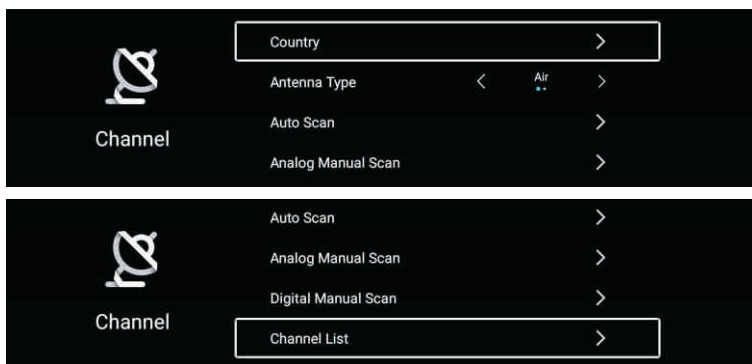


Auto Scan

 Pritisnite [▼] / [▲] kako biste izabrali Auto Scan, pritisnite ENTER kako biste izabrali Auto Scan.

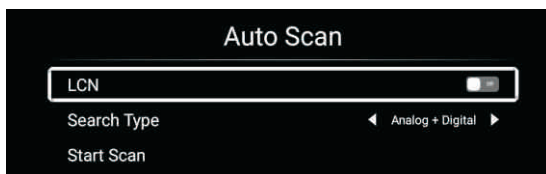

Analog Manual Scan

 
Pritisnite [▼] / [▲] taster kako biste izabrali Analog Manual Scan, pritisnite ENTER da biste započeli skeniranje.

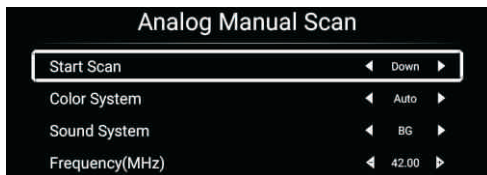

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA


Digital Manual Scan

 Pritisnite **▼** / **▲** taster kako biste izabrali Digital Manual Scan, pritisnite ENTER kako biste započeli skeniranje.

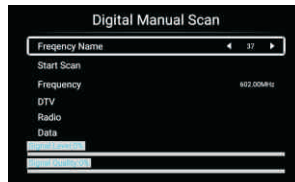


Channel List

 Pritisnite **▼** / **▲** taster kako biste započeli Channel List, kada izlista, pritisnite MENU taster i uredite kanal (Skip / Delete /Fav).

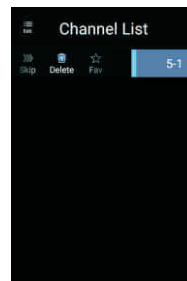



EPG

 Pritisnite **▼** / **▲** taster da izaberete EPG.

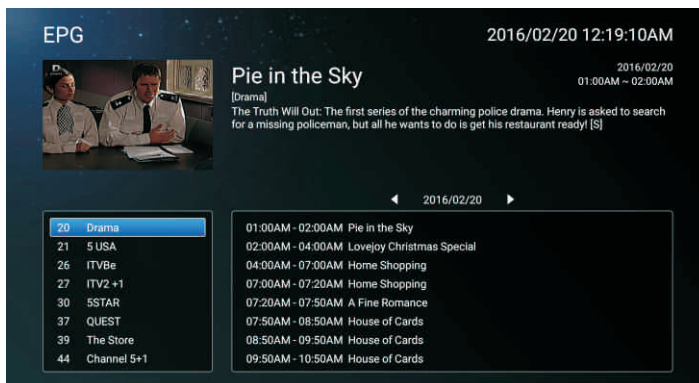

Antenna Type-Cable

  
Izaberite Air/Cable kako biste izvršili podešavanje.

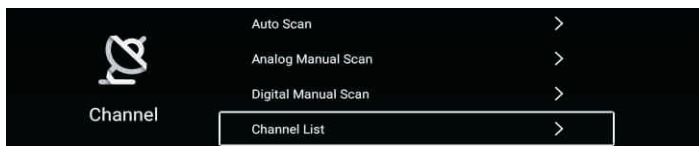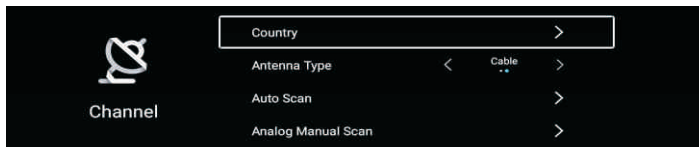

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA


Auto Scan

 Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Auto Scan, pritisnite ENTER kako biste započeli Auto Scan.

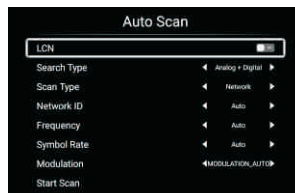


Analog Manual Scan

 Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Analog Manual Scan, pritisnite ENTER kako biste započeli skeniranje.

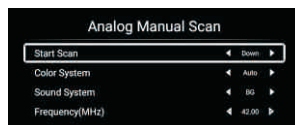

Digital Manual Scan

 Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Digital Manual Scan, pritisnite ENTER kako biste započeli skeniranje.

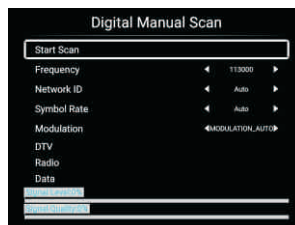


Channel List

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Channel List da izlistate, pritisnite MENU taster kako biste uredili kanal. (Skip /Delete /Fav).

EPG

 
Pritisnite **【▼】 / 【▲】** taster kako biste izabrali EPG.

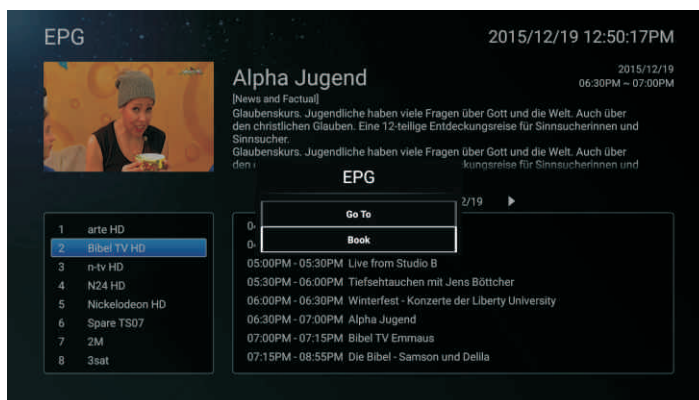


RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

System Lock

 Pritisnite MENU taster da biste izlistali glavni meni. Pritisnite **【◀】** / **【▶】** taster kako biste izabrali System Lock.



 Pritisnite **【▼】** / **【▲】** taster kako biste izabrali Change Password/System Lock. Pritisnite ENTER / **【◀】** / **【▶】** k ako biste ušli.

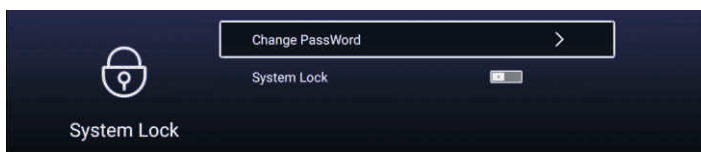


Promena Lozinke

Pritisnite **【▼】** / **【▲】** taster kako biste izabrali Change Password.

Zaključavanje Sistema

Pritisnite **【▼】** / **【▲】** taster kako biste izabrali System Lock.

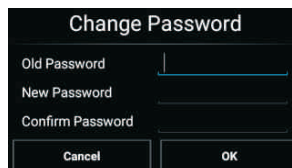
A dialog box titled 'Change Password' with three input fields: 'Old Password', 'New Password', and 'Confirm Password'. At the bottom, there are two buttons: 'Cancel' and 'OK'.

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Zaključavanje Tastature

Pritisnite **【▼】 / 【▲】** taster kako biste zaključali tastaturu.

 
(Napomena: Ova funkcija je moguća kada je uključena System Lock .)

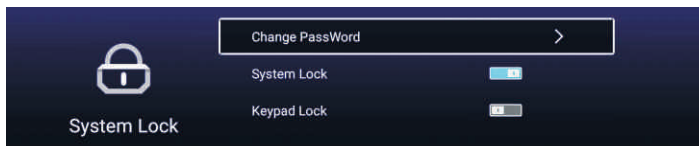

Podešavanje Vremena


Pritisnite MENU taster kako biste izabrali glavni meni.

 Pritisnite **【◀】 / 【▶】** taster kako biste izabrali Time Setting u glavnom meniju.



Pritisnite **【▼】 / 【▲】** taster kako biste izabrali: OSD Timer/Sleep, Timer/Autostandby Timer .

 Pritisnite **【◀】 / 【▶】** kako biste ušli.

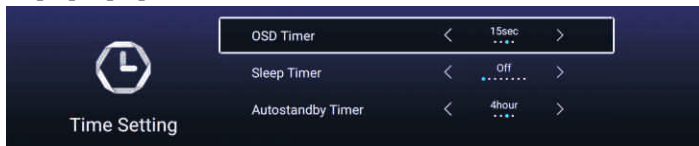

OSD Tajmer

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali OSD Timer, Pritisnite **【◀】 / 【▶】** kako biste izabrali. (Opcionalno: off,5sec,15sec,30sec).

Tajmer za spavanje

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Sleep Timer, pritisnite **【◀】 / 【▶】** kako biste izabrali. (Opcionalno: off,15min,30min,45min,60min,90min,120min,240min).

Autostandby Tajmer

Pritisnite **【▼】 / 【▲】** taster kako biste izabrali Autostandby Timer, (Opcionalno: off, 3hour, 4hour, 5hour)

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Common

 
 
Pritisnite MENU taster kako biste izabrali glavni meni.

Pritisnite [◀] / [▶] taster kako biste izabrali Common u glavnom meniju.



Pritisnite [▼] / [▲] kako biste izabrali: Blue Screen/HDMI CEC/Menu Reset itd.


Pritisnite ENTER / [◀] / [▶] kako biste ušli.

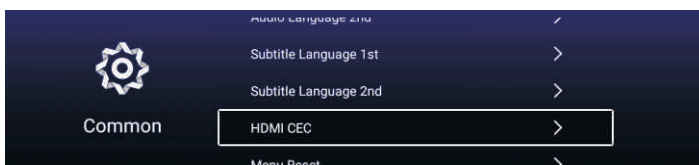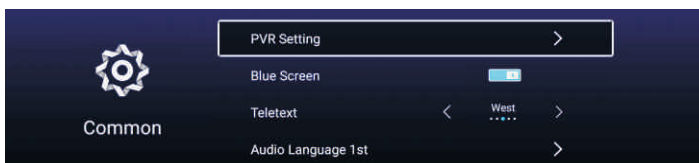

PVR Setting

Pritisnite [▼] / [▲] taster kako biste izabrali PVR Setting.

 Pritisnite [◀] / [▶] kako biste izabrali Disk/Record List.

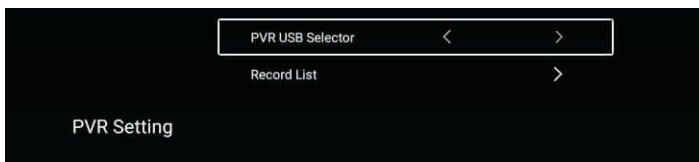

Blue Screen

Pritisnite [▼] / [▲] taster kako biste izabrali Blue Screen.

Pritisnite [◀] / [▶] kako biste izabrali ON/OFF.

HDMI CEC

Pritisnite [▼] / [▲] taster kako biste izabrali HDMI CEC.

Pritisnite [◀] / [▶] kako biste izabrali ON/OFF.

Menu Reset

Pritisnite [▼] / [▲] taster kako biste izabrali Menu Reset.

Pritisnite [◀] / [▶] kako biste izabrali Cancel/da resetujete pređašnje podešavanje.

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

 
Media

Pritisnite HOME taster kako biste ušli u Home Page, pritisnite ▼ / ▲ taster kako biste izabrali File Explorer.



Video

Pritisnite ◀ / ▶ kako biste izabrali video.

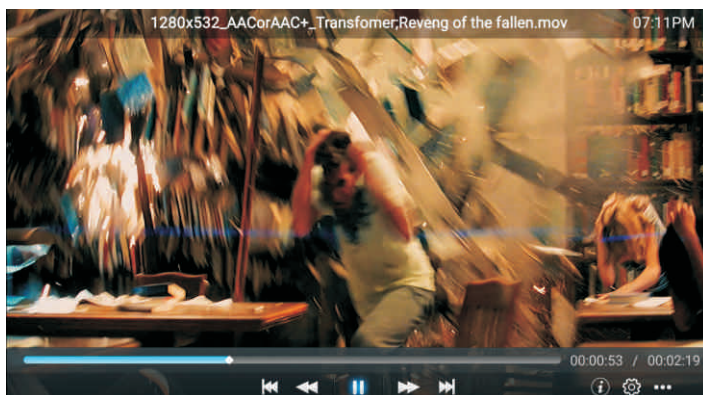


- | | |
|---|--|
|  Pritisnite taster kako biste pustili prethodni film. |  Pritisnite kako biste pustili sledeći film. |
|  Pritisnite kako biste pustili brzo premotavanje unazad. |  Pritisnite kako biste videli informacije o filmu.(Resolution/Size/Duration/Bitrate) |
|  Pritisnite kako biste stopirali/pokrenuli film. |  Pritisnite kako biste podesili Audio Track/ Select Subtitle/Region Language/Play Mode /Aspect Ratio. |
|  Pritisnite kako biste pustili sledeći film. |  Pritisnite kako biste izabrali film koji želite da pustite. |

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Muzika

 Pritisnite ◀ / ▶ kako biste izabrali muziku.

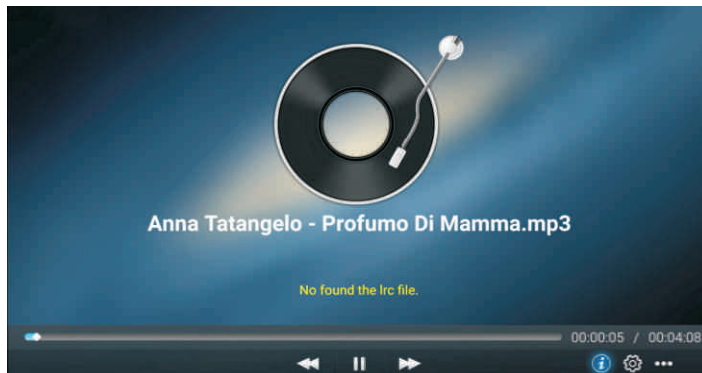

Pritisnite kako biste brzo premotali unazad.



Pritisnite kako biste videli informacije u muzici.(Mine Type/Size/Bitrate)



Pritisnite kako biste stopirali/pustili muziku.



Pritisnite kako biste podesili Play Mode (Repeat All/Repeat One/Random/None).



 
Pritisnite kako biste brzo premotali unapred.



Pritisnite kako biste izabrali muziku.

Slika

Pritisnite ◀ / ▶ kako biste izabrali sliku.

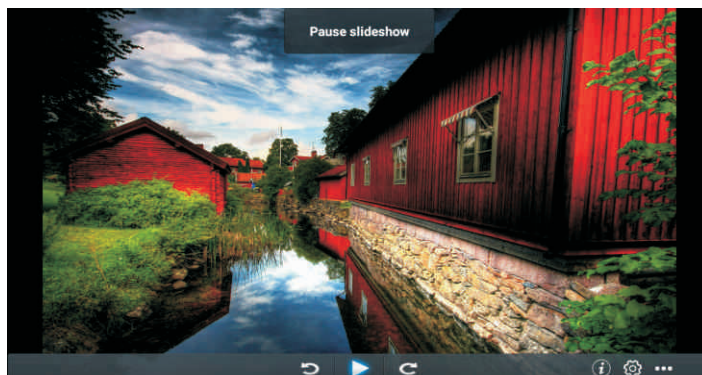

Pritisnite kako biste rotirali sliku u pravcu suprotnom od kazaljke na satu.



Pritisnite kako biste videli informacije vezane za sliku.(Size/Resolution)



Pritisnite kako biste stopirali/pokrenuli sliku.



Pritisnite kako biste podesili Play Mode (Aspect Ratio/Playback duration/Play Mode).



Pritisnite kako biste rotirali sliku u pravcu kazaljke na satu.



Pritisnite kako biste izabrali sliku koju ste planirali da pustite.

VODIČ ZA REŠAVANJE PROBLEMA

Mnogi kvarovi su prouzrokovani neodgovarajućim i nepravilnim podešavanjem i uglavnom su jednostavni za otkloniti. Ukoliko imate poteškoća sa rukovanjem, prvo pogledajte sledeću listu uobičajnih grešaka i njihovih rešenja.

SIMPTOMI	METODA PROVERAVANJA I PODEŠAVANJA
Nema slike ili zvuka	Proverite da li je naponski kabl ispravno priključen u utičnicu.
Slika je normalna ali bez zvuka	Proverite da nije slučajno zvuk podešen na nečujno (MUTE). Ukoliko jeste pojačajte zvuk.
Daljinski upravljačne radi.	Proverite da li je TV uključen. Proverite da li su baterije ispravno postavljene. Uverite se da infracrveni odašiljač na daljinskom ili TV-u nije izložen velikoj svetlosti ili da nije blokiran na bilo koji način.
Ne primete nikakav TV signal	Proverite da li je SOURCE prekidač postavljen na TV-u. Proverite i podešavanje za lokaciju i povezanost. Pokušajte da ponovo pretražite kanale i proverite metod pretrage.
Bez signala programa sa spoljašnjeg izvora	Proverite da li je taster SOURCE podešen na ispravnu poziciju za prijem signala.
Problem sa kontrastom i osvetljenjem	Napravite potrebne i željene izmene.
Slab kontrast i blede boje na svim kanalima	Proverite podešavanje za lokaciju prijema signala.
Linije ili tačke po celom ekranu	Drugi električni uređaji mogu da izazovu smetnje. Sklonite ih od televizora.
Sneg na ekranu	Proverite lokacijska podešavanja, kratak spoj, prekinuta konekcija ili bilo koja vidljiva oštećenja.
Dupla slika ili zamagljenost	Proverite podešavanja za lokaciju i uopšte položaj antene ili uređaja. Jak vetar može da izazove takve probleme. visoke zgrade ili planine takođe. Malo podešavanje antene može u mnogo čemu da popravi sliku.

NAPOMENA:

Spoljna ili krovna antena treba da bude postavljena od strane ovlašćenog osoblja.

SPECIFICATIONS

Proporcija ekrana	16:9
Sistem	PAL/SECAM BG / DK / I, DVB-T/T2, NTSC Playback
Impedansa k oaksijalnog kabla	75 Ω
Prijem TV kanala	Ceo opseg kanala
Napajanje, voltaža	100-240V~ 50/60Hz

Napomena: Delovi i specifikacije mogu da budu promenjene bez predhodne najave.

Daljinski upravljač:

Karakteristike: Daljinski upravljač sa svim funkcijama ima radijus rada 8 metara

Napajanje: DC 3V (dve baterije, veličine AAA, preporuka da koristite alkalne)



Napomena:

NE PODRŽAVAJU SVI MOBILNI UREĐAJI FUNKCIJU DELJENJA PRIKAZA NA EKRAN TV-a.

MOLIMO VAS DA PROVERITE DA LI VAŠ MOBILNI UREĐAJ PODRŽAVA OVU FUNKCIJU.



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs