



HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model:50DLE882

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR

CONTENTS

| | |
|--|----|
| Safety Information | 2 |
| Safety Warning | 2 |
| Important Safety Instructions | 3 |
| TV Buttons and Terminal Interface | 4 |
| External Device Connection Diagram | 4 |
| Install and Connect TV | 5 |
| TV Stand Installation Instructions | 5 |
| Basic Operations | 6 |
| Main Menu Operation | 6 |
| Remote controller | 10 |
| Help | 11 |
| Specifications | 12 |

Safety Information



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



Caution: To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the TV.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE WITH THE FCC RULES COULD AVOID THE USERS AUTHORITY TO OPERATE THIS EQUIPMENT.

Safety Warning

Before operating the unit, please read through this manual.

PLACEMENT

- Do not place the unit on an unstable cart, stand, tripod, bracket, table, or shelf.
- Do not expose the unit to direct sunlight and other sources of heat.
- Do not handle liquids near or on the unit.
- Never spill liquid of any kind into the unit
- Do not put the unit near appliances that create magnetic fields.
- Do not put heavy objects on top of the unit.

TEMPERATURE

- Do not place the unit near or over a radiator or a heater register.
- If your unit is suddenly moved from a cold to a warm place, unplug the power cord for at least two hours so that moisture that may have formed inside the unit can dry completely.

HUMIDITY

- Do not expose machine in rain, damp or place near water.
- Ensure the indoor drying, cool.

VENTILATION

- Keep the ventilation openings clear.

WARNING(Only applicable to models over 7kg)

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
 - Only using furniture that can safely support the television set.
 - Ensuring the television set is not overhanging the edge of the supporting furniture.
 - Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
 - Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
 - Educating children about the dangers of climbing on furniture to reach the television set or its controls.
- If your existing television set is being retained and relocated, the same considerations as above should be applied.


Important Safety Precautions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety, If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.

Caution:

- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The socket-out shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21)  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 22) The USB terminal should be loaded with 0.5 A under normal operation.


These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.

- 23) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24) This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth
- 25) The maximum using environment temperature is 45 degrees.
The Maximum using altitude is 2000 meters

TV Buttons And Terminal Interface








TV Buttons


Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.

| | |
|---|--|
|  | Turn ON/OFF Power. |
| SOURCE | External Signal Input Selection. |
| MENU | Display Main MENU And Confirm MENU Item Selection. |
| CH+/- | Selecting Channel. |
| VOL+/- | Adjusting Volume. |

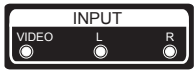External device connection diagram


Terminal Interface
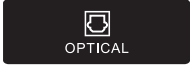
| | | | |
|---|--|--|--|
|  | AV input External AV Signal Input And Relevant Right/Left Sound Channel |  | EARPHONE output When earphones are plugged in, speakers are disabled |
|  | CI SLOT The card reader input CI (common interface) this requires CAM (conditional access module) used for pay TV. |  | USB input Connect a USB device here to play its media files or to record programs via the PVR function. |
|  | ANT 75 Connect the antennal/cadle tv input (75/VHF/UHF) |  | OPTICAL output Connect the SPDIF receiver. |
|  | HDMI input Digital signal input from HDMI video connector. | | |

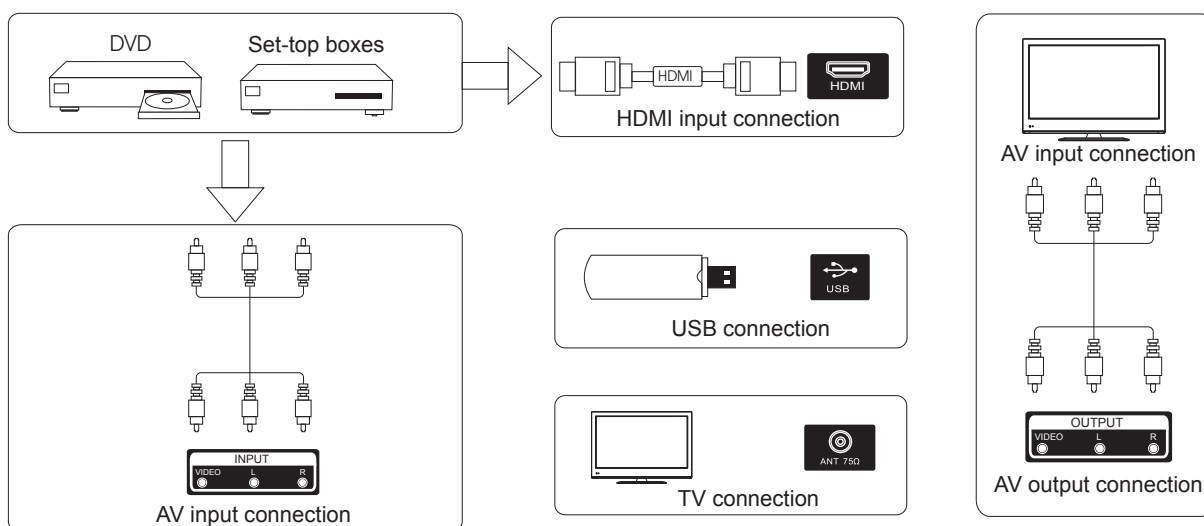 

Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

 
Install And Connect TV

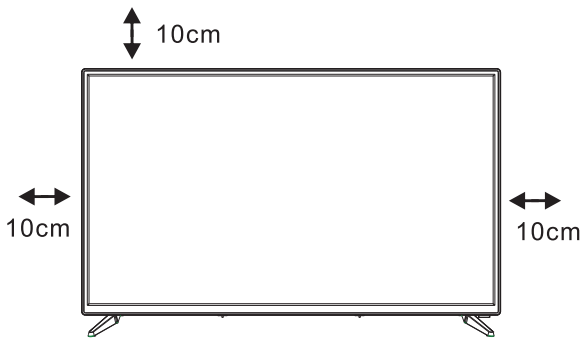

Set your TV

To put your TV in a firm place which can bear the weight of the TV.

 To avoid danger, please don't expose the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

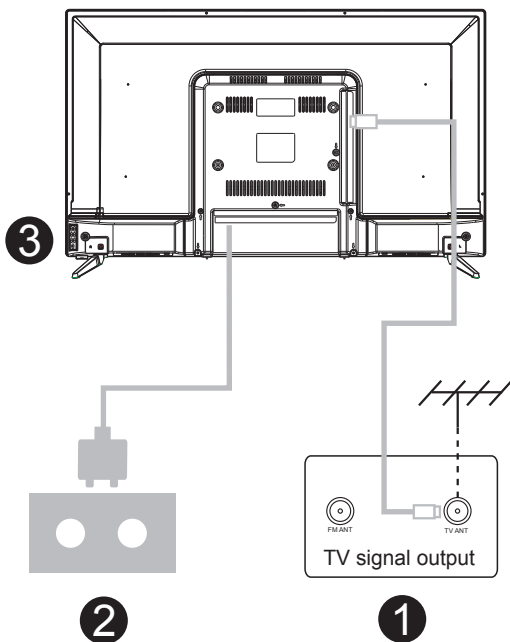

Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. To plug the power cord of TV. (AC 100-240V~ 50/60Hz).

Turn on TV

3. Press the power button of the TV the indication light will turn to green. if it is on standby mode (the light is red), press the power button on the remote control to turn on the TV.

Note:

 
Picture for reference purposes only.

TV Stand Installation Instructions


Stand Installation Guide

The TV is packaged with the TV stand separated from the cabinet. To setup the TV table stand, please carry out the installation according to the instructions below.

1. The panel can be scratched easily, so please:
Place a soft cloth on the table and place the TV face down on the cloth.
Note: Always unplug the AC cord first when installing/removing the stand.
2. Take the base. Please align the screw holes of the base and the TV, and then insert the screws into the holes on the base and tighten them.
Note: To ensure that the TV is stable, please lock all screws.
The stand of some TV models is designed with snap-in type, easily installed by snapping into stand groove, instead of screw.

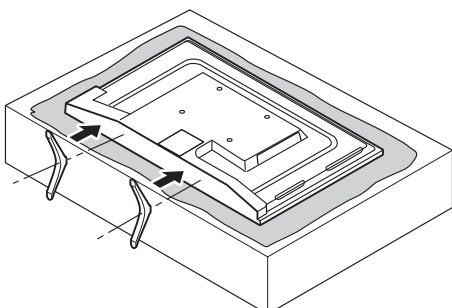

Please take note of the base direction:

 


The bottom view of the TV
(Front cabinet faces down)

 
(The illustration is for reference only, Please prevail in kind)

Basic Operations

Turning On and Off

Connect the AC cord to power the TV. At this time the TV will enter standby mode and power indicator will turn red. Use Power button() on the side panel of TV or on the remote control to turn on the TV. After switching off the TV for 5 seconds, you can turn on TV again.

Select input source

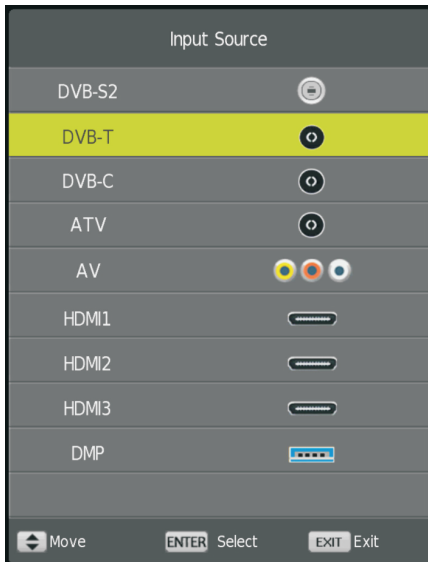

Press **INPUT** button to display the input source list;
Press **▲/▼** button to select the input source you want to watch;
Press **OK** button to enter the input source;

Adjust the OSD Screen

 
- Press **MENU** button to display the MAIN OSD MENU;
- Press **◀/▶** button to select the **MENU** you want;
- Press **OK** button to enter the sub menu, and press **MENU** button to return back to the previous menu.
- Press **▲/▼** button to select the option and then press **OK** button to enter the submenu, press **◀/▶** button to adjust the value or enter the submenu to set the function.

You can press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

Main Menu Operation

Channel Menu

Press **MENU** button to display the main menu.
Press **◀/▶** button to select **CHANNEL** in the main menu.

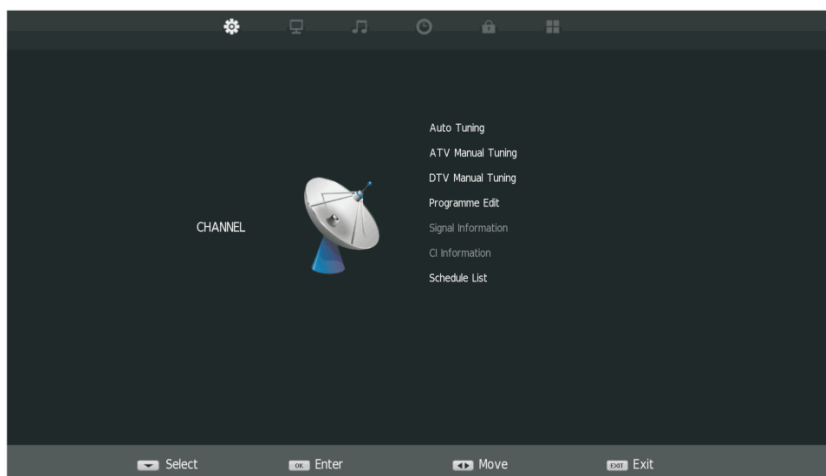


1. Press **▼ / ▲** button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Main Menu Operation

Picture Menu

 
Press MENU button to display the main menu.
Press◀/▶button to select PICTURE in the main menu.

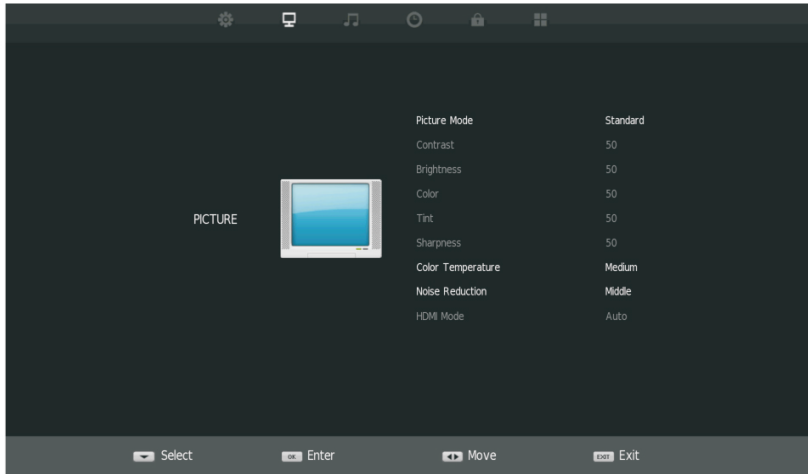

1. Press▼ / ▲ button to select the option that you want to adjust in the PICTURE menu.
2. Press OK button to adjust.
3. After finishing your adjustment, Press MENU button to save and return back to the previous menu.

Sound Menu

 Press MENU button to display the main menu.
Press◀/▶button to select SOUND in the main menu.

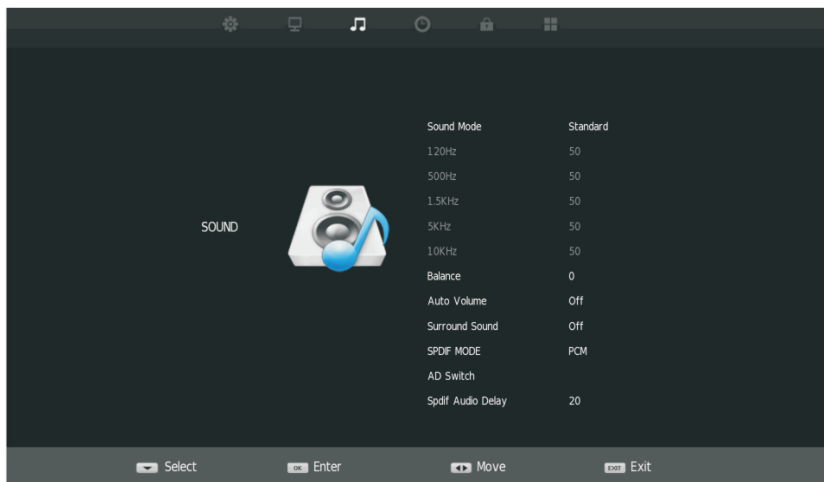


1. Press▼ / ▲ button to select the option that you want to adjust in the SOUND menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

Main Menu Operation

Time Menu

Press MENU button to display the main menu.

 Press ◀ / ▶ button to select TIME in the main menu.

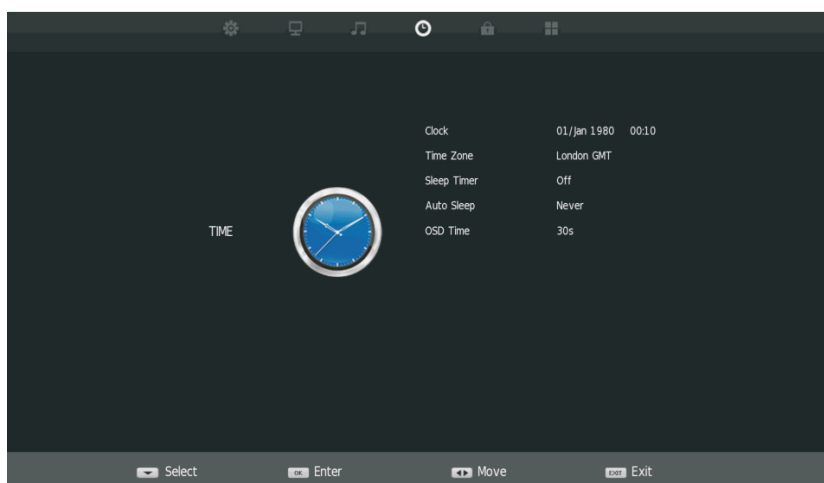


1. Press ▼ / ▲ button to select the option that you want to adjust in the TIME menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

Lock Menu

Press MENU button to display the main menu.

 Press ◀ / ▶ button to select Lock in the main menu.

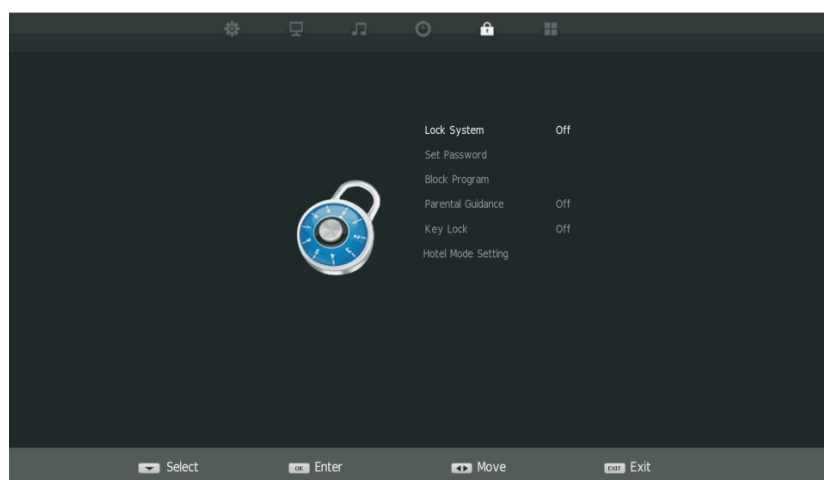


1. Press ▼ / ▲ button to select the option that you want to adjust in the LOCK SYSTEM menu.
2. Press Enter/◀ / ▶ button to adjust.
3. After finishing your adjustment, Press MENU button to return back to the previous menu

Main Menu Operation

Setup Menu

 Press **MENU** button to display the main menu.
Press **Left/Right** button to select **SETUP** in the main menu.

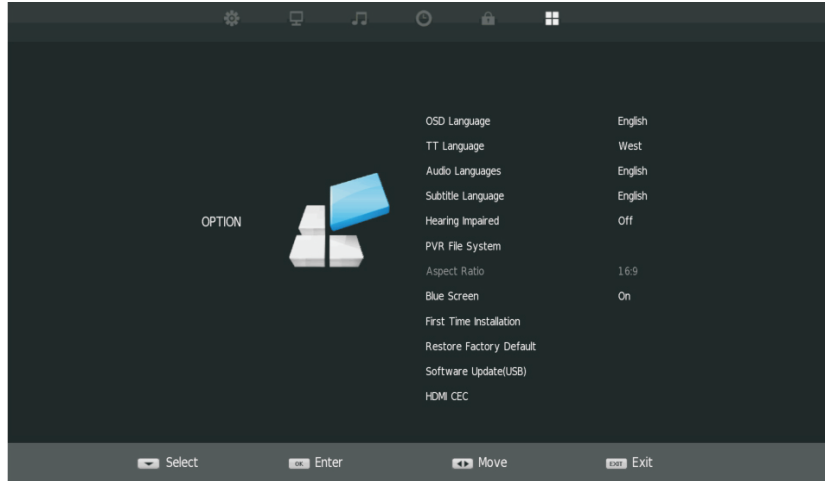

1. Press **Down/Up** button to select the option that you want to adjust in the **SETUP** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Media OPERATION

Note: Before operating **Media** menu, Plug in USB device, then press **Source** button to set the Input Source to **Media** .
Press **Down/Up** button to select **Media** in the **Source** menu, then press **Enter** button to enter.



Press **Left/Right** button to select the option you want to adjust in the main **Media** menu, then press **Enter** button to enter.

Remote Controller

POWER

Set your TV to power on or standby mode.

MUTE

Press to mute the sound. Press again or press VOL+ to unmute.

NUMBER BUTTONS

Press 0-9 to select a TV channel directly when you are watching TV. The channel change after 2 seconds. Applicable for entering page number in teletext mode and so on.

MTS : Press to search the NICAM modes.

MENU

Allows you to navigate the on-screen menus.

SOURCE

Open the main menu, press to list the sources.

THUMBSTICK (▲/▼/◀/▶/ENTRE)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

DISPLAY

Press to display the source and channel's information.

EXIT

Exit from the menu or sub-menu and cancel the function in progress (if applicable).

TV/RADIO : When watching channel, allows you to switch between TV and Radio modes.

GUIDE : Launches the EPG (Electronic Program Guide). ◀◀: Fast reverse in PVR or Media Player mode.

CANCEL : When a page is selected in the mode of text, it may take some time before it becomes available, pressing the CANCEL key will return to the TV mode. When the required page is found, the page number will appear at the top of the TV picture, press the CANCEL key to return to the mode of text for you to browse this page. ◀◀: Previous chapter in PVR or Media Player mode.

 
INDEX : Request the Index page in Teletext mode.

■ : Exit the playing function in PVR or Media Player mode.

SIZE : Change the size of display in Teletext mode.

REVEAL : Reveal or Hide the hidden words.

COLOR BUTTONS : Teletext switch of the analog parts, the items selection in the menu of the digital parts and the practice of the MHEG5 in the DVB menu.

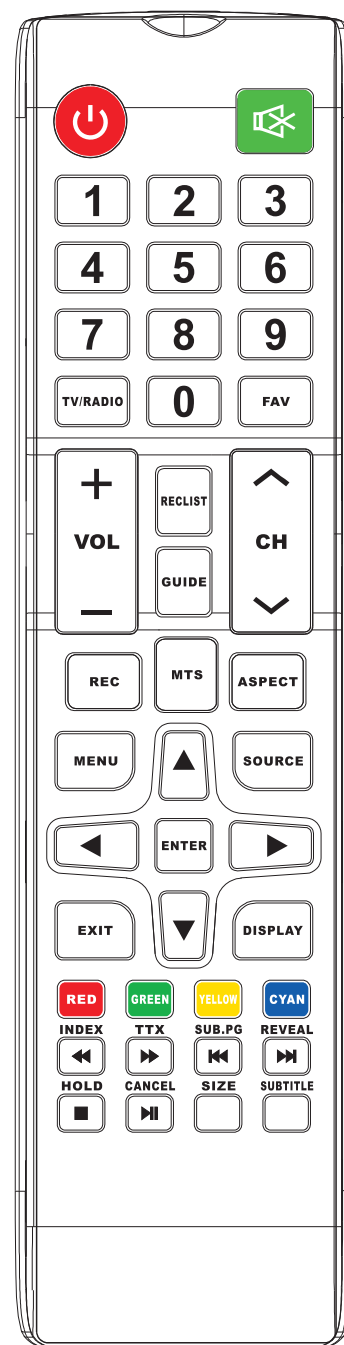

CH+/CH- : Press to scan through channels.

FAV : press to open the favorite list.

then you can select the favorite channel.

ASPECT : Select picture scale.

▶▶ : fast forward in PVR or Media Player mode.

SUB . PG : Press to access sub page.

▶▶ : Next chapter in PVR or Media Player mode.

SUBTITLE : To show and set the language of current DTV.

HOLD : HOLD On or Off for current page display.

TTX : Switch the teletext on and off.

REC LIST : Show the recorded list.

REC : Record begin in PVR mode.

Battery Installation:

Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Slide the lid until you hear it click into place.

Using the Remote Control:

Unless stated, otherwise, the remote control can operate all the features of the TV.

Always point the remote control directly at the remote sensor in front of the TV.

Help

| | |
|--|--|
| No power | <ul style="list-style-type: none"> • Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on. |
| Signal not received properly | <ul style="list-style-type: none"> • Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation, or adjust the direction of the external antenna. • If you use an indoor antenna, under certain circumstances signal reception may be more difficult. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna. |
| No picture | <ul style="list-style-type: none"> • Check if the antenna at the back of the TV is connected properly. • View other channels to see if the problem still occurs. |
| Video appears with no audio | <ul style="list-style-type: none"> • Try increasing the volume. • Check if the TV's sound is on mute or not. |
| Audio is present, but video does not appear or is discolored | <ul style="list-style-type: none"> • Try adjusting the contrast and brightness. |
| Static noise affects video and audio quality | <ul style="list-style-type: none"> • Check if the antenna at the back of the TV is connected properly. |
| Broken lines on screen | <ul style="list-style-type: none"> • Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off. |
| Remote doesn't work | <ul style="list-style-type: none"> • Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct, or try using new batteries with the remote control. • The TV will go into Standby mode if it receives no response in a few minutes. |
| No video (PC mode) | <ul style="list-style-type: none"> • Please check if the cable is connected to the VGA port correctly, or if the cable is bent in some places. |
| Vertical line blinking (PC Mode) | <ul style="list-style-type: none"> • Enter the main menu, and adjust the vertical placement to eliminate the vertical line. |
| Horizontal tearing (PC Mode) | <ul style="list-style-type: none"> • Adjust the horizontal placement of the screen to clear any horizontal lines. |
| Screen is too bright or dark (PC Mode) | <ul style="list-style-type: none"> • Adjust the brightness or contrast in the main menu. |
| No response from the PC | <ul style="list-style-type: none"> • Check if the PC's display resolution is set to a compatible resolution for the TV. |
| Lines appearing when a device is connected to the RCA port | <ul style="list-style-type: none"> • Make sure you are using a cable of good quality. |
| Problems are unresolved | <ul style="list-style-type: none"> • Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact the service center. |

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

Specifications

| Screen Size | power Consumption | Main accessories |
|-------------|---------------------|--|
| 19" | 36W | User's manual x1 Remote controller x1 Power cord x1 AAA Batteries x2 (Optional) |
| 20" | 36W | |
| 22" | 36W | |
| 24" | 31W/36W | |
| 28" | 31W/36W | |
| 32" | 32W/56W | |
| 39"/40" | 70W/76W | |
| 42" | 65W/67W/70W | |
| 43" | 70W/80W | |
| 50" | 100W/108W/135W | |
| 55" | 100W/135W/140W/160W | |
| 65" | 159W/165W/195W | |

★ LIFE TIME : 60,000 Hrs



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro logic, and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



HDMI[®]
HIGH DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model: 50DLE882

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR



FOX[®]
be smart

FOX LED televizori
- stvoreni za uživanje.

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SADRŽAJ

| | |
|---|----|
| Bezbednosne informacije | 2 |
| Bezbednosna upozorenja | 2 |
| Važne bezbednosne instrukcije | 3 |
| Tasteri TV uređaja I intefejs | 4 |
| Dijagram za povezivanje eksternih uređaja | 4 |
| Instaliranje I povezivanje TV uređaja..... | 5 |
| Instalacija postolja TV uređaja | 5 |
| Osnovna podešavanja | 6 |
| Podešavanje glavnog menija | 6 |
| Daljinski upravljač | 10 |
| Pomoć | 11 |
| Specifikacije | 12 |

Bezbednosne informacije



OPREZ

OPASNOST OD ELEKTRIČNOG UDARA, NE OTVARAJ



Upozorenje: da bi sprečili rizik od strujnog udara nemojte ga otvarati. U slučaju potrebe, obratite se kvalifikovanom servisnom licu.



Simbol munje sa strelicom u jednakostraničnom trouglu upozorava korisnika na prisustvo opasnog neizolovanog napona unutar uređaja koja može biti dovoljna da izazove strujni udar.



Simbol sa znakom uzvika u jednakostraničnom trouglu upozorava korisnika da pogleda instrukcije za korišćenje i održavanje (popravku) u dokumentaciji isporučenoj sa uređajem.

UPOZORENJE: KAKO BI SMANJILI RIZIK OD PALJEVINE ILI ELEKTRIČNOG UDARA, NEMOJTE IZLAGATI UREĐAJ KIŠI ILI VLAZI.

OPREZ: PROMENE ILI MODIFIKACJE KOJE NIJE ODOBRILA STRANA VEZANA ZA FCC ZAKON MOGU SPREČITI KORISNIKA DA RUKUJE OVIM UREĐAJEM.

Bezbednosna upozorenja

Pre korišćenja uređaja molimo Vas da pročitate uputstvo

POSTAVLJANJE

- Ne postavljajte uređaj na nestabilnu površinu, postolje, tronožac, sto ili policu
- Ne izlažite uređaj direktno sunčevom svetlu ili drugim izvorima toplote
- Ne ostavljajte tečnost u blizini ili na uređaju
- Ne prosipajte bilo kakvu vrstu tečnosti na uređaj
- Ne postavljajte uređaj u blizini predmeta koji emituju magnetno polje
- Ne postavljajte teške predmete na uređaj

TEMPERATURA

- Ne postavljajte uređaj pored ili na radiator ili grejalicu
- Ukoliko se uređaj premesti sa hladnog na toplo mesto isključite naponski kabl na minimumu 2 sata da bi vlaga unutar uređaja mogla da se osuši u potpunosti

VLAGA

- Ne izlažite uređaj kiši, vlazi ili blizini vode
- Prostorija u kojoj se nalazi uređaj mora biti suva

VENTILACIJA

- Držite otvore za ventilaciju otvorenim

UPOZORENJE (odnosi se samo na uređaje koji imaju više od 7kg)


- Nikada ne postavljajte uređaj na nestabilno postolje, TV uređaj može da padne i prouzrokuje ozbiljne telesne povrede ili čak smrt.
- Mnoge povrede, posebno kod dece, mogu se izbeći ako preduzmete sledeće mere:
- Korišćenjem police I postolja koje Vam je preporučio proizvođač
- Korišćenjem isključivo nameštaja koji može bezbedno da drži TV uređaj
- Potrudite se da TV uređaj ne viří sa postolja na kome se nalazi
- Ne postavljajte TV uređaj na visoke komade nameštaja (na primer police ili vitrine), bez da ste obezbedili odgovarajuće postolje za uređaj I police.
- Ne postavljajte tkaninu ili materijal između uređaja I nameštaja na kome se nalazi
- Upozorite decu o opasnosti penjanja na nameštaj kako bi dohvatili TV uređaj.
- Ukoliko premeštate uređaj na drugo mesto, pridržavajte se pomenutih uputstava.



Važne mere bezbednosti

1. Pročitajte ovo uputstvo.
2. Čuvajte ovo uputstvo
3. Obratite pažnju na sva upozorenja
4. Pratite sva uputstva
5. Nemojte koristiti aparat u blizini vode
6. Čistite uređaj samo suvom krpom
7. Ne blokirajte otvore za ventilaciju. Instalirajte TV prema uputstvima proizvođača.
8. Ne postavljajte uređaj u blizini izvora toplote kao što su radijatori, grejalice, šporeti, I slični aparati
9. Nemojte oštetiti priključni kabl. Ukoliko priključni kabl ne odgovara Vašoj utičnici, potražite savet električara.
10. Naponski kabl ne sme biti uklješten ili pritisnut, posebno oko utičnice ili mestu gde kabl izlazi iz aparata.
11. Koristiti samo priložene dodatke preporučene od strane proizvođača.
12. Koristite nosač za montiranje na zid ili stalak od proverenih proizvođača. Ukoliko koristite pokretni stalak za postavljanje TV uređaja pazite da ga ne prevrnete ukoliko okrećete stalak.




13. Isključite TV uređaj tokom grmljavine ili kada ga ne koristite duži vremenski period
14. Kako bi smanjili rizik od paljevine ili električnog udara, nemojte izlagati uređaj kiši ili vlazi.
15. Glavni prekidač se koristi I za isključivanje uređaja iz naponske mreže, isključivanje uređaja bi trebalo da bude lako I dostupno.
16. Utičnica treba da bude u blizini uređaja I lako dostupna.
17. Ovaj uređaj nije namenjen za ugradnju (u delove nameštaja ili pregradne zidove koji ne obezbeđuju dovoljnu ventilaciju), osim ukoliko to nije navedeno od strane proizvođača.
18. Aparat mora biti zaštićen od prskanja, a predmeti ispunjeni tečnošću, kao što su vaze, ne smeju se stavljati na uređaj.
19. Ne postavljajte nikakve predmete na uređaj (predmete ispunjene tečnošću, upaljene sveće)
20. Montiranje uređaja na zid ili plafon - Uređaj mora da bude instaliran na zid ili plafon u skladu sa uputstvima datim od strane proizvođača.
21.  Nikada ne postavljajte TV uređaj, daljinski upravljač ili baterije u blizini izvora toplote ili direktno izložene sunčevoj svetlosti. Kako bi sprečili širenje vatre, držite sveće ili druge goreće predmete dalje od TV uređaja, daljinskog upravljača ili baterija.
22. Uređaj USB je preporučljivo koristiti po standardu 0.5.
Ovo servisno uputstvo sastavljeno je od strane kvalifikovanih servisera. Kako bi izbegli rizik od električnog udara nemojte sami pokušavati da popravite uređaj već se obratite kvalifikovanom licu.
23. Baterije ne smeju biti izložene izvorima toplote kao što su sunce, vatra ili slično.
24. Ova oprema je klase II, I dizajnirana je tako da ne zahteva sigurnosni priključak za uzemljenje.
25. Maksimalna temperatura na kojoj se uređaj može koristiti je 45 stepeni, a najviša nadmorska visina 2000 metara.





Tasteri TV uređaja i interfejs


TV Tasteri

Napomena: Šema je data samo kao primer, pozicija tastera može se razlikovati kod različitih modela.


| | |
|---|--|
|  | UKLJUČIVANJE / ISKLJUČIVANJE uređaja. |
| SOURCE | Izbor ulaza eksternog signala uređaja |
| MENU | Prikaz glavnog MENIJA i potvrda selektovanih stavki unutar MENIJA. |
| CH+/- | Biranje kanala. |
| VOL+/- | Podlašavanje jačine zvuka. |

Dijagram eksternih uređaja za povezivanje

| | | | |
|---|--|---|---|
|  | AV ulaz Eksterni ulaz za AV signal |  | Ulaz za slušalice Kada su slušalice uključene, zvučnici se automatski isključuju |
|  | CI čitač kartica Čitač kartica CI zahteva CAM. Služi za kablovsku karticu. |  | USB ulaz Povežite USB uređaj za reprodukciju fajlova ili čuvanje sadržaja preko PVR funkcije |
|  | ANT 75 Ulaz za povezivanje antene/kabla (75/VHF/UHF) |  | OPTIČKI ulaz Poveži SPDIF prijemnik |
|  | HDMI ulaz Digitalni ulaz iz HDMI konektora | | |

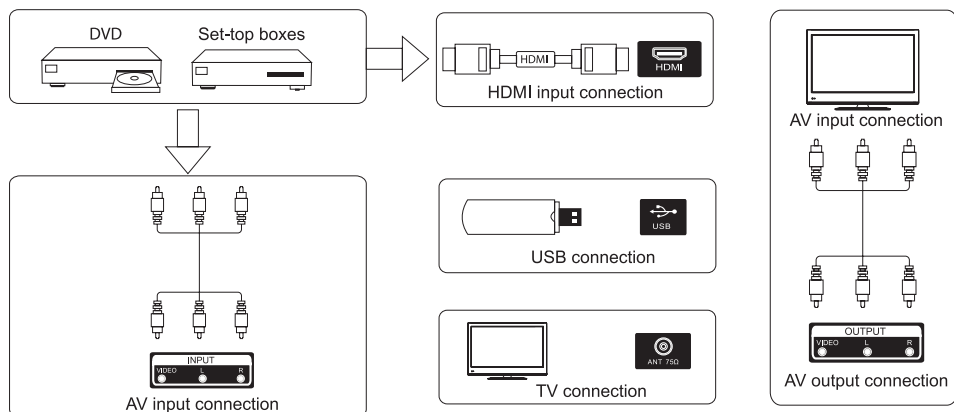 


Instalacija I povezivanje TV uređaja

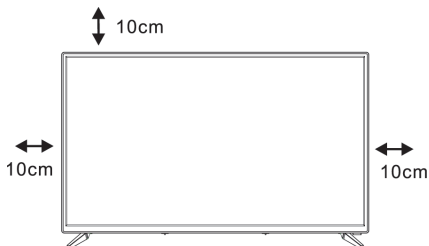 

Podesite Vaš TV uređaj

TV uređaj postavite na stabilno mesto koje može da izdrži njegovu težinu.

 Da bi izbegli moguće opasnosti, ne postavljajte TV uređaj u blizini vode ili izvora toplote (kao što je lampa, sveća, grejalica), I ne blokirajte otvore za ventilaciju sa zadnje strane TV uređaja.

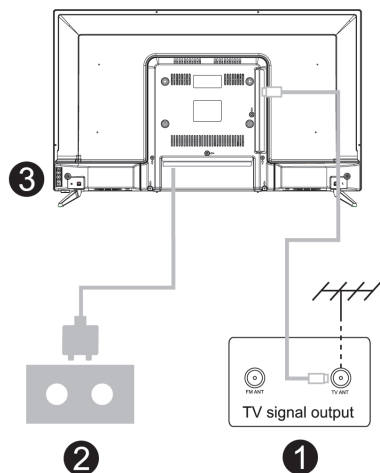

Povezivanje antene I napajanja

1. Povežite kabl antene sa utičnicom na zadnjoj strani TV-a.
2. Uključite naponski kabl u TV uređaj (AC 100-240V~ 50/60Hz).

Uključite TV

3. Pritisnite taster za uključivanje uređaja I lampica će zasvetleti zeleno. Ukoliko je uređaj u stanju mirovanja (lampica je crvene boje), pritisnite dugme za uključivanje na daljinskom upravljaču kako biste uključili TV uređaj.

 
Napomena:
Slika služi samo kao primer.

Instalacija postolja TV uređaja

Upustvo za instalaciju postolja.

TV uređaj je spakovan odvojeno od postolja. Kako bi postavili Tv uređaj pravilno, molim da se pridržavate sledećih uputstava za montiranje postolja.

1. Ekran se može lako izgrebati tako da:
Postavite mekanu tkaninu na sto I stavite uređaj ekranom na dole.
Napomena: Uvek prvo isključite naponski kabl kada instalirate/pomerate postolje.
2. Uzmite postolje. Upotrebite šrafčiger kako bi pričvrstili šrafove za postolje.
Napomena; kako bi bili sigurni da je Tv uređaj stabilno postavljen, zategnite sve šrafove.
Za postolje pojedinih modela Vam nisu potrebni šrafovi, već postoji klik-klak mehanizam.

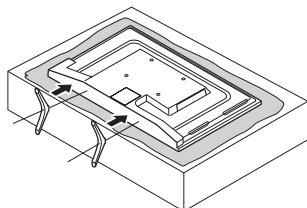

Please take note of the base direction:




The bottom view of the TV
(Front cabinet faces down)

 
(The illustration is for reference only, Please prevail in kind)



Osnovna podešavanja

Uključivanje I isključivanje

Povežite AC kabl kako bi uključili TV uređaj. U tom trenutku TV će biti u stanju mirovanja I indikator lampica će svetleti crveno. Koristite taster za uključivanje  sa strane TV uređaja ili na daljinskom upravljaču kako bi uključili TV. Nakon gašenja TV uređaja na 5 sekundi, moći ćete ponovo da uključite TV.

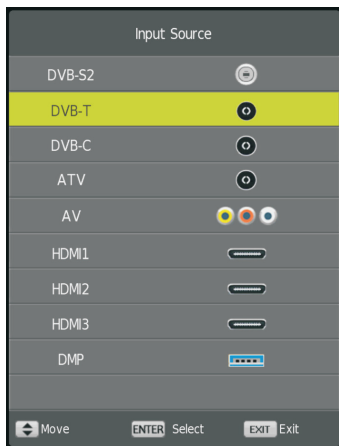

Pritisnite **INPUT** taster kako bi prikazali **INPUT** listu priključaka. Pritisnite **◀/▶** taster da bi izabrali priključak koji Vam je potreban. Pritisnite **ENTER** kako bi izabrali priključak.

 
Podesite jezik na ekranu.

Pritisnite taster **MENI** radi prikazivanja glavnog menija jezika. Pritisnite taster **OK** kako bi ušli u pod meni, I pritisnite taster **MENI**, kako bi se vratili na prethodni meni. Pritisnite **◀/▶** taster kako bi izabrali opciju a zatim pritisnite **OK** kako bi ušli u podmeni, pritisnite **◀/▶** taster da podesite vrednosti ili uđite u podmeni da podesite funkcije. Pritisnite taster **MENI** kako bi sačuvali podešavanja I vratili se na glavni meni, ili pritisnite **EXIT** za izlaz.

Podešavanje glavnog menija

Meni kanala

Pritisnite **MENU** taster za prikaz glavnog menija
Pritisnite **◀/▶** Taster kao bi izabrali kanale u glavnom meniju

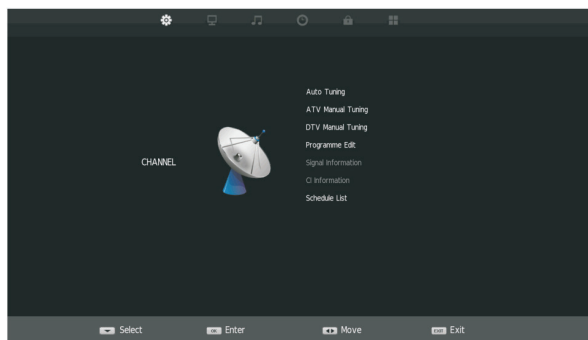


1. Pritisnite **▼/▲** tastere kako bi izabrali opcije koje želite da prilagodite u meniju kanala.
2. Pritisnite **ENTER** taster za podešavanje
3. Nakon završetka podešavanja, pritisnite **ENTER** taster kako bi sačuvali podešavanja I vratili se na prethodni meni.

Podešavanja glavnog menija

Meni slike

Pritisnite **MENU** taster za prikaz glavnog menija

 Pritisnite **◀/▶** taster za odabir **SLIKE** u glavnom meniju.

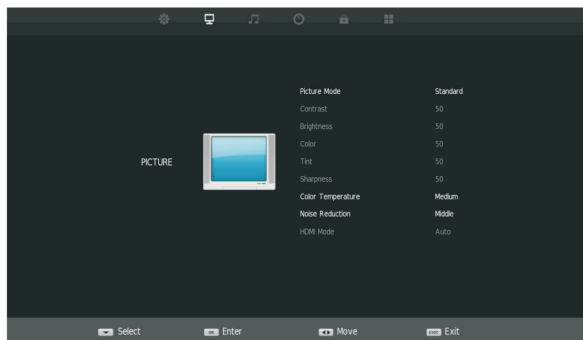


1. Pritisnite **▼/▲** taster kako bi izabrali opciju koju želite da podesite u meniju **SLIKE**
2. Pritisnite **OK** taster za podešavanje
3. Nakon završetka podešavanja, pritisnite **MENU** taster kako bi sačuvali podešavanja I vratili se na prethodni meni

Meni zvuka

Pritisnite **MENU** taster za prikaz glavnog menija

 Pritisnite **◀/▶** taster kako bi izabrali **ZVUK** u meniju

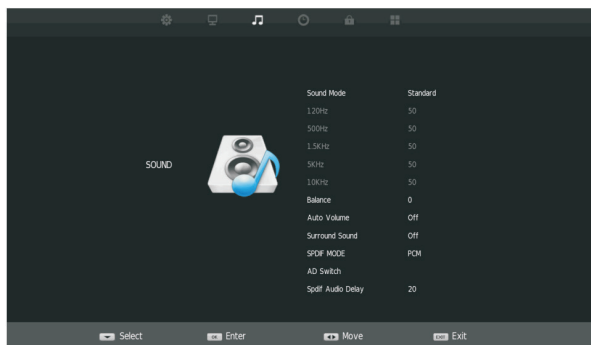


1. Pritisnite **▼/▲** taster kako bi izabrali opcije koje želite da podesite u meniju **ZVUKA**
2. Pritisnite **ENTER** taster za podešavanje
3. Nakon završetka podešavanja, pritisnite **ENTER** taster kako bi sačuvali podešavanja I vratili se na prethodni meni

Podešavanja glavnog menija

Podešavanje Vremena

Pritisnite **MENU** taster za prikaz glavnog menija

 Pritisnite ◀/▶ taster kako bi izabrali **VREME** u glavnom meniju.

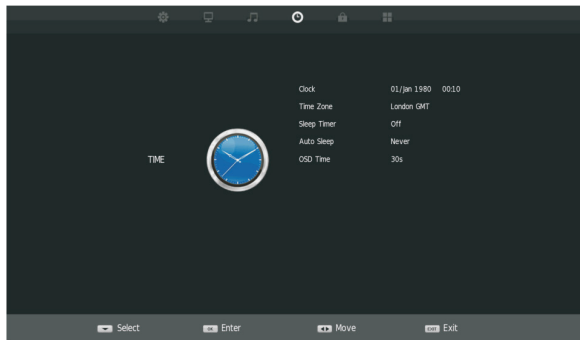


1. Pritisnite ▼/▲ taster kako bi izabrali opciju koju želite da podesite u meniju **VREME**
2. Pritisnite **ENTER** taster za podešavanje.
3. Nakon završetka podešavanja, pritisnite **ENTER** taster kako bi sačuvali podešavanja I vratili se na prethodni meni

Zaključavanje Menija

Pritisnite **MENI** taster za prikaz glavnog menija

 Pritisnite ◀/▶ kako bi izabrali **ZAKLJUČAVANJE** u glavnom meniju.

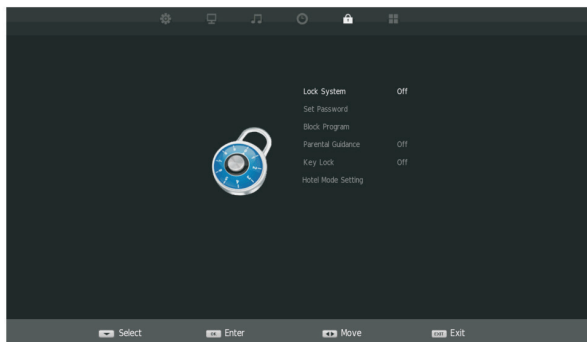


1. Pritisnite ▼/▲ taster kako bi izabrali opciju koju želite da podesite u sistemu za zaključavanje
2. Pritisnite **ENTER/ ◀/▶** taster za podešavanje
3. Nakon završetka podešavanja, pritisnite **MENI** taster kako bi sačuvali podešavanja I vratili se na prethodni meni

Podešavanja glavnog menija

Podešavanja

Pritisnite **MENI** taster za prikaz glavnog menija

 Pritisnite ◀/▶ taster kako bi izabrali **PODEŠAVANJA** u glavnom meniju.

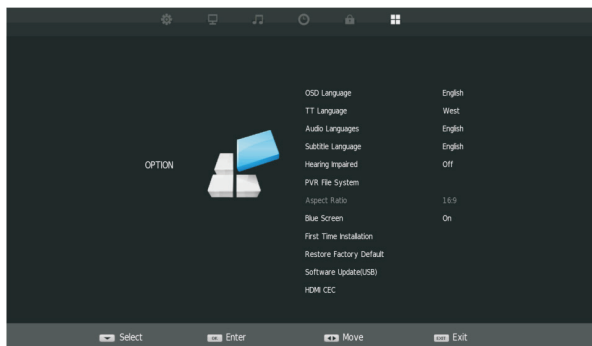

1. Pritisnite ▼/▲ taster kako bi izabrali opciju koju želite da podesite u meniju
2. Pritisnite **ENTER** taster za podešavanja.
3. Nakon završetka podešavanja, pritisnite **ENTER** taster kako bi sačuvali podešavanja I vratili se na prethodni meni

Upravljanje Medijima

Napomena: Da bi upravljali Medijima potrebno je da uključite **USB** uređaj, a zatim pritisnete **SOURCE** taster kako bi izabrali Izvor Medija.

Pritisnite ▼/▲ taster da izaberete **MEDIA** taster kako bi izabrali medij, a zatim pritisnite **ENTER** za ulaz u meni.



Pritisnite ◀/▶ taster da izaberete, zatim **MENU** taster da odaberete opciju koju želite da podesite u mediju, a potom pritisnite **ENTER** taster za ulazak.

Daljinski upravljač

UKLJUČIVANJE

Uključivanje TV uređaja ili režim mirovanja

STOPIRANJE ZVUKA

Pritisnite kako bi stopirali zvuk. Pritisnite ponovo kako bi uključili zvuk, ili pritisnite taster VOL+

TASTERI SA BROJEVIMA

Pritisnite 0-9 kako bi direktno izabrali kanal . kanal će se promeniti nakon 2 sekunde. Takođe se može koristiti za kucanje strane prilikom pregleda teleteksta.

MTS: Pritisnite kako bi pretražili NICAM mod.

MENI

Omogućava vam upravljanje Menijem na ekranu

SOURCE

Otvorite glavni meni, pritisnite kako bi izabrali listu izvora

THUMBSTICK (▲/▼/◀/▶/ENTRE)

Omogućava vam da upravljate menijem na ekranu i podesite parameter kako želite

DISPLAY

Pritisnite kako bi videli spisak priključaka i kanala

EXIT

Izlaz iz menija ili pod-menija i poništavanje funkcija u procesu.

TV/RADIO: Omogućava vam prebacivanje sa TV na RADIO mod u toku gledanja tv kanala

GUIDE: Pokreće EPG (elektronski program vodič) ◀◀ brzo prebacivanje na PVR ili Media Plejer mod

CANCEL: Kada ste izabrali stranu u tekstualnom režimu kojoj treba više vremena da se otvori, pritiskom na CANCEL taster vratite se na TV mod. Kada tražena strana bude pronađena pojaviće se numerisana u gornjem uglu ekrana. Pritisnite **CANCEL** kako bi se vratili na stranicu koju želite da otvorite. ◀◀ prethodno poglavlje u PVR ili Media plejer modu.

INDEX: Zatraži Index stranicu u Teletext modu.

■ isključi reprodukciju u PVR ili media plejer modu.

SIZE: Promenite veličinu prikaza slike u Teletext modu

REVEAL: Otkrij ili sakrij skrivene reci

COLOR BUTTONS: Uključuju Teletext u analognom modu, služe za odabir u digitalnom modu, kao i za MHEG5 u DVB meniju.

CH+/CH- Pritisnite za odabir narednog kanala

FAV: Pritisnite da otvorite listu omiljenih kanala

ASPECT: Promena formata slike

▶▶ Brzo premotavanje u PVR ili Media plejer modu

SUB.PG: Pritisnite kako bi pristupili pod-stranici

▶▶ Sledeće poglavlje u PVR ili Media plejer modu

SUBTITLE: Podešavanje jezika u DTV meniju

HOLD: Uključenje i isključenje prikaza trenutne stranice

TTX: Uključivanje i isključivanje Teletext moda

REC LIST: Prikazivanje liste snimljenog programa

 
REC: Započinje snimanje u PVR modu

Instaliranje baterija:

Otvorite poklopac odeljka za baterije kliznim pokretom na dole. Stavite dve AAA baterije na mesto predviđeno za njih tako da se polaritet baterija podudara sa polaritetom unutar odeljka. Nemojte koristiti zajedno stare i nove baterije, kao ni baterije različitih proizvođača. Vratite poklopac na mesto.

Korišćenje daljinskog upravljača:

Ukoliko nije u stanju mirovanja, daljinski upravljačem možete upravljati svim funkcijama TV uređaja. Uvek držite daljinski upravljač uperen direktno u TV uređaj.

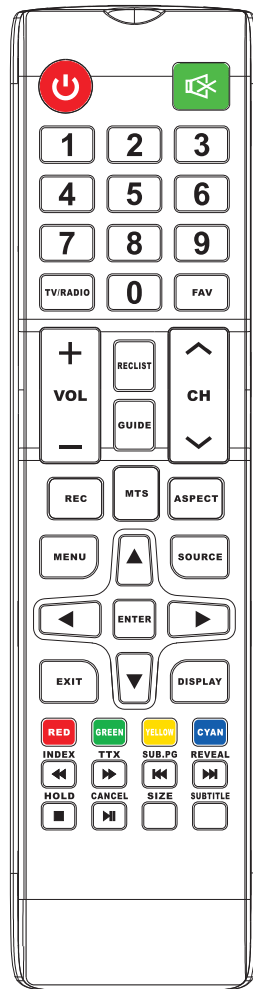

Pomoć

| | |
|--|---|
| Nema struje | <ul style="list-style-type: none"> • Proverite da li je naponski kabl uključen u struju, ukoliko jeste a struje I dalje nema, isključite ga I nakon 60 sekundi uključite ponovo. |
| Signal nije pravilno primljen | <ul style="list-style-type: none"> • U slučaju da se u blizini nalazi visoka zgrada ili planina moguće je da se prikaže dvostruka ili fantomska slika. Sliku možete podesiti ručno: sledite uputstva kablovskog operatera ili promenite položaj spoljašnje antene. • Ukoliko koristite kućnu antenu u pojedinim okolnostima prijem signala može biti otežan. Podesite položaj antene radi boljeg prijema. Ukoliko ne uspete, prebacite signal na spoljašnju antenu. |
| Nema slike | <ul style="list-style-type: none"> • Proverite da li je antena sa zadnje strane TV uređaja ispravno povezana. • Probajte da izaberete drugi kanal kako bi proverili da li je problem u nečemu drugom. |
| Slika se pojavljuje, ali nema zvuka | <ul style="list-style-type: none"> • Pokušajte da povećate jačinu zvuka. • Proverite da li je Tv uređaj u stanju pripravnosti. |
| Slika se ne pojavljuje ili ima smetnje, zvuk je dobar | <ul style="list-style-type: none"> • Pokušajte da podesite contrast I svetlinu |
| Buka utiče na kvalitet slike I zvuka | <ul style="list-style-type: none"> • Proverite da li je antena sa zadnje strane TV uređaja ispravno povezana |
| Smetnje na ekranu | <ul style="list-style-type: none"> • Električni uređaji poput fena za kosu, usisivača itd mogu uticati na rad TV uređaja. Isključite ove uređaje. |
| TV uređaj ne reaguje na daljinski upravljač | <ul style="list-style-type: none"> • Postarajte se da sklonite plastičnu kesu u kojoj dođe daljinski upravljač. Nemojte koristiti daljinski upravljač daleko od TV uređaja. Proverite da li su baterije pravilno postavljene ili pokušajte da stavite nove. • TV uređaj će se prebaciti u stanje mirovanja ukoliko ne reagujete nekoliko minuta. |
| Nema slike (PC režim) | <ul style="list-style-type: none"> • Proverite da li je kabl pravilno povezan sa VGA priključkom , ili da li je presavijen na nekom mestu. |
| Vertikalne linije koje trepere (PC Režim) | <ul style="list-style-type: none"> • Uđite u Glavni Meni I podesite vertikalne linije |
| Horizontalne smetnje (PC Režim) | <ul style="list-style-type: none"> • Podesite horizontaln ekrana kako bi uklonili horizontalne linije. |
| Ekran je previše svetao ili taman (PC Režim) | <ul style="list-style-type: none"> • Podesite svetlinu ili contrast u glavnom |
| Funkcija PC režim ne reaguje | <ul style="list-style-type: none"> • Proverite da li je rezolucija računara kompatibilna sa rezolucijom TV |
| Prilikom povezivanja preko RCA priključka pojavljuju se linije | <ul style="list-style-type: none"> • Koristite kablove dobrog kvaliteta |
| Problemi I dalje postoje | <ul style="list-style-type: none"> • Isključite naponski kabl I sačekajte 30 sekundi, a zatim da ponovo uključite u utičnicu. Ukoliko problem I dalje postoji, ne pokušavajte da popravite TV uređaj sami, već kontaktirajte najbliži servisni centar. |

Ne ostavljajte TV uređaj sa zamrznutom slikom, bilo da je u pitanju pauziran video, meni ekrana itd. Na duži vremenski period, jer ćete ovim oštetiti ekran I prouzrokovati gubitak slike.

Specifikacija

| Veličina ekrana | Potrošnja struje | Glavni dodaci |
|-----------------|---------------------|--|
| 19" | 36W | Uputstvo za upotrebu x1 Daljinski upravljač x1 Naponski kabl x1 AAABaterijex2 (opciono) |
| 20" | 36W | |
| 22" | 36W | |
| 24" | 31W/36W | |
| 28" | 31W/36W | |
| 32" | 32W/56W | |
| 39"/40" | 70W/76W | |
| 42" | 65W/67W/70W | |
| 43" | 70W/80W | |
| 50" | 100W/108W/135W | |
| 55" | 100W/135W/140W/160W | |
| 65" | 159W/165W/195W | |

★ LIFE TIME: 60,000 sati



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro logic, and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs